
Owner's Manual

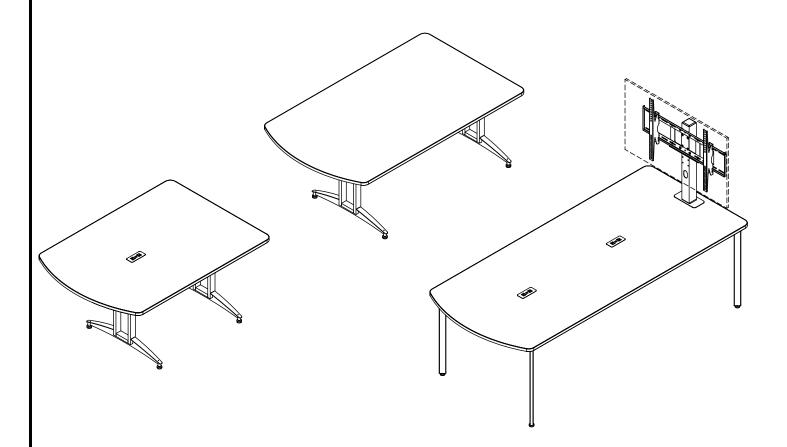

InVision Element Table[™]

37128



▲ Important ▲

Before using this product:

- Read this manual
- Comply with all safety and operating instructions
- Ensure all parts and correct quantities are included

Any parts damaged during shipment must be reported within 5 days of receipt. To report information regarding missing parts or damage, to purchase parts or accessories, or if you have any questions, please contact us.

Thank you for purchasing Spectrum products!

Spectrum Industries, Inc 925 First Avenue, Chippewa Falls, WI 54729 USA 800 235 1262 715 723 6750 www.spectrumfurniture.com

Important Safety and Care Instructions

- · Read this owner's manual before assembly or operation.
- · Do not allow children to move the table.
- For indoor use only. Do not install or store the table where it will be exposed to moisture.
- · Do not block the ventilation openings.
- Do not allow anyone to sit, stand, or climb on the table.
- Use a damp, soft-cloth, or sponge, with mild soap or detergent solution to clean dirty surfaces. <u>Do not use harsh solvents or abrasives.</u>
- This table is intended for institutional use. It does not have any userserviceable parts or user-maintenance requirements. If servicing is necessary, please contact Spectrum Industries for assistance.

Warning - Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

Warning - Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

General Electrical Safety:

- Keep power switches in the OFF position before plugging or unplugging from the wall outlet.
- Be sure total device / equipment load does not exceed 12-amps.
- · Do not plug power cords into an extension cord.
- Inspect power cords for damage before each use. Do not use cords that are damaged.
- Unplug power cord from electrical outlet by gripping the cord-do not unplug by pulling only on the cord.
- Do not step on, drive over, drag, or place objects on power cords.
- For added safety, plug into a grounded outlet controlled by a GFI (Ground Fault Interrupter) circuit breaker.
- Damaged electrical components can create significant hazards to users and is not covered by the warranty. Repairs should always be performed by a qualified electrician.
- Electrical devices are not toys. Children are often unaware of the hazards associated with electrical devices. This table must always be used by adults or with adult supervision.



Components


	Standard Worksurface			
	60"L x 42"W worksurface	72"L x 42"W worksurface	96"L x 42"W worksurface	
• Blank	0118512	0118518	0118549	
1 Cove cutout	0118513	0118519	0118550	
2 Cove cutouts	0118514	0118520	0118551	
Display Stand cutout	0118515	0118521	0118552	
1 Cove cutout Display Stand cutout	0118516	0118522	0118553	
2 Cove cutouts Display Stand cutout	0118517	0118548	0118554	

Note: One worksurface is included. The above information only applies to standard worksurfaces (without custom cutouts) only.



T-Leg Components

(See p.5 for assembly)

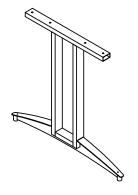

(2) T-Leg assembly

0118384 - 27"H 0118385 - 30"H 0118386 - 42"H



(4) 037779 5/16-18 Glide



(20) 026064 1/4-20 x 5/8" **PHMS**




(20) 0100167 8-32 x 1/2" PH Thread-cutting screw



(8) 041289 1/4-20 x 1-3/4" **PHMS**

Corner Post Components

(See p.6 for assembly)

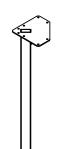

(4) Post Leg assembly

0118387 - 27"H 0118388 - 30"H



(4) 037779 5/16-18 Glide




(44) 026064 1/4-20 x 5/8" **PHMS**




(2) 0100167 8-32 x 1/2" PH Thread-cutting screw

Wire Tray Components

(See p.5 for assembly)

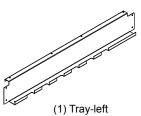

0118478 - 60"L Element 0118639 - 72"L Element 0118641 - 96"L Element

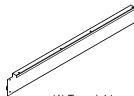


(1) Tray-right

0118477 - 60"L Element 0118638 - 72"L Element 0118640 - 96"L Element



(See p.8 for assembly)

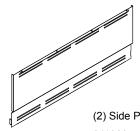

(2) Side Panel

0119837 - 60"L Element 0119574 - 72"L Element 0119600 - 96"L Element



(1) 0119571 Front upright



(1) 0119572


Rear upright



(1) 0118483 End Cap



(2) 0100167 8-32 x 1/2" PH thread-cutting screw

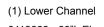

0119863 - 60"L Element 0119584 - 72"L Element 0119601 - 96"L Element



(3) 059984 2" Snap-in Grommet



026064 1/4-20 x 5/8" PHMS

(20) - 60"L Element (16) - 72"L Element (12) - 96"L Element



(12) 052605 1/4-20 x 15mm JC bolt



Phillips

Phillips screwdriver

screwdriver

or




Attach T-Legs to worksurface

1. Place the worksurface upside-down (laminate side-down) onto a flat, non-abrasive surface like another table. Figure A1.

2. Attach the two T-legs as shown with 1/4-20 x 1-3/4" PHM screws. Make sure the holes on the vertical leg tubes face inward.

Install the four glides.

Note: Start all screws by hand to prevent cross-threading.

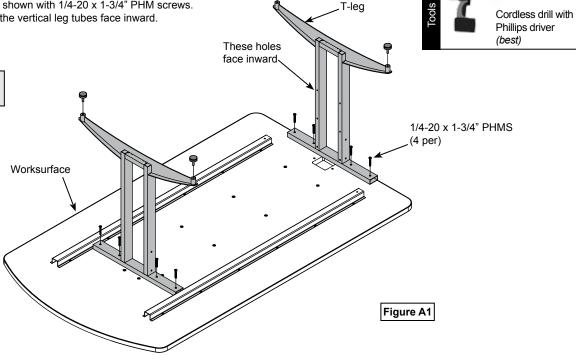


Glide

2. Attach Wire Tray to worksurface


- 1. Attach the left and right wire tray to the worksurface as shown with 1/4-20 x 5/8" PHM screws. Figure A2.
- Install the end cap with (2) 1/4-20 x 5/8" PHMS, and (2) 8-32 x 1/2" PH thread-cutting screws and tighten securely.

Note: Do not install the end cap if any power modules or devices will be installed in worksurface cutouts later. This will provide easier access during module installation.

One of the wire trays can also be left off to provide access.

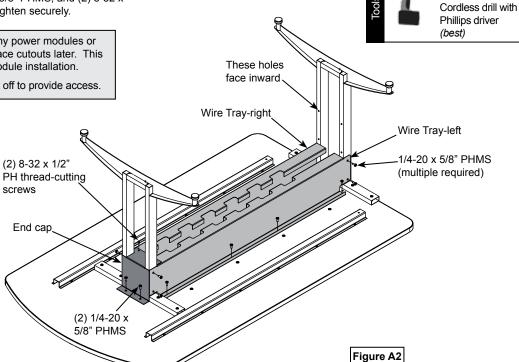



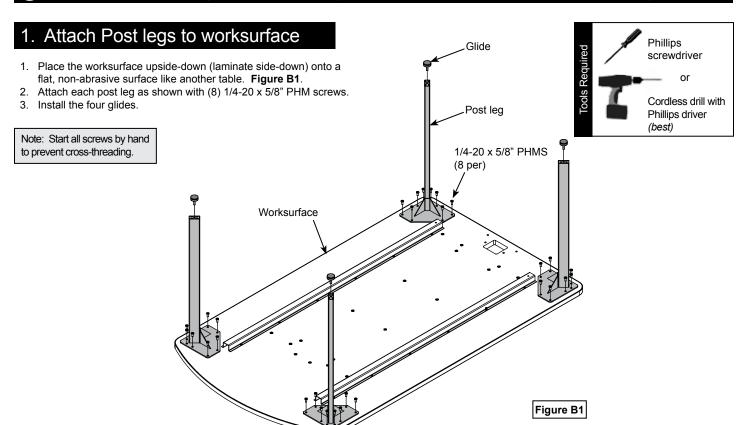

2. Attach Wire Tray to worksurface


 Attach the left and right wire tray to the worksurface as shown with 1/4-20 x 5/8" PHM screws. Figure B2.
 Install the end cap with (2) 1/4-20 x 5/8" PHMS, and (2)

Install the end cap with (2) 1/4-20 x 5/8" PHMS, and (2) 8-32 x 1/2" PH thread-cutting screws and tighten securely.


Δ

Note: Do not install the end cap if any power modules or devices will be installed in worksurface cutouts later. This will provide easier access during module installation.

One of the wire trays can also be left off to provide access.

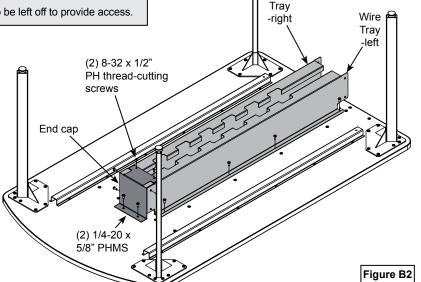

Wire

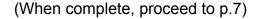



Phillips screwdriver

Cordless drill with

Phillips driver (best)

3. Flip Table upright

1. Carefully flip the table upright-this will take 3-4 people. Figure 3.


2. If necessary, adjust glides to level table.



CAUTION A




Do not allow the legs to contact the floor until the table is completely rotated. Side-loading of the table legs could cause damage.

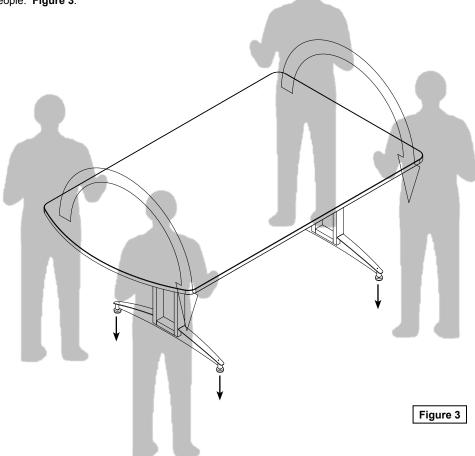

4. Power Modules and Wiring

- 1. If your worksurface has cutouts for optional power modules or other components, install the devices then route and secure the cords using the cord channel underneath. Figure 4.
- 2. If removed, install any remaining cord channels to the worksurface with 1/4-20 x 5/8" PHM screws.
- 3. If removed, install the end cap with (2) 1/4-20 x 5/8" PHMS, and (2) 8-32 x 1/2" PH thread-cutting screws and tighten securely. Figure A2, Figure B2.

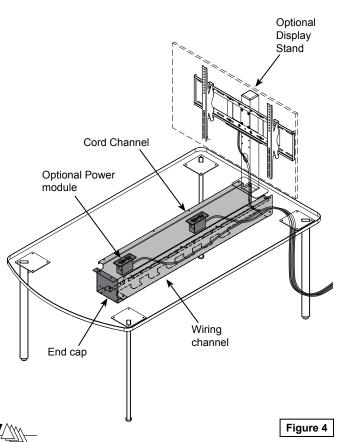


SPECTRUM INDUSTRIES INC.

4mm Hex wrench

0118729R2 Page 8 of 11


(C)


1. Assemble AV Equipment Channel

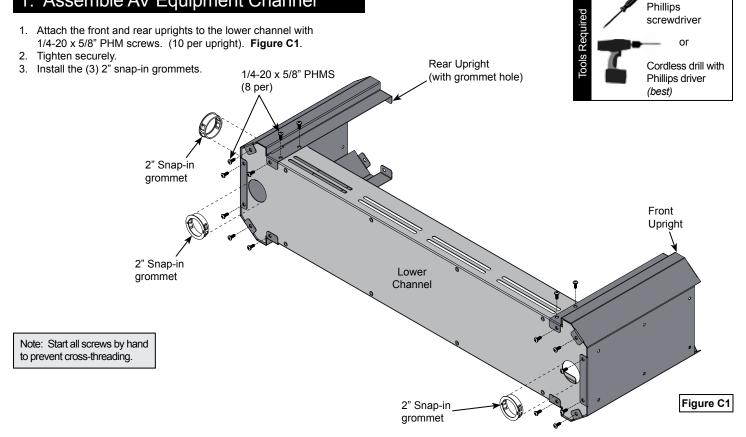

2. Attach T-Legs to AV Equipment Channel


- 1. Install glides onto T-legs. Figure C2-1.
- Attach each T-leg to the AV equipment channel with (6) 1/4-20 x 15mm JC Bolts and tighten securely. Figure C2-2.
- 3. Flip the entire assembly upright. (Glides down).

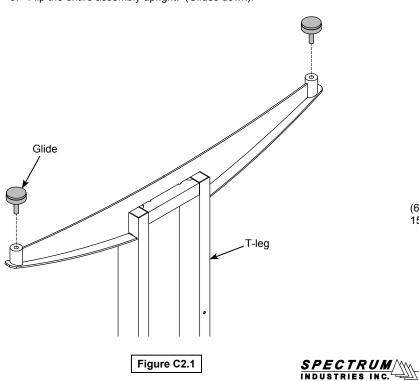

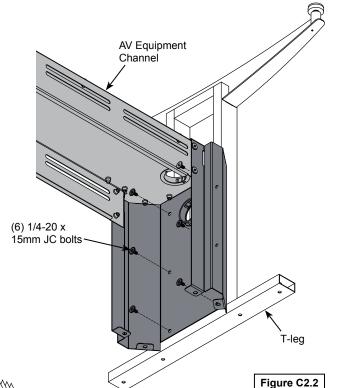

3. Attach Worksurface


- 1. Move leg assembly into the final location in the room.
- Set the worksurface onto the assembled legs and align mounting holes. Figure C3.1.
- Install (4) 1/4-20 x 40mm JC bolts through each leg to secure the worksurface. Figure C3.2.
- 4. Install (4) 1/4-20 x 5/8" PHM screws through each upright to secure the worksurface.
- 5. Tighten all screws securely.
- 6. If necessary, adjust glides to level table.

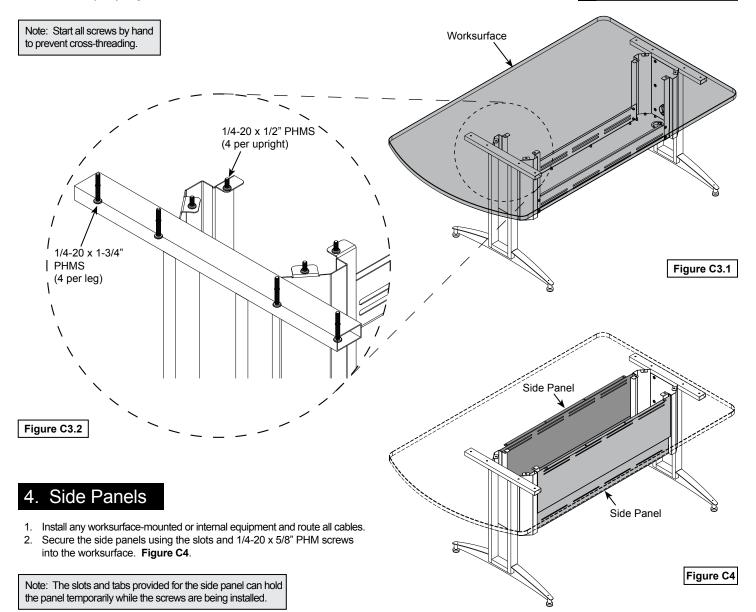

5. Display Stand

1. If you have the optional display stand, proceed with the installation at this time. (Instructions included with stand.) Figure 5.

Note: Requires mounting holes and cutout on flat end of worksurface.

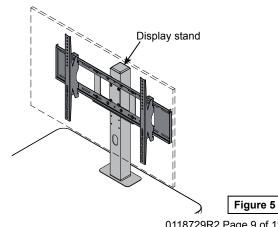



Phillips screwdriver

Cordless drill with

Phillips driver

(best)

Accessories

(Available separately <u>after</u> initial configured purchase)

7.501 [19.05 cm]

2.652

[6.73 cm]

3.532 [8.97 cm] 4.75 [12.06 cm]

1.601


[4.06 cm]

[5.08 cm]

Element Display Stand - 37130

- Bolts directly to worksurface
- Integrated cable management routes and hides wires
 Adjustable (VESA-compatible) mount
 Requires worksurface mounting holes and cutout

Monitor size range:	32"-55" [81.3 cm-139	.7 cm] diagonal
Weight capacity:	200 lb [45.4 kg]	
Vertical adjustment (worksurface-to-center)	 23.5"H [59.7 cm] 21.5"H [54.6 cm] 19.5"H [49.5 cm] 17.5"H [44.5 cm] 15.5"H [39.4 cm] 	(5 vertical positions in 2" increments)
Tilting	15° range	
Shipping weight:	35 lb [15.9 kg]	

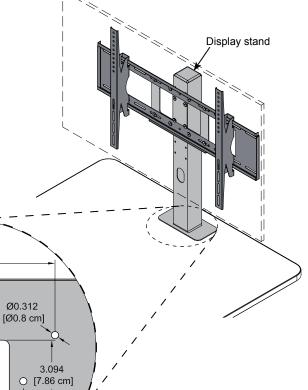


Mounting holes and cutouts needed on flat end of worksurface

Cove Module - 99044

- Two power receptacles
- Two USB charge ports (not data-compatible)
- · Requires worksurface cutout
- ETL listed
- · Available in Black or Silver
- Thumbscrew clamps

Cutout required:	5.25"W [13.3 cm] x 2"D [5.1 cm]	
	(mounts to surface thicknesses up to 1.5")	
Power cord:	9' [274 cm] with 90° flat plug with 45° rotation	
Power receptacles:	12A, 120 VAC spill-resistant	
USB charging ports:	2.1A (10.5W)	
Dimensions:	6"W [15.2 cm] x 2.5"D [6.35 cm] x 3.18"H [8.1 cm]	
Unit weight:	2.29 lb [1 kg]	

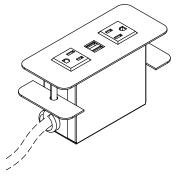





See spectrumfurniture.com for the latest accessories and detailed warranty information.

Warranty

WE WILL MAKE IT RIGHT FOR YOU!

Spectrum is committed to provide complete customer satisfaction. Each of our products is manufactured from the best materials available and each product is stringently monitored throughout the production process through our P.A.C.E. program (Product Assurance to meet Customer Expectations).

We expressly warrant that Spectrum products will be of good quality and workmanship and free from defect for the period set out in the warranty table below from the date of delivery. This warranty shall not apply to defects or damage resulting from misuse, abuse, neglect, improper care, modification or repair not authorized by Spectrum, or any other cause outside the control of Spectrum. Spectrum will, at its sole option, either repair or replace the defective product.

This warranty is exclusive; no other warranty, written or oral, is expressed or implied. This warranty is given by Spectrum to Buyer and to no other person or legal entity. No Spectrum dealer, distributor, agent or employee is authorized to make any modification or addition to this warranty.

NOTWITHSTANDING ANYTHING TO THE CONTRARY, SPECTRUM WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR INDIRECT OR LIQUIDATED DAMAGES, INCLUDING CONSEQUENTIAL, INCIDENTAL AND SPECIAL DAMAGES. IN NO EVENT SHALL SPECTRUM'S LIABILITY, WHETHER UNDER CONTRACT OR WARRANTY, IN TORT OR OTHERWISE, EXCEED THE PURCHASE PRICE RECEIVED BY SPECTRUM FOR THE PRODUCT AT ISSUE AND "RECALL ACTION" EXPENSES. SPECTRUM SHALL NOT BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES, WHETHER ARISING OUT OF BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE AND STRICT LIABILITY) OR OTHER THEORIES OF LAW, WITH RESPECT TO PRODUCTS SOLD OR SERVICES RENDERED BY SPECTRUM, OR ANY UNDERTAKINGS, ACTS OR OMISSIONS RELATING THERETO.

Our Customer Service Department is ready to provide immediate attention to any questions, comments or concerns. They are available to answer your calls Monday through Friday from 7 am to 5 pm CST. In addition your product comments or concerns are welcome via e-mail at: spectrum@spectrumfurniture.com

Warranty Table

	Warranty Period
Item	effective 1/1/2015
Adjustable Crank / Electric Desk Legs	• 1 Year
Flat Panel Desk Gas Cylinders	
Chairs Adjustable Height Chair Parts – including frames, gas cylinders, wood and plastic parts, control handles, casters Adjustable Height Chair Upholstery In-Stock Upholstery Graded-In Fabrics and Customer Owned Material	7 Years2 Years2 YearsNo Warranty
Height Adjustable Columns and Lifts	• 1 Year
General Use Casters	
Electrical (including timers and LINAK actuators)	• 2 Years
Keyboard / Mouse Trays	• 1 Year
Flat Panel Monitor Arms	
Flat Panel Monitor Arm – General Parts Flat Panel Monitor Arm – Gas Cylinders	5 Years2 Years
Desks and Lecterns	
Computer Desk Chassis Cart Chassis Lectern Chassis	• 10 Years





