## INSTRUCTIONS FOR OSC #400 SERIES ACRYLIC LECTERNS (MODELS #401S, & #471 and #410)

Congratulations! You have purchased a high quality acrylic plexiglass podium that should give you many years of professional, long lasting use. This series lectern is manufactured from 1/2" & 3/8" polished acrylic by American craftsmen in the USA.

## How to Care for your Acrylic Lectern:

- DO NOT CLEAN WITH WINDEX OR ANY OTHER PRODUCT CONTAINING AMMONIA. . MILD SOAP AND A SOFT SPONGE OR CHAMOIS IS RECOMMENDED ONLY AS A WAY TO TRANSPORT WATER TO THE ACRYLIC. USE YOUR BARE HAND TO REMOVE ANY DIRT OR DEBRIS. DRY WITH A CLEAN, DAMP CHAMOIS.
- DO NOT OVERTIGHTEN THE SCREWS ON THE BASE AND READING SURFACE. THE ACRYLIC MAY CRACK.
- DO NOT LEAN HEAVILY ON THE READING SUBFACE WHEN SPEAKING.
- WHEN MOVING YOUR ACRYLIC LECTERN, IT IS BEST THAT YOU USE A DOLLY AND WRAP THE LECTERN WITH A PADDED CLOTH.
- DO NOT PULL FROM THE READING SURFACE OR DRAG ACROSS A WOODEN OR CARPETED FLOOR AS THIS MAY CAUSE SPIDERING OR CRACKING AROUND THE CONNECTION POINTS.

## Parts:

- Middle Column 1 .
- **Reading Surface1**
- Base
- Shelf (Model 401S only)

1

- Screws 8 (4 for the base and 4 for the reading surface)
- Directions:

Place parts on a clean, protected surface such as carpet or the like.

Place main column on base and align the base with the pre-drilled holes.

Screw in the 4 screws provided gently in the pre-drilled holes on the base and lift the column.

Place the reading surface on top of the column and screw in the 4 screws provided gently guiding them in the pre-drilled holes.

> If you require further assistance, please call Customer Service at 973-594-9000 or fax your request at 973-594-9339



Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com