

80 Series V Multimeter Quick Reference Guide



⚠ See Users Manual for "Safety Information" and complete operating information.

Fuse Test


Test Lead Alert

🎵 + LEAD = 🔌 OK


🎵 + LEAD = ⚠

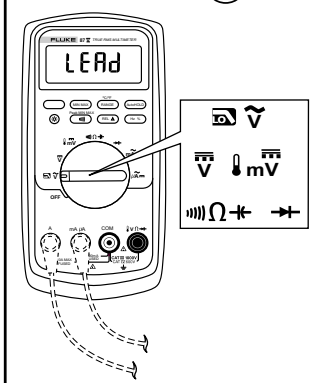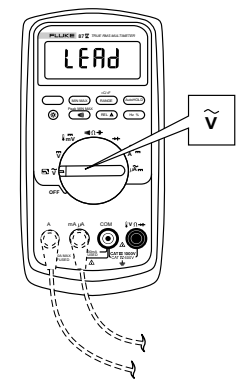


Voltage \tilde{V} \bar{V} mV

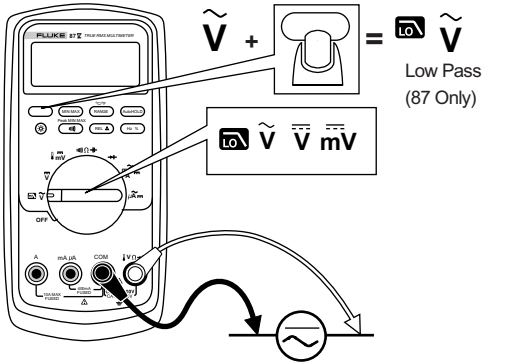


Temperature (87 Only) \downarrow

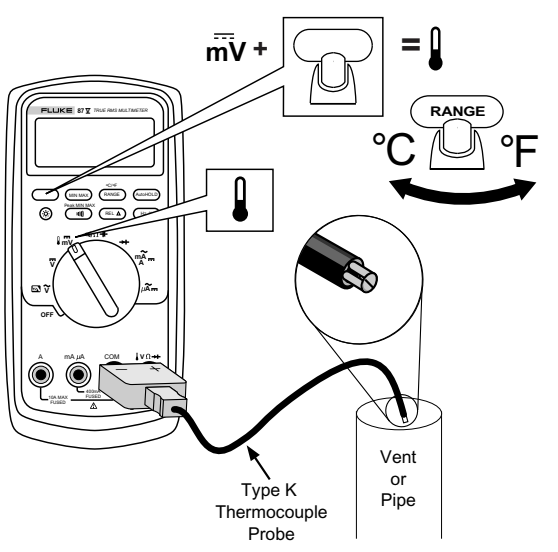


Resistance Ω

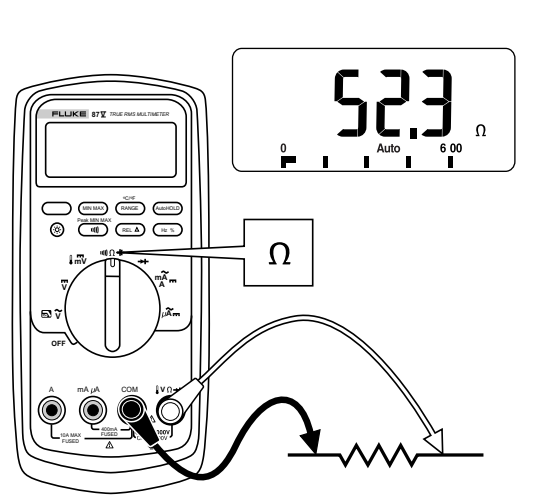


Conductance nS

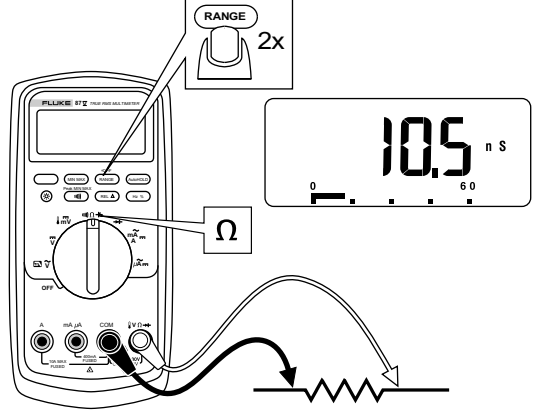


Continuity |||

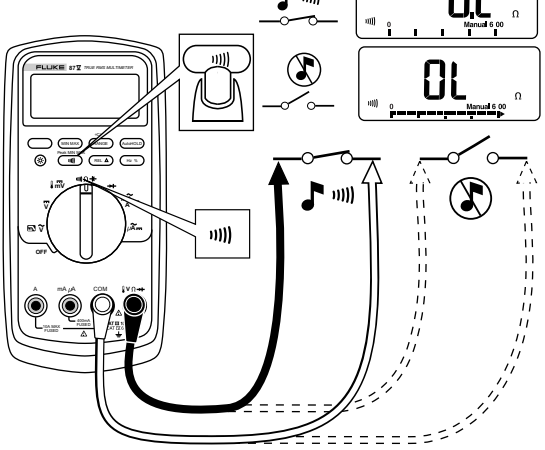





Capacitance $\text{--|<$

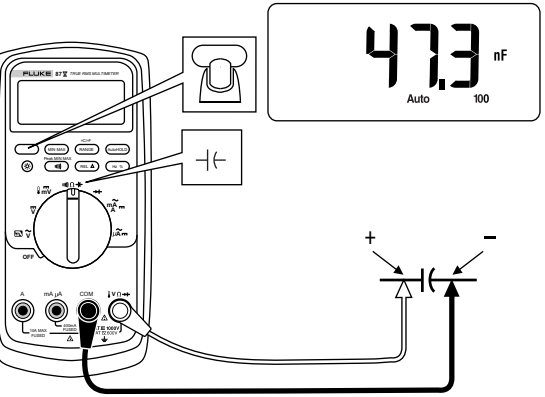


Current \tilde{A} , \bar{A} , $\mu\tilde{A}$, mA, A, μA

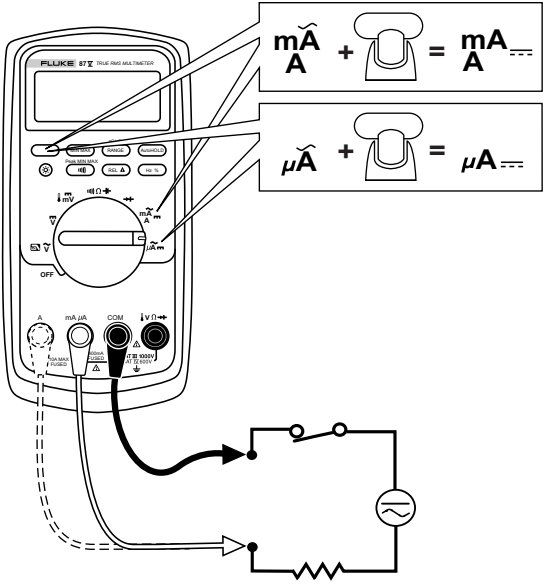


Diode Test →

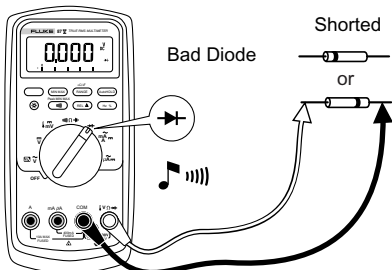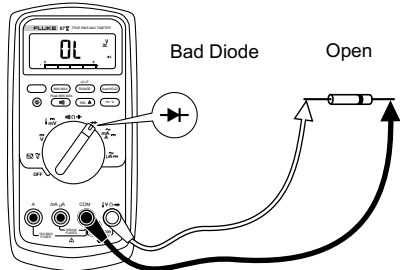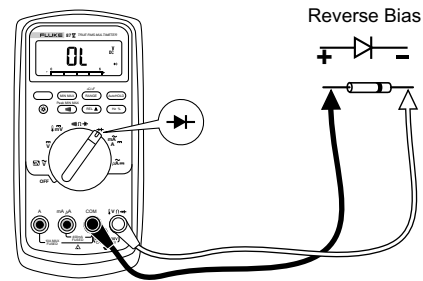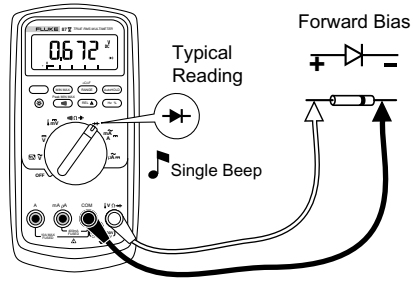


Frequency Hz

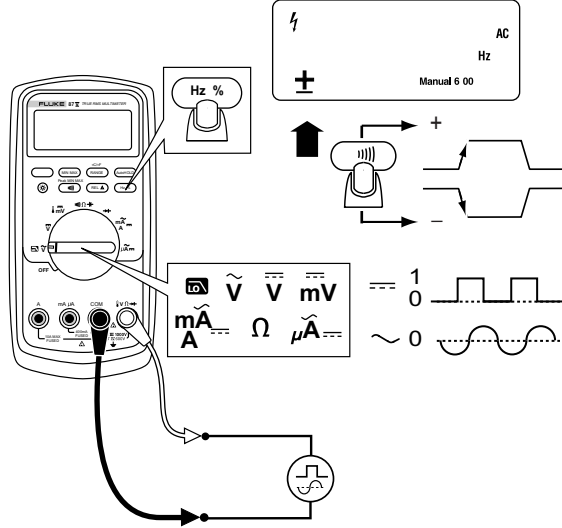


Duty Cycle %

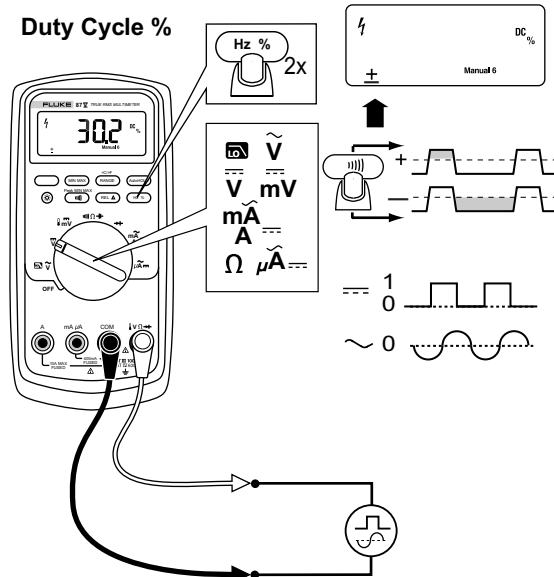


Min, Max, Average MIN MAX

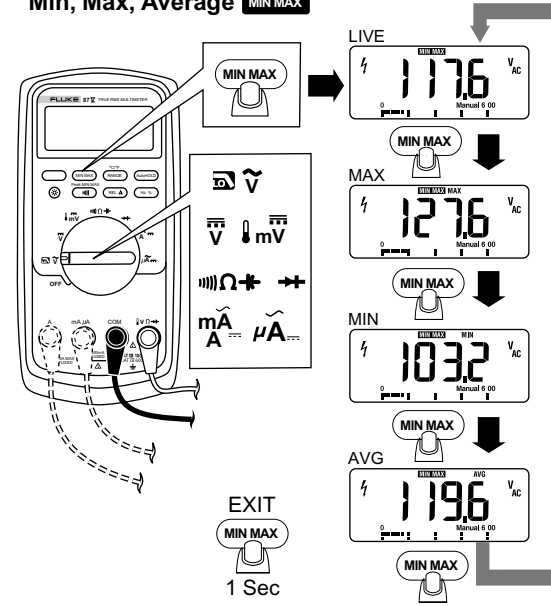


AutoHOLD HOLD

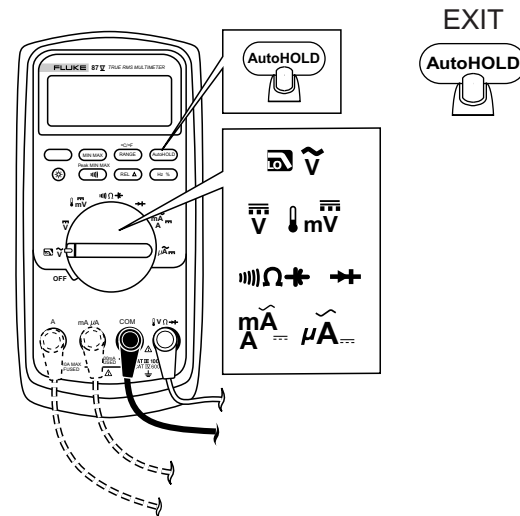

Relative Δ

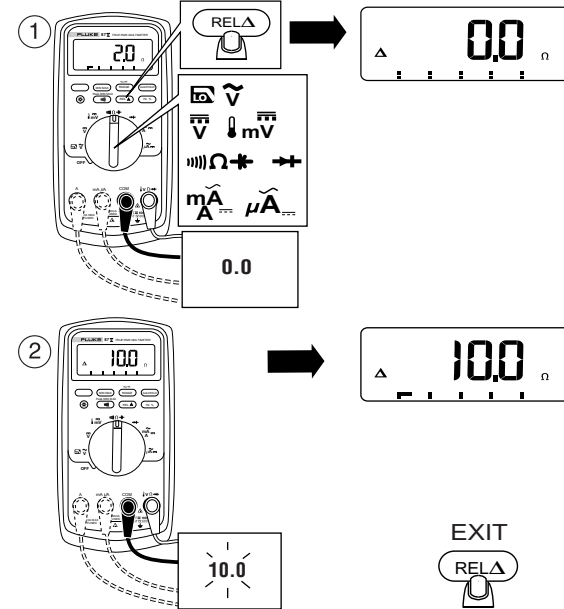

Hi Res Mode (87 Only)

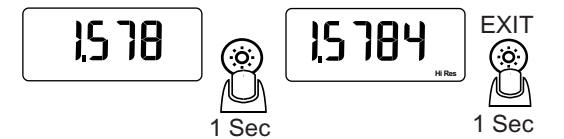

ToolPak

