

VELOCICALC® AIR VELOCITY METER MODEL 9515

OPERATION AND SERVICE MANUAL

P/N 1980555, REVISION D
SEPTEMBER 2013



START SEEING THE BENEFITS OF REGISTERING TODAY!

Thank you for your TSI instrument purchase. Occasionally, TSI releases information on software updates, product enhancements and new products. By registering your instrument, TSI will be able to send this important information to you.

<http://register.tsi.com>

As part of the registration process, you will be asked for your comments on TSI products and services. TSI's customer feedback program gives customers like you a way to tell us how we are doing.



UNDERSTANDING, ACCELERATED

TSI Incorporated - Visit our website **www.tsi.com** for more information.

USA
UK
France
Germany

Tel: +1 800 874 2811
Tel: +44 149 4 459200
Tel: +33 4 91 11 87 64
Tel: +49 241 523030

India
China
Singapore

Tel: +91 80 67877200
Tel: +86 10 8219 7688
Tel: +65 6595 6388

©2013 TSI Incorporated

Printed in U.S.A.

Copyright©

TSI Incorporated / 2007–2013 / All rights reserved.

Address

TSI Incorporated / 500 Cardigan Road / Shoreview, MN 55126 / USA

Fax No.

(651) 490-3824

LIMITATION OF WARRANTY AND LIABILITY (effective June 2011)

(For country-specific terms and conditions outside of the USA, please visit www.tsi.com.)

Seller warrants the goods sold hereunder, under normal use and service as described in the operator's manual, shall be free from defects in workmanship and material for **24 months**, or if less, the length of time specified in the operator's manual, from the date of shipment to the customer. This warranty period is inclusive of any statutory warranty. This limited warranty is subject to the following exclusions and exceptions:

- a. Hot-wire or hot-film sensors used with research anemometers, and certain other components when indicated in specifications, are warranted for 90 days from the date of shipment;
- b. Pumps are warranted for hours of operation as set forth in product or operator's manuals;
- c. Parts repaired or replaced as a result of repair services are warranted to be free from defects in workmanship and material, under normal use, for 90 days from the date of shipment;
- d. Seller does not provide any warranty on finished goods manufactured by others or on any fuses, batteries or other consumable materials. Only the original manufacturer's warranty applies;
- e. Unless specifically authorized in a separate writing by Seller, Seller makes no warranty with respect to, and shall have no liability in connection with, goods which are incorporated into other products or equipment, or which are modified by any person other than Seller.

The foregoing is **IN LIEU OF** all other warranties and is subject to the **LIMITATIONS** stated herein. **NO OTHER EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR PARTICULAR PURPOSE OR MERCHANTABILITY IS MADE. WITH RESPECT TO SELLER'S BREACH OF THE IMPLIED WARRANTY AGAINST INFRINGEMENT, SAID WARRANTY IS LIMITED TO CLAIMS OF DIRECT INFRINGEMENT AND EXCLUDES CLAIMS OF CONTRIBUTORY OR INDUCED INFRINGEMENTS. BUYER'S EXCLUSIVE REMEDY SHALL BE THE RETURN OF THE PURCHASE PRICE DISCOUNTED FOR REASONABLE WEAR AND TEAR OR AT SELLER'S OPTION REPLACEMENT OF THE GOODS WITH NON-INFRINGEMENTS.**

TO THE EXTENT PERMITTED BY LAW, THE EXCLUSIVE REMEDY OF THE USER OR BUYER, AND THE LIMIT OF SELLER'S LIABILITY FOR ANY AND ALL LOSSES, INJURIES, OR DAMAGES CONCERNING THE GOODS (INCLUDING CLAIMS BASED ON CONTRACT, NEGLIGENCE, TORT, STRICT LIABILITY OR OTHERWISE) SHALL BE THE RETURN OF GOODS TO SELLER AND THE REFUND OF THE PURCHASE PRICE, OR, AT THE OPTION OF SELLER, THE REPAIR OR REPLACEMENT OF THE GOODS. IN THE CASE OF SOFTWARE, SELLER WILL REPAIR OR REPLACE DEFECTIVE SOFTWARE OR IF UNABLE TO DO SO, WILL REFUND THE PURCHASE PRICE OF THE SOFTWARE. IN NO EVENT SHALL SELLER BE LIABLE FOR LOST PROFITS OR ANY SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES. SELLER SHALL NOT BE RESPONSIBLE FOR INSTALLATION, DISMANTLING OR REINSTALLATION COSTS OR CHARGES. No Action, regardless of form, may be brought against Seller more than 12 months after a cause of action has accrued. The goods returned under warranty to Seller's factory shall be at Buyer's risk of loss, and will be returned, if at all, at Seller's risk of loss.

Buyer and all users are deemed to have accepted this LIMITATION OF WARRANTY AND LIABILITY, which contains the complete and exclusive limited warranty of Seller. This LIMITATION OF WARRANTY AND LIABILITY may not be amended, modified or its terms waived, except by writing signed by an Officer of Seller.

Service Policy

Knowing that inoperative or defective instruments are as detrimental to TSI as they are to our customers, our service policy is designed to give prompt attention to any problems. If any malfunction is discovered, please contact your nearest sales office or representative, or call TSI's Customer Service department at (800) 874-2811 (USA) or (001 651) 490-2811 (International) or visit www.tsi.com.

CONTENTS

CHAPTER 1 UNPACKING AND PARTS IDENTIFICATION	1
CHAPTER 2 SETTING-UP	3
Supplying Power to the Model 9515 VELOCICALC Air Velocity Meter	3
Installing the Batteries	3
Using The Telescoping Probe	3
Extending The Probe	3
Retracting The Probe	3
CHAPTER 3 OPERATION	5
Keypad Functions	5
CHAPTER 4 MAINTENANCE	7
Recalibration	7
Cases	7
Storage	7
CHAPTER 5 TROUBLESHOOTING	9
APPENDIX A SPECIFICATIONS	11



(This page intentionally left blank)

Chapter 1

Unpacking and Parts Identification

Carefully unpack the instrument and accessories from the shipping container. Check the individual parts against the list of components below. If anything is missing or damaged, notify TSI immediately.

1. Carrying case
2. Instrument

(This page intentionally left blank)

Chapter 2

Setting-up

Supplying Power to the Model 9515 VELOCICALC Air Velocity Meter

The Model 9515 is powered with four size AA batteries.

Installing the Batteries

Insert four AA batteries as indicated by the diagram located on the inside of the battery compartment. The Model 9515 is designed to operate with either alkaline or NiMH rechargeable batteries, although it will not recharge NiMH batteries. Battery life will be shorter if NiMH batteries are used. Carbon-zinc batteries are not recommended because of the danger of battery acid leakage.

Using the Telescoping Probe

The telescoping probe contains the velocity and temperature sensors. When using the probe, make sure the sensor window is fully exposed and the orientation dimple is facing upstream.

Note

For temperature measurements, make sure that at least 3 inches (7.5 cm) of the probe is in the flow to allow the temperature sensor to be in the air stream.

Extending the Probe

To extend the probe, hold the handle in one hand while pulling on the probe tip with the other hand. Do *not* hold the cable while extending the probe as this prevents the probe from extending.

Retracting the Probe

To retract the probe, hold the handle in one hand while pulling gently on the probe cable with the other hand.

(This page intentionally left blank)

Chapter 3

Operation

Keypad Functions

ON/OFF Key	Press to turn the Model 9515 on and off. During the power up sequence the display will show the following: Model Number, Serial Number, Software Revision, and Last Date Calibrated.
ft/min / m/s Key	Pressing this key changes the display to read air velocity.
°C / °F Key	Pressing this key changes the display to read temperature.
Changing Units	To change units, first put the desired measurement (air velocity or temperature) on the display. Then press and hold the left, unlabelled key for five seconds. Finally, use the ▲▼ and ENTER key to select the units.

(This page intentionally left blank)

Chapter 4

Maintenance

The Model 9515 requires very little maintenance to keep it performing well.

Recalibration

To maintain a high degree of accuracy in your measurements, we recommend that you return your Model 9515 to TSI for annual recalibration. Please contact one of TSI's offices or your local distributor to make service arrangements and to receive a Return Material Authorization (RMA) number. To fill out an online RMA form, visit TSI's website at <http://service.tsi.com>.

U.S. & International

TSI Incorporated
500 Cardigan Road
Shoreview MN 55126-3996
Tel: (800) 874-2811
(651) 490-2811
Fax: (651) 490-3824

Cases

If the instrument case or storage case needs cleaning, wipe it off with a soft cloth and isopropyl alcohol or a mild detergent. Never immerse the Model 9515. If the enclosure of the Model 9515 becomes broken, it must be replaced immediately to prevent access to hazardous voltage.

Storage

Remove the batteries when storing the unit for more than one month to prevent damage due to battery leakage.

(This page intentionally left blank)

Chapter 5

Troubleshooting

Table 5-1 lists the symptoms, possible causes, and recommended solutions for common problems encountered with the Model 9515. If your symptom is not listed, or if none of the solutions solves your problem, please contact TSI.

Table 5-1: Troubleshooting the VELOCICALC Model 9515

Symptom	Possible Causes	Corrective Action
No Display	Unit not turned on	Switch unit on.
	Low or dead batteries	Replace batteries.
	Dirty battery contacts	Clean the battery contacts.
Velocity reading fluctuates unstable	Fluctuating flow	Reposition probe in less-turbulent flow
Instrument Error message appears	Fault in instrument	Factory service required on instrument.

W A R N I N G !

Remove the probe from excessive temperature immediately: excessive heat can damage the sensor. Operating temperature limits can be found in [Appendix A, Specifications](#).

(This page intentionally left blank)

Appendix A

Specifications

Specifications are subject to change without notice.

Velocity:

Range:	0 to 4000 ft/min (0 to 20 m/s)
Accuracy ^{1&2} :	±5% of reading or ±5 ft/min (±0.025 m/s), whichever is greater
Resolution:	1 ft/min (0.01 m/s)

Temperature:

Range:	0 to 200°F (-18 to 93°C)
Accuracy ³ :	±0.5°F (±0.3°C)
Resolution:	0.1°F (0.1°C)

Instrument Temperature Range:

Operating (Electronics):	40 to 113°F (5 to 45°C)
Operating (Probe):	0 to 200°F (-18 to 93°C)
Storage:	-4 to 140°F (-20 to 60°C)

Instrument Operating Conditions:

Altitude up to 4000 meters
Relative humidity up to 80% RH, non-condensing
Pollution degree 1 in accordance with IEC 664
Transient over voltage category II

External Meter Dimensions:

3.3 in. × 7.0 in. × 1.8 in. (8.4 cm × 17.8 cm × 4.4 cm)

Meter Weight:

Weight with batteries: 0.6 lbs (0.27 kg)

Power Requirements:

Four AA-size batteries (included)

- ¹ Temperature compensated over an air temperature range of 40 to 150°F (5 to 65°C).
- ² The accuracy statement of ±5.0% of reading or ±5 ft/min (±0.025 m/s), whichever is greater, begins at 30 ft/min through 4000 ft/min (0.15 m/s through 20 m/s).
- ³ Accuracy with instrument case at 77°F (25°C), add uncertainty of 0.05°F/°F (0.03°C/°C) for change in instrument temperature.

(This page intentionally left blank)

T Equipment .NET

USA

An Interworld Highway, LLC Company



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811
UK Tel: +44 149 4 459200
France Tel: +33 4 91 11 87 64
Germany Tel: +49 241 523030

India Tel: +91 80 67877200
China Tel: +86 10 8219 7688
Singapore Tel: +65 6595 6388