# Three Phase, *Class A*Power Quality Analyzer PowerPad® IV



### Portable Easy-To-Use Shock-Resistant

- Voltage quality diagnostics
- Full compliance with IEC 61000-4-30 Class A standard
- Easy-to-use on-screen setup
- 5 V to 1000 V three-phase analyzer
- Works on all existing electrical networks (single phase, three phase wye, delta, ...)
- 7 inch color display touch screen
- TRMS voltage and current measurements
- Power W, VA and VAR (N, Q<sub>1</sub> and D) measurements
- PF, DPF, CF and THD measurements
- Webserver, Wi-Fi, Ethernet, and USB communication
- Auto recognition of current sensors and probes
- Includes FREE DataView®
  software for configuring, data
  retrieval, real-time display,
  analysis and report generation

Our products are backed by over 125 years of experience in test and measurement equipment, and encompass the latest international standards for quality and safety.



# **POWER & ENERGY QUALITY ANALYZER Model 8345**

## PowerPad® IV Model 8345 - Top Performance and Accuracy

Intended for inspection, maintenance and field service teams on industrial or commercial installations, the PowerPad® IV gives you a snapshot of the electrical network quality features. Class A instruments meet the most rigorous performance and measurement time accuracy requirements (better than +/- 0.3 sec/day) for parameters such as voltage, current, harmonics and power and other measurements as defined in the IEC61000-4-30 standard, and are capable of producing reliable and repeatable results when connected to the same signals.

Comfortable to handle and equipped with an intuitive graphical user interface, this analyzer offers high measurement accuracy. It also features numerous calculated values and several processing functions.



# **APPLICATIONS**



### **Commercial and Industrial Sectors**

Today, electrical distribution networks are judged according to their ability to power loads causing disturbances and loads sensitive to disturbances. The latter may take multiple forms.

Voltage quality analyzers can be used to detect and qualify each disturbance type: outage, voltage surges and sags, flicker, THD, voltage variations, transients, etc.

### **Energy Efficiency**

For energy diagnostics on a site, a logger must be set up to record the electrical power and energy consumed. Once all the measurements have been taken, billing data is compared with the actual measurements to determine whether corrective action needs to be taken. This action may take different forms: resizing of a transformer, implementation of filtering systems, replacement of faulty equipment, etc. This analysis helps you understand and act at the right place and time to provide the best solution.



# TAFMC\*

### **Electrical Maintenance**

The increase of electronic power supplies in industrial processes has led to increases in harmonic disturbances on electrical networks which have a direct impact on the quality of the energy distributed. These disturbances may cause failures across all the electrical devices connected to the network.

Harmonic currents have negative effects on nearly all the components in the electrical system, creating new dielectric, thermal and/or mechanical stresses.

# **POWER & ENERGY QUALITY ANALYZER Model 8345**

### PowerPad® IV Model 8345

### The PowerPad moves up a grade - Class A!



### **SPECIFICATIONS**

SPECIFICATIONS				
MODEL	8345			
ELECTRICAL				
Inputs	5 voltage / 4 current, isolated			
Voltage	5 V to 1,000 Vac and VDc			
Harmonics Mode	DC to 63rd order; < 3% Udin			
Interharmonics Mode	0 to 62nd order; < 0.5% Udin			
Inrush & Transient Capture	No maximum (limited by SD card)			
Shockwaves (Fast transient)	Up to 12 kV sampled every 500 ns			
Flicker (Pst)	< 0.1			
Voltage Unbalance (u0,u2)	0.5 to 5 % (absolute); ±0.15 % (absolute)			
Trend Recording	> 900 parameters 3 days with a sampling period of 200 ms 15 days with a sampling period of 1 s 45 days with a sampling period of 3 s			
Sampling Rate	Voltage 400 kSps / Current 200 kSps / Surge 2 MSps			
Alarm Mode Types / Number	52 / 20,000 with Email notifications			
Real-time / Power / Energy Modes	Yes / Yes / Yes			
Unbalance Mode	Composite			
Screenshots	No maximum (limited by SD card)			
Power Supply	Power from phase from 100 to 1000 V AC/DC with external supply block (included)			
<b>Carrier Current Detection</b>	Yes			
Battery	5.8 Ah Li-ion battery pack (included) / ≤6 hrs w/ display on; ≤10 hrs w/ display off			
MECHANICAL				
Data Storage	16 GB SD-Card (included) for snapshot, transients, alarms and trend recording			
Display	7 in color LCD touch screen: 800 x 480 (WVG			
Clock / GPS	Yes, built-in			
Operating Temperature	32 °F to 104 °F [+0 °C; +40 °C]			
Communication	USB, Ethernet, Wi-Fi, Web server, IRD server, USB port (type A)			
Dimensions	7.87 x 11.22 x 2.17 in (200 x 285 x 55 mm)			
Weight (meter only)	4.19 lbs (1.9 kg)			
<b>COMPLIANCE &amp; STANDARD</b>	S			
Safety / IP	IEC 61010 1000 V CAT IV / IP54			
Environmental	IEC 61557-12 & IEC 62586			
Measurement Standard	IEC 61000-4-30 (Ed 3) Class A (Full)			
<b>EN50160 Monitoring Mode</b>	With DataView® software			
Warranty	*3 years (registration must be done within 30 days of the date of purchase)			

Download the user manual for complete specifications

























### PRODUCT INCLUDES

CAT. # 2136.36 - POWERPAD® IV MODEL 8345 W/4 MA194-24-BK MINIFLEX® SENSORS

Meter, extra-large tool bag, internal carrying pouch, hand strap, (4) MA194-24-BK sensors, USB cable, (5) 10 ft black voltage leads with alligator clips, (12) color-coded input ID markers, power adapter (PA32ER) with US power cord, (2) 6 ft stackable leads, (2) 10 ft black voltage leads with alligator clips for power adapter PA32ER, (1) power plug adaptor for PA32ER, SD card, 5.8 Ah Li-ion battery pack, quick start quide, and a USB stick with DataView® software and user manual.



### ACCESSORIES/REPLACEMENTS

CAT. #2140.80

MiniFlex® Sensor Model MA194-24-BK

CAT. #2140.43

Lead - Set of 5, 10 ft (3M) Black Leads w/5 Black Alligator Clips

CAT. #2140.44

Lead, (1) 10 ft (3M) Black Lead w/1 Black Alligator Clip

CAT. #5100.14

Adapter - Replacement Power Plug Adapter for PA32ER

CAT. #5100.15

Adapter - Replacement 1000 V PA32ER Power Supply

CAT. #5100.16

Magnetic Hook for use with PowerPad® IV Model 8345



# FEATURES, FUNCTIONS & MEASUREMENTS

### **GENERAL**

- · Easy-to-use, portable power quality analyzer
- Full compliance with IEC 61000-4-30 ed. 3.0 Class A functions
- Voltage quality diagnostics and communication options
- Records and stores hundreds of parameters in memory every 10/12 periods (200 ms)
- Measurements on all network types: three-phase,
   Aron connection, single phase, etc.
- Electrical network monitoring with setting of alarms
- Characterization with software for True RMS single-, two- and three-phase measurements at 512 samples/cycle, plus DC
- 7 inch color graphical, backlit TFT touch screen display
- Monitors user configured alarm parameters
- Fast transient events are captured and stored in memory
- True InRush capabilities to study loads during setup as well as ongoing

### **MEASUREMENTS**

- Measurements and recordings accessible on the device's front-panel
- Measures all DC components
- Harmonics (amplitude and phase shift) from DC to the 63rd order
- Inter-harmonic subgroups from 0 to the 62nd order
- 2 line carrier signal frequencies monitored
- Measurement of active power (P), non-active power (N), reactive power (Q<sub>1</sub>), apparent power (S) and distortion power (D) values (total and per phase)
- Measurement of energy values (total and per phase) with Energy valuation
- Internal GPS for precise UTC synchronization (NTP possible too)
- Real-time color waveforms (5 voltage and 4 current)
- Easy-to-use multilingual on-screen setup
- Automatic current probe/sensor recognition and scaling
- True RMS voltage and current measurement
- Shockwave measurement

### **CALCULATIONS**

- · Calculation of K factor & FHL
- Calculation of distorting voltages and currents
- Calculation of Displacement Power Factor (DPF) and True Power Factor (PF)
- Calculation of Pst & Plt flicker and the sliding Pst
- Calculation of unbalance (current and voltage)
- Waveform Inrush with a duration of up to 10 minutes
- RMS and Peak Inrush for up to 30 minutes
- Capture of hundreds of 2.5 µs transients
- Capture shockwaves up to 12 kV with a resolution of 500 ns
- Trend Recording
- Trend recording period from 200 ms to 2 hrs

### **COMMUNICATION**

- Built-in GPS
- USB 2.0 external flash drive supported (host devices)
- USB 2.0 connection with a PC
- Ethernet 100 Mbps communication
- Built-in Wi-Fi 802.11b/g communication
- Web server for a remote user interface with Android, Microsoft and iOS applications
- Backup and recording of screenshots (image and data)
- Recording and export to a PC
- Includes DataView® software for real-time data recovery and communication with a PC

### **ERGONOMICS & EASE OF USE**

- Wide 7-inch color LCD touch screen (WVGA)
- Real-time display of waveforms (4 voltage/4 current)
- DC current sensor power supply
- 5 x 50 Hz / 60 Hz AC/DC voltage inputs
- Intuitive, user-friendly and multilingual graphical interface
- Fully multi-task instrument with user profiles
- Automatic recognition of different current sensors
- Display of phasor diagrams
- Waveforms at 512 samples per cycle, with Min/Max 2.5 μs
- Real-time waveforms displayed from 1 cycle to 10/12 cycles (50/60 Hz)





# STANDARD VERIFICATION CAMPAIGNS



### **ENERGY VALUATION**

PowerPad IV Class A Model 8345 offers all the measurements required to successfully implement energy efficiency projects and monitor electricity distribution.

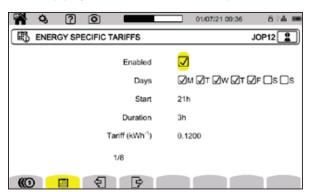


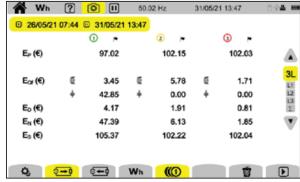



### **SHOCKWAVES**


Shockwaves, usually caused by lightning, are spectacular instantaneous electrical voltage surges. They also propagate in the digital network. Model 8345 can withstand shockwaves up to 12 kV which are sampled every 500 ns.

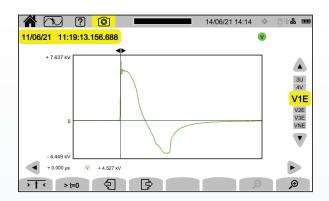



# LINE CARRIER SIGNAL MEASUREMENT


In the harmonic analysis function, there is also a mode for monitoring carrier currents. After defining their frequency in the instrument, the command signals will then be measured.

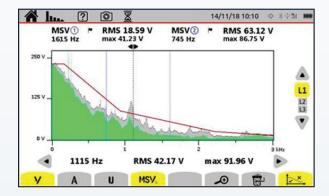



### **INTERHARMONICS** (harmonic mode)

Model 8345 can be used to measure and display the interharmonics, as requested in IEC 61000-4-7, for very precise analysis of all the disturbances on an electrical network.

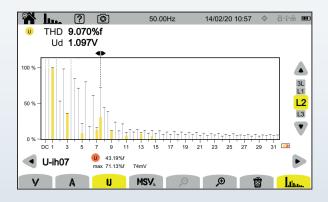



# **MONITORING MADE EASY**

### **TREND**



The trend graph shows the variations of the parameters measured over time as fast as 200 ms.

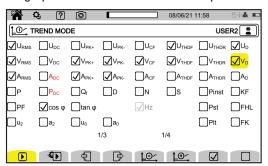


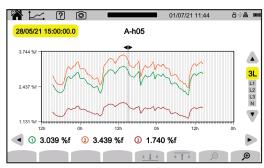




### **ALARMS**

Alarms set points can be programmed to be monitored, which are then recorded and time-stamped with the duration and extreme values. Users can be informed directly by email when an alarm is triggered.

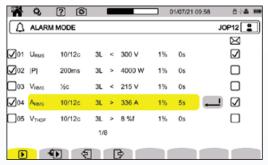

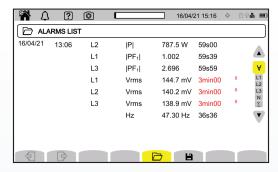




### **TRANSIENTS**

Transients correspond to peaks in the voltage or current waveform. Shockwaves are extremely fast transients with even greater possible amplitude.




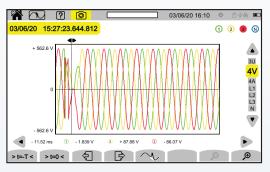




### TRUE INRUSH®

For tests when starting up loads, model 8345 can record ½-period values covering more than 30 minutes and the waveforms of the signal can be captured.

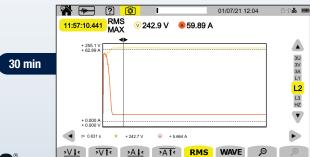

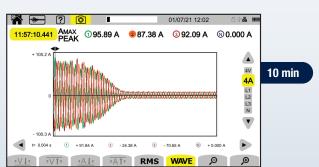


# A VERSATILE COMMUNICATING INSTRUMENT

### **SOFTWARE**

The DataView® Control Panel software processes the measurements made with the PowerPad® IV Class A Model 8345 including:

- Configuration of the instrument: setup, recording, alarms
- · Real-time display
- · Processing of all the recorded data
- Transfer of screenshots and transients
- Data export into spreadsheet (Excel, .CSV)
- Data export in graphic form in Windows™.

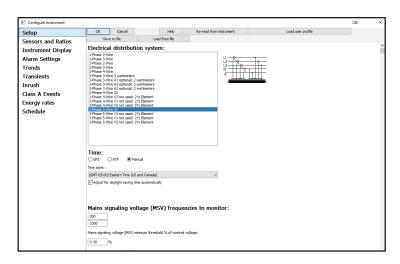

### The web server

PowerPad® IV Class A Model 8345 is equipped with firmware for remote access. It can be controlled via VNC, which controls a remote machine while displaying its desktop. It can be activated from any browser (Chrome, Edge, Firefox, etc.).



### Communication

In addition to using media such as SD cards and USB drivers, it is possible to download the measurements and communicate with the instrument remotely via USB, remote links, Wi-Fi (direct or via server) or the RJ45 (Ethernet connector).

(Refer to the User Manual for PC computer USB hardware requirements).



### **IRD** server

Our IT networks are protected against external attack. Thanks to the provision of access to our IRD server, a single authorized IP output address allows you to transmit your measurements all over the world.

We recommend utilizing the IRD Server for configuring test measurements, and directly connecting to a PC for generating reports involving large packets of data.

### **SCPI** commands

With an integrated interfacing software layer, it is possible to control the 8345 instrument via its own software application. SCPI commands are available for all the instrument's functions.

### **Data files in JSON format**

Saved in JSON format, all the recordings are accessible and can be processed with a third-party and/or proprietary application.




# **MEETING STANDARDS**

### IEC 61000-4-30

The International Electrotechnical Commission (IEC) IEC 61000-4-30 Edition 3.1 standard. This standard defines:

- the methods for measuring the quality parameters for the supply of power to electrical power networks
- and how to interpret the results

The measurement parameters are described for each applicable parameter in terms which provide reliable, repeatable results, however the method is implemented.

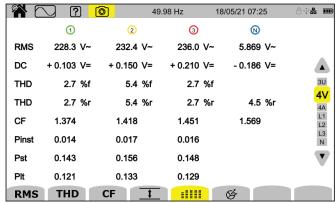

### **EN 50160**

### Homogeneous tolerances


The EN 50160 standard characterizes the quality of the voltage supplied. It presents the different types of disturbances which may affect the voltage on a network. It lists the parameters to be monitored and defines how long the parameters should be monitored for. With the DataView® software, the Monitoring mode can be used to set up a simplified configuration of all the limits to be monitored and the parameters to be recorded.



### IEC 61000-4-7

### **Harmonics and interharmonics**

The IEC 61000-4-7 standard defines the measurement methods for voltage quality analyzers so that they remain compliant with the emission levels stipulated in certain standards (e.g. the harmonic current limits specified by IEC 61000-3-2) and for the measurement of harmonic currents and voltages on the power networks themselves.

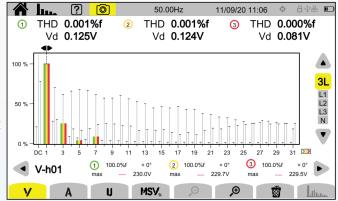


### IEC 61000-4-15

### Short or long-term flicker

This is caused by the power supply voltage modulation. When it affects lighting, it gives an impression of unstable vision due to a light stimulus whose luminance or spectral distribution fluctuates over time.

There are 2 parameters calculated from the power supply voltage.

- Pst which is a short-term assessment based on a 10-minute observation period
- PIt which is a long-term assessment, usually over a period of 2 hours

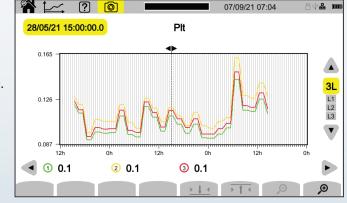





# **MODEL 8345: DIAGNOSTIC TOOL**

### Viewing the signal and its components


Model 8345 is an easy-to-use analytical tool. After connection, the 8345 immediately and totally automatically displays the voltages up to 1,000 V AC and DC and the currents, thanks to a function which automatically recognizes the sensor connected. A large number of sensors are compatible with the PowerPad.

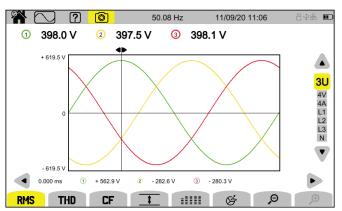


The Waveform mode automatically provides an oscillogram showing the voltage and/or current waveforms.

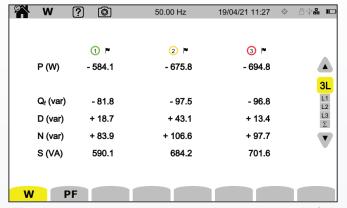

Model 8345 can be used to monitor all the power values (P, Q, D, etc.) in real time over periods of varying durations. Measurement and analysis of all the power values enables you to perform a full power survey in compliance with the standards.

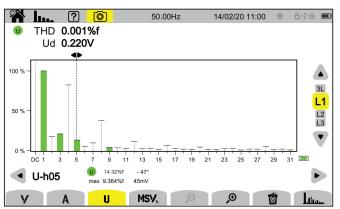


It is very simple to measure harmonics and interharmonics with Model 8345, which is very easy to use as an analytical tool.

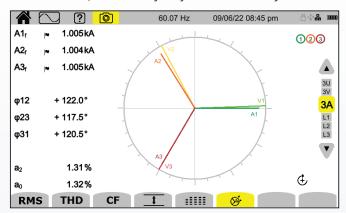



The phase relation between the voltages and currents is displayed with a phasor diagram. The vectorial representation allows you to confirm the instrument is properly connected to the electrical network.

### **Simplified configuration**

We've simplified the configuration set up for ease of use.

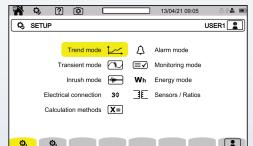

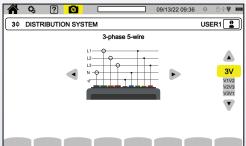

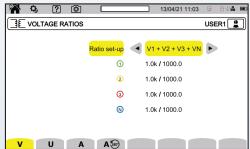

# **MODEL 8345: PROBES & SENSORS**

We offer a complete family of current measurement probes to meet most AC (or DC) measurement applications up to 10,000 Arms.


	Probe/Sensor Type	TRMS Current	Max Conductor Size	Accuracy on IRMS	Accuracy on Φ	Safety
0	SR193-BK (1000 A) Catalog #2140.33 AC Current Probe with 10 ft lead	1 A - 3 A 3 A - 10 A 10 A - 100 A 100 A - 1200 A	2.05 in (52 mm)	±0.8 % ±0.8 % ±0.8 %	- ±1° ±0.5° ±0.3°	EN 61010-2-032, Pollution Degree 2, 600 V CAT IV, 1000 V CAT III
0	MR193-BK (1000 Aac / 1400 Abc) Catalog #2140.28 AC Current Probe with 10 ft lead	1 A - 10 A 10 A - 100 A 100 A - 800 A 800 A - 1200 A 1200 A - 1400 A	1.6 in (41 mm)	±(1.5 % + 1 A) ±3 % ±5%	- ±2° ±1.5°	EN 61010-2-032, Pollution Degree 2, 300 V CAT IV, 600 V CAT III
	MN93-BK (200 A) Catalog #2140.32 AC Current Probe with 10 ft lead	0.5 A - 2 A 2 A - 10 A 10 A - 100 A 100 A - 240 A	0.78 in (20 mm)	±(3 % + 1 A) ±(2.5 % + 1 A) ±(1 % + 1 A)	- ±6 ° ±3 ° ±2 °	EN 61010-2-032, Pollution Degree 2, 300 V CAT IV, 600 V CAT III
0	MN193-BK (100 A) Catalog #2140.36 AC Current Probe with 10 ft lead MN193-BK (5 A) Catalog #2140.36 AC Current Probe with 10 ft lead AmpFlex® 193-24-BK	100 mA - 300 mA 300 mA - 1 A 1 A - 120 A 5 mA - 50 mA	0.78 in (20 mm)	±(0.7 % + 2 mA) ±0.7 % ±(1 % + 0.1 mA)	- ±1.5 ° ±0.7 ° ±1.7 °	EN 61010-2-032, Pollution Degree 2, 300 V CAT IV, 600 V CAT III
		50 mA - 500 mA 500 mA - 6 A		±1 % ±0.7 %	±1°	
00	(6500 A) Catalog #2140.34 Flexible Current Probe with 24 in sensors & 10 ft lead	10 A - 100 A 100 A - 6500 A	7.64 in (190 mm)	±3 % ±2 %	±1 ° ±0.5 °	EN 61010-2-032, Pollution Degree 2, 600 V CAT IV, 1000 V CAT III
60	AmpFlex® 193-36-BK (6500 A) Catalog #2140.35 Flexible Current Probe with 36 in sensors &	10 A - 100 A 100 A - 6500 A	11.46 in (290 mm)	±3 %	±1° ±0.5°	EN 61010-2-032, Pollution Degree 2, 600 V CAT IV, 1000 V CAT III
	10 ft lead  MiniFlex®  MA193-10-BK  (1000 Aac)  Catalog #2140.48	10 A - 100 A	2.75 in (70 mm)	±3 %	±1°	EN 61010-2-032, Pollution Degree 2, 600 V CAT IV, 1000 V CAT III
O,	MiniFlex® Sensor with 10 in sensor & 5 ft lead  MiniFlex®	100 A - 1000 A		±2 %	±0.5°	
0	MA193-14-BK (1000 Aac) Catalog #2140.50 MiniFlex® Sensor with 14 in sensor & 5 ft lead	10 A - 100 A 100 A - 1000 A	3.94 in (100 mm)	±3 % ±2 %	±1°	EN 61010-2-032, Pollution Degree 2, 600 V CAT IV, 1000 V CAT III
6	MiniFlex® MA194-24-BK (1000 Aac) Catalog #2140.80 MiniFlex® Sensor with	10 A - 100 A 100 A - 1000 A	7.64 in (190 mm)	±3 %	±1 °	EN 61010-2-032, Pollution Degree 2, 600 V CAT IV, 1000 V CAT III
	24 in sensor & 10 ft lead	100 A - 1000 A		±2 /0	±0.5	1000 ¥ OAT III

All probes and sensors. For system accuracy calculations, add the probe accuracy to the meter accuracy.

\* Requires BNC adapter Catalog #2140.40



# **SOFTWARE & REPORTS**

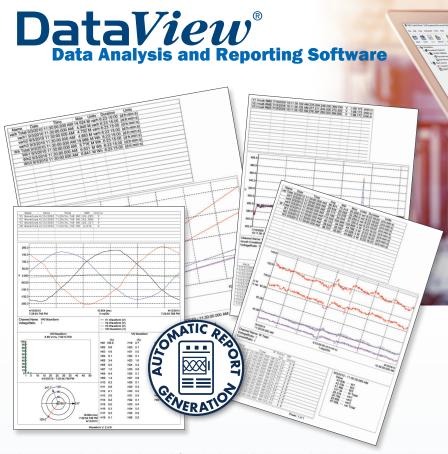

Reports can be displayed on a PC and printed. Each report includes all test results in a tabular and graphic format, as well as operator and test site information. Comments typed by the operator will also be included.



Display waveforms in real time on your computer.

DataView® software provides a convenient way to configure and control power analysis tests from a computer. Through the use of clear and easy-to-use tabbed dialog boxes, all PowerPad® IV Model 8345 functions can be configured and tests can be initiated. Results can be displayed in real-time and stored on a PC. Reports may be printed along with the operator's comments and analysis.

# Configure all functions of the PowerPad® IV Model 8345

- Display and analyze real-time data on a PC
- Configure all PowerPad® functions and parameters from your PC
- Record trend data directly to the PC
- Customize views, templates and reports to meet specific needs
- Create and store a complete library of configurations that can be uploaded to the PowerPad® as needed
- Zoom in and out and pan through sections of the graph to analyze the data
- Display waveforms, trend graphs, harmonic spectrums, text summaries, transients, event logs and stored alarms
- Print reports using standard or user designed custom templates
- Selectively review individual channels, phases on total network recordings
- Keep track of accumulated energy over time and time of use
- Create user-specific cover sheets for reports identifying specific data that includes operator, tests site and narrative associated with the data




# **DATAVIEW® MONITORING**

# Data View Boots and Reporting Software

### The DataView® Control Panel


The monitoring feature allows the user to set up a recording with selected parameters for which specific user-defined pass/fail criteria can be applied. The objective is to set up a measurement chart of relevant parameters and monitor them to establish whether an electrical network of source and loads is within control limits. Monitoring can also be set up without any thresholds for pass/fail criteria. The software structure of set up is flexible and allows the user full customization. The progress of the measurement set up can be viewed in real-time as the measurement is progressing. A customized report can automatically be generated at the end of the monitoring session.

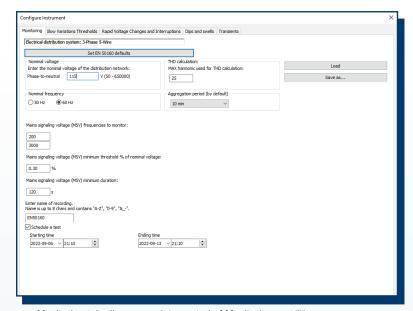

Monitoring tab allows complete control of Monitoring conditions.

### The Control Panel Makes it Easy to:

- Name the Monitoring
- Select Aggregation period from 0.2 s to 2 hrs
- Schedule Monitoring by selecting Start and Stop Date/Time
- Load Parameters from a file
- Save all the Parameters to re-load later
- Edit Power Ratios
- Add to the Parameter list
- Edit conditions for any Parameter
- Delete a given Parameter from the list
- Monitor an active recording session or a saved session
- Reverse current probes that were incorrectly installed

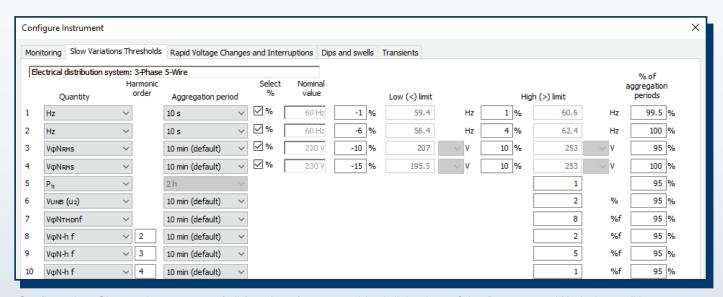


Configuration: Clear and easy setup of all functions from one tabbed dialog box. Select Parameters and Monitoring conditions.




# **CONFIGURATION & ANALYSIS SCREENS**


# ${\sf Data} View^{^{\scriptscriptstyle (\!\! ar a)}}$ Data Analysis and Reporting Software

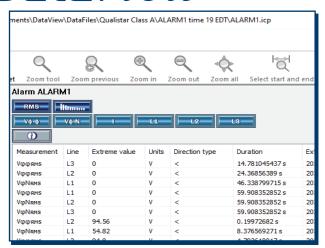


Configure and display alarm parameters, thresholds and tests results.

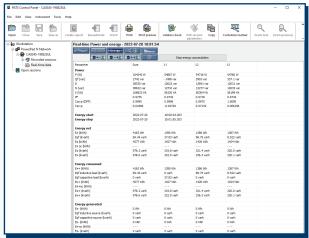


Display power and energy parameters - both instantaneous and total.

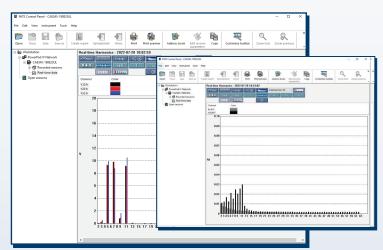


Display all harmonics from 1<sup>st</sup> to 63<sup>rd</sup> or interharmonics from 1<sup>st</sup> to 62<sup>nd</sup> in bar graph form for voltage, current and power.

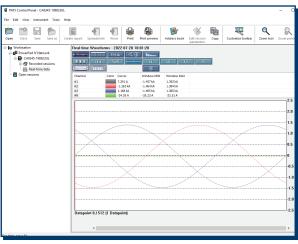

Display real-time waveforms by phase, parameter or total.

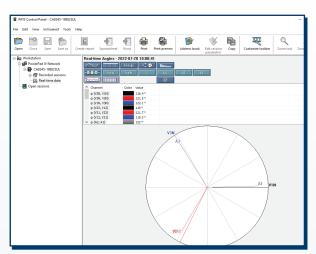

Display real-time phasor diagrams. Includes unbalance for both voltage and current.

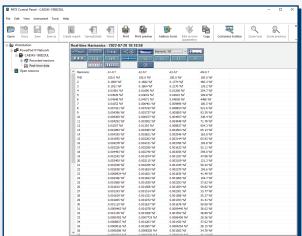


Display harmonics in a text table from harmonic 0 (DC) through the  $63^{\rm rd}$ .




# **CONFIGURATION & ANALYSIS SCREENS**


# ${\sf Data} View^{^{\scriptscriptstyle (\!\! ar B\!)}}$ Data Analysis and Reporting Software

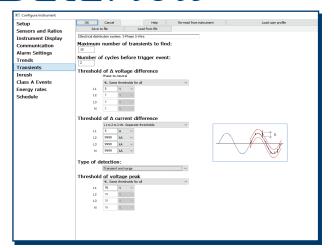


Configure transient voltage and current detection.

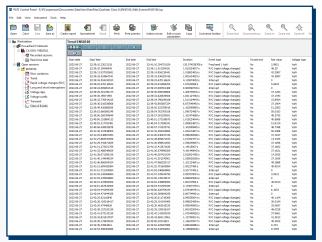


Display Class A list.

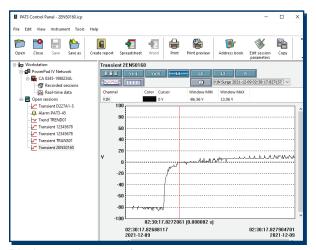

Display transient waveforms.

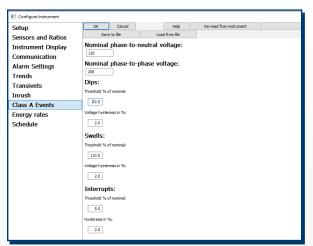

Configure Class A events.

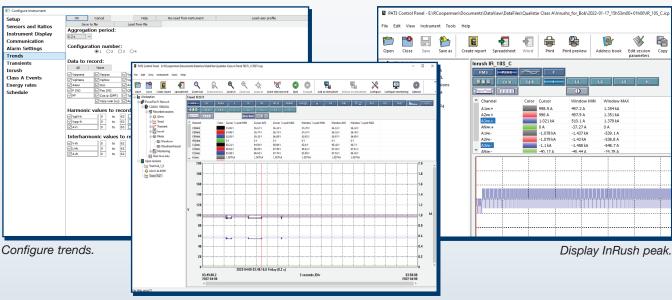

Trend Results.







### **United States & Canada**

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments

15 Faraday Drive Dover, NH 03820 USA Tel (603) 749-6434 Fax (603) 742-2346

### **Customer Support**

Place orders, obtain prices and delivery options (800) 343-1391

customerservice@aemc.com

Sales & Marketing Department sales@aemc.com marketing@aemc.com

### **United States & Canada (continued)**

Repair & Calibration Service repair@aemc.com

Technical & Product
Application Support
(800) 343-1391
techinfo@aemc.com

# South America, Central America, Mexico & the Caribbean

d.b.a. AEMC® Instruments
15 Faraday Drive
Dover, NH 03820 USA

export@aemc.com

Chauvin Arnoux®, Inc.

# Australia & New Zealand Chauvin Arnouv® Inc.

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments

15 Faraday Drive
Dover, NH 03820 USA
export@aemc.com

# All other countries Chauvin Arnoux®

190, rue Championnet 75876 Paris Cedex 18, France Tel 33 1 44 85 45 28

Fax 33 1 46 27 73 89

info@chauvin-arnoux.com www.chauvin-arnoux.com



# **FAMILY of PRODUCTS**

# THE SMART CHOICE FOR ELECTRICAL TEST & MEASUREMENT INSTRUMENTS

To learn more, contact us or visit our website: www.aemc.com

Call the AEMC® Instruments Technical Assistance Hotline for immediate consultation with an applications engineer: (800) 343-1391