

# SELF-AMPLIFIED SPEAKER TO NON-AMPLIFIED SPEAKER WIRING DIAGRAM

For OWI MODELS AMP1S54 and AMP1S64

## Optional Accessories

### INPUT/SOURCE


PROJECTOR,  
LAPTOP, CD,  
DVD or MP3  
PLAYERS



OWI Incorporated  
WWW.OWI-INC.COM  
310-515-1900  
Tech Support  
800.638.1694



Single Input  
Amplifier PC Board  
installed at the back of  
Speaker 1

Note: Speaker 1 wires A & B are factory installed with A connected to the positive and B connected to the negative of Speaker 1. For the 4 speaker combination, please remove the speaker wire from B on the PCboard and connect to C and follow the wiring diagram below for the three (3) non-amplified speakers.

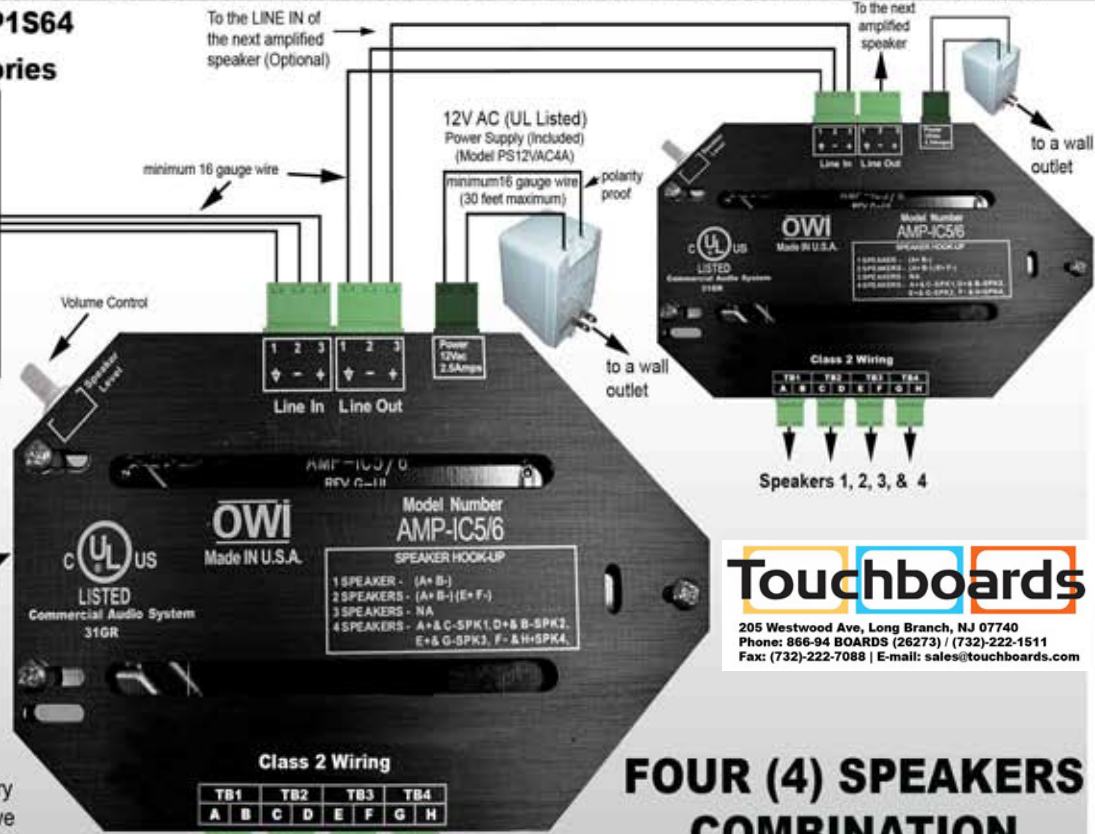

**Touchboards**  
205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

## FOUR (4) SPEAKERS COMBINATION DETAILED WIRING DIAGRAM

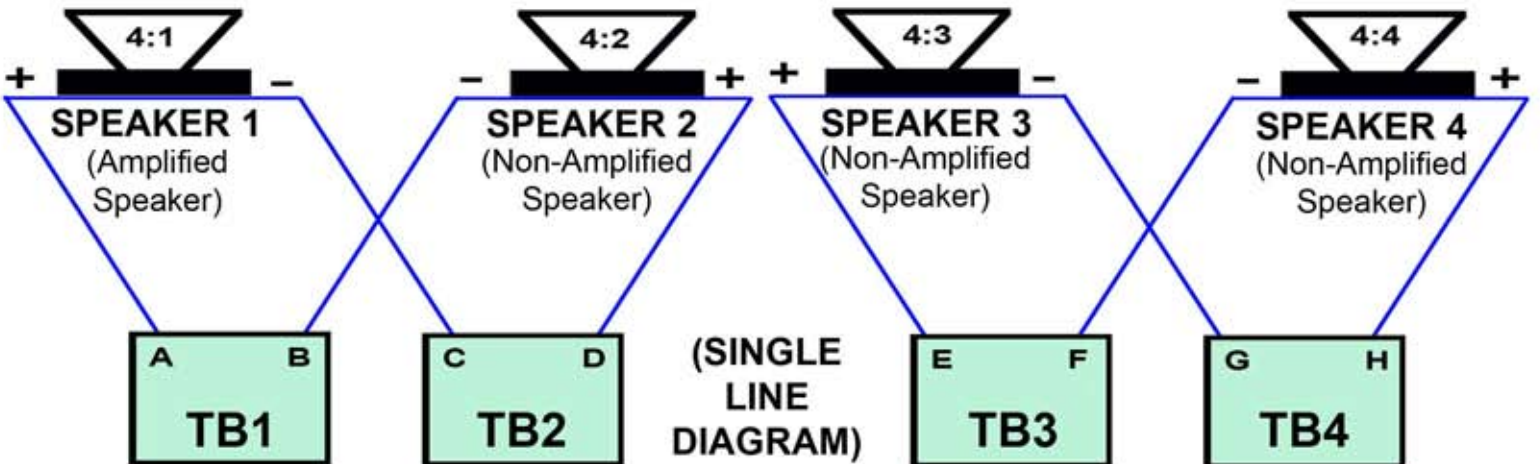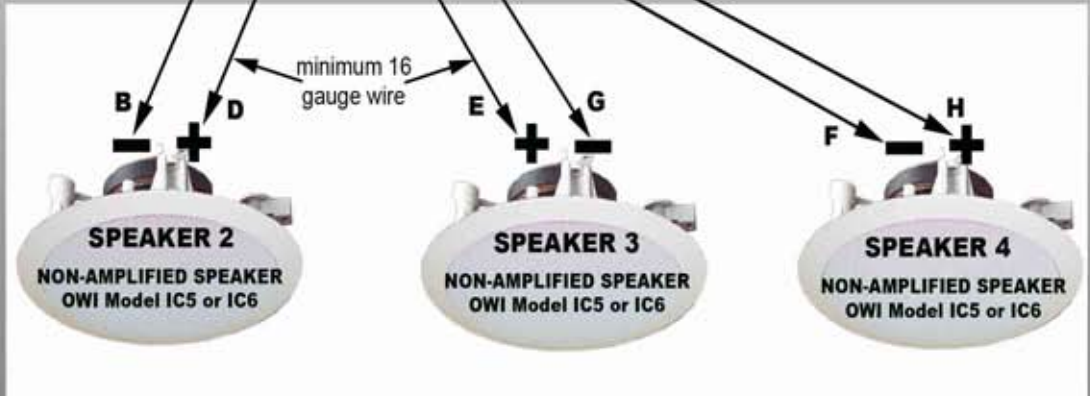

## FOUR (4) SPEAKER HOOK UP