

SELF-AMPLIFIED SPEAKER TO NON-AMPLIFIED SPEAKER WIRING DIAGRAM

For OWI MODELS AMP1S52 and AMP1S62

Optional Accessories

INPUT/SOURCE

PROJECTOR,
LAPTOP, CD,
DVD or MP3
PLAYERS




OWI Incorporated
WWW.OWI-INC.COM
310-515-1900

Tech Support
800.638.1694


Single Input
Amplifier PC Board
installed at the back of
Speaker 1

To the LINE IN of
the next amplified
speaker (Optional)



12V AC (UL Listed)
Power Supply (Included)
(Model PS12VAC4A)
minimum 16 gauge wire
(30 feet maximum)
polarity proof

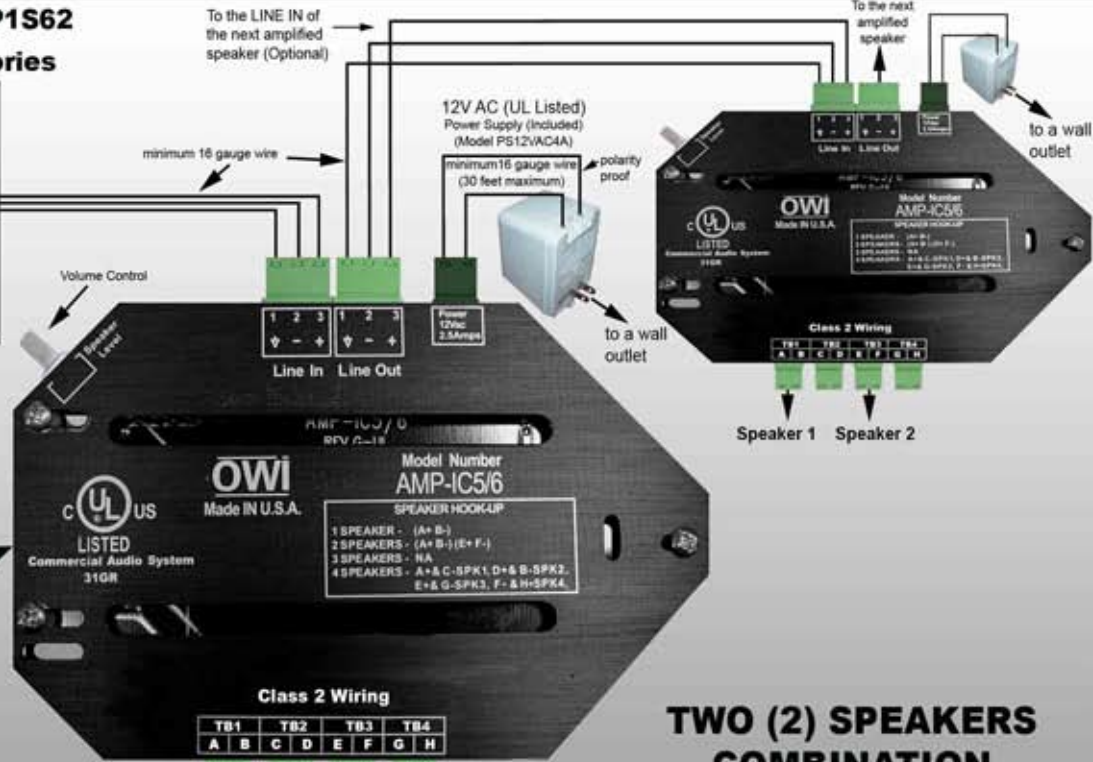


**TWO (2) SPEAKERS
COMBINATION
DETAILED
WIRING DIAGRAM**

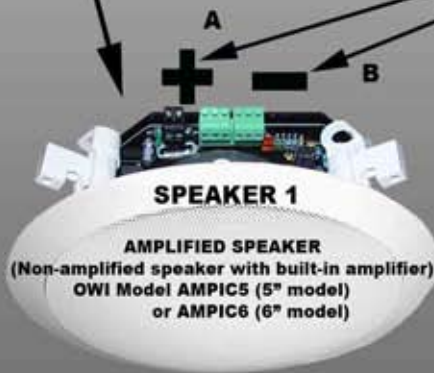

Note: Speaker 1 wires A & B
are factory installed with A
connected to the positive and
B connected to the negative
of Speaker 1.
For Speaker 2, install speaker
wire from E of the pboard to
the positive of Speaker 2 and
from F to the negative of Speaker 2.

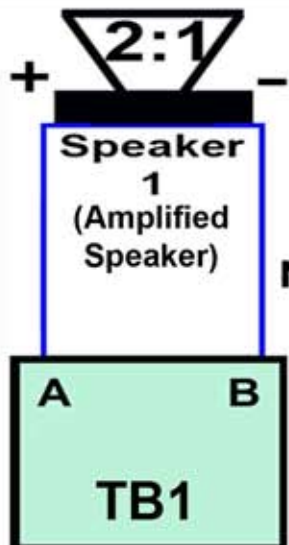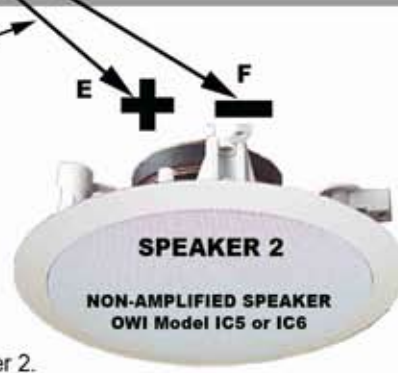

Note: A & B are
factory installed.

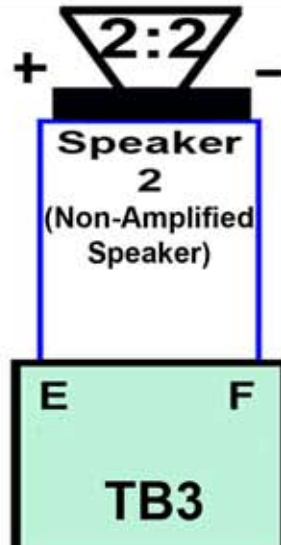

Touchboards
205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

TWO (2) SPEAKER HOOK UP SINGLE LINE DIAGRAM