


## Components at a Glance




### Front of Cabinet (closed)

1. Locking front door to User area.
2. Locking door latch w/padlock bracket.
3. Feet (for countertop installation)

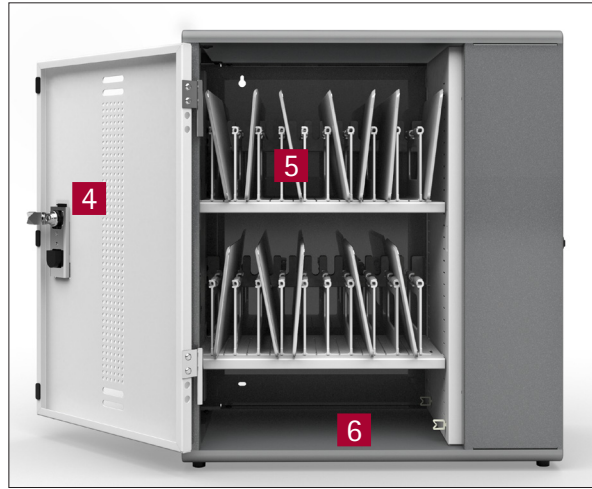

### Front of Cabinet (open)

4. Lock mechanism
5. Bay dividers with Cable Channels
6. Laptop cubby for host computer

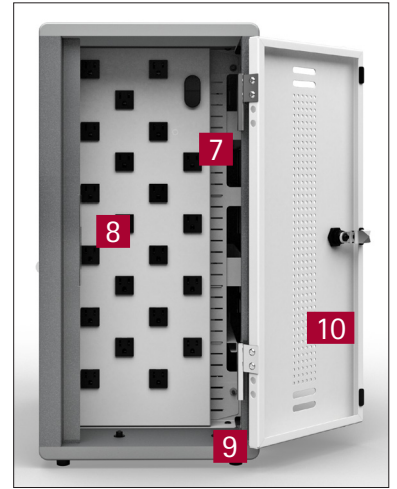

### Side of Cabinet (open)

7. Cord pass-through from front of cabinet
8. Center divider with power outlets
9. Power cord access
10. Locking side door to IT area

## Hello! Thank you for choosing Anthro.

Anthro's Yes Charging Cabinet for Tablets is designed to automatically charge and store tablet, smart phone, and hand-held devices safely and efficiently. This cabinet supports 1-20 devices. Please review this manual before installing your equipment to learn how to use the cabinet safely.

The cabinet is listed to UL Information Technology Equipment 60950-1 safety standard.

AC input: 120VAC 60 Hz. Max amps: 12A.



205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

## Table of Contents

Getting Started .....	2
Safety Notices .....	2
Installing the Cabinet .....	3
Loading Devices .....	6
Troubleshooting Guide .....	7
Warranty .....	7

## Getting Started

### Important Safeguards – We want you to be safe!

These cabinets are electrical devices. Use care with them and follow these important safeguards:

- Electrical devices are not toys. Children are often unaware of the hazards associated with electrical devices, so this unit must always be used by adults or with adult supervision.
- Do not use this unit outdoors.
- Liquids should not be stored in, set on or placed inside this unit.
- Never unplug this product from the outlet when your hands are wet.
- Set the power switch to the down OFF position before you unplug the unit from the wall, plug the unit into the wall, or plug in devices.
- Be careful with the power cord. Do not jam the power cord against sharp edges. Do not use the unit if the cord appears to be damaged or if the ground prong is missing. When the unit is not plugged in, wrap the power cord and store in the IT area.
- Do not use an extension cord with this unit.
- Inadequate repair can create significant hazards to users and is not covered by the warranty. Repairs should always be performed by a qualified electrician.

### Electrical Testing

- Before using your new charging cabinet, have a qualified electrician verify the current draw does not exceed the rating of the unit when all the devices are installed.
- Test the contact integrity of the wall outlet using a receptacle tension tester such as a Woodhead 1760 or a Safeplug 1700.
- Test the branch circuit for ground integrity and branch circuit protection.
- Do not plug in the unit if the switch, receptacles, or power cord have been damaged or if the ground prong is missing from the plug. If repairs are ever needed, they should be performed by a qualified electrician.

### Doors and Locks

The front doors on each cabinet feature a two-point keyed locking system to protect your devices. To open a door, lift the bottom of the handle and rotate it to the inside of the unit. Your unit shipped with 2 keys. Contact Anthro, 800.325.3841, for replacements.

For added security, each front door features a padlock bracket to hold your own padlock. When installed, your padlock restricts access to the handle so the unit can't be opened.



Please return the enclosed Registration Card to receive our product updates, new catalogs, sale flyers, and the chance to **win \$300** worth of Anthro furniture.



# Installing the Cabinet

## STEP 1

### Select the Mounting Location and Method

- When choosing the right place to install your cabinet, be sure to check the location of your power source. The power cord that comes with your cabinet is 10 ft long.
- Your cabinet can be wall-mounted to wood wall studs or drywall, or bolt it to a countertop. If you're installing to wood wall studs, go to Step 2. If you're installing into drywall, go to Step 3. If you're bolting to a countertop, go to Step 4. The cabinet also comes with cushioned feet; use them if you're placing your cabinet on a flat surface. See Step 5 for installation instructions.

 


## STEP 2

### Wall-mount to Wood Wall Studs

*This is a two-person step.*

- Determine the installation point for your cabinet. Using a stud finder, locate the studs. While one person holds the cabinet frame up to the wall at the desired height, the other marks the height of the top of the cabinet. Measure down 1-1/2" along the studs to determine the position of the screws and mark where the screws will go. Use a level to make sure the marks are level.
- Using a 1/8" drill bit, drill one hole in a stud about 1-1/2" deep. How do you make sure that hole is 1-1/2" deep? Measure that length on your drill bit and mark it with a piece of masking tape. Stop drilling when you reach the masking tape. Repeat for the second screw.
- Using a Phillips driver (or a power driver with a Phillips bit), attach the first 1-5/8" long screw at that mounting point, but don't tighten all the way to the wall. Stop tightening when the screw head is about 1/4" away from wall.
- Lift the cabinet onto the wall. Mark the screw position of the lower screws. Remove the cabinet, drill the lower holes, and install the lower screws. Lift the cabinet into place and tighten all four screws.

Wall Stud Profile

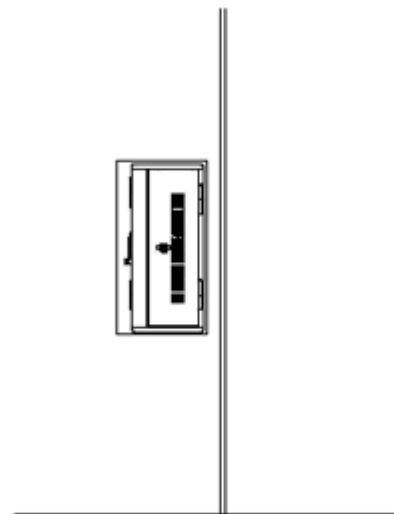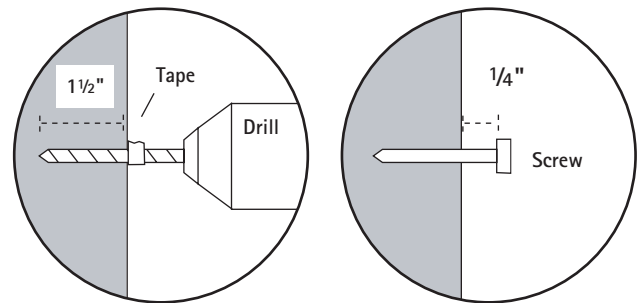


1-5/8" Screw  
325-5086-00

Go to Step 6.

## STEP 3

### Wall-mount to Drywall

- Determine the installation point for your cabinet. While one person holds the cabinet frame up to the wall at the desired height, the other marks the height of the top of the cabinet. Measure down 1-1/2" to determine the position of the screws and mark where the screws will go. Use a level to make sure the marks are level.
- Drill 1/2" diameter hole at the mounting point.
- Insert a TOGGLER into one hole, metal end first.
- Pull the plastic ring end so the metal channel rests flush behind the wall. With your other hand, slide the plastic cap along the straps until the flange of the cap is flush with the wall.
- Place your thumb between the plastic straps. Push side to side, snapping off the straps at the wall.
- Insert a 1-5/8" long screw into the TOGGLER, but don't tighten all the way. Leave the bolt head about 1/4" from the plastic cap.
- Repeat for the second TOGGLER.
- Lift the cabinet onto the wall. Mark the screw position of the lower screws. Remove the cabinet and install the lower TOGGLERS. Lift the cabinet into place and tighten all four screws.

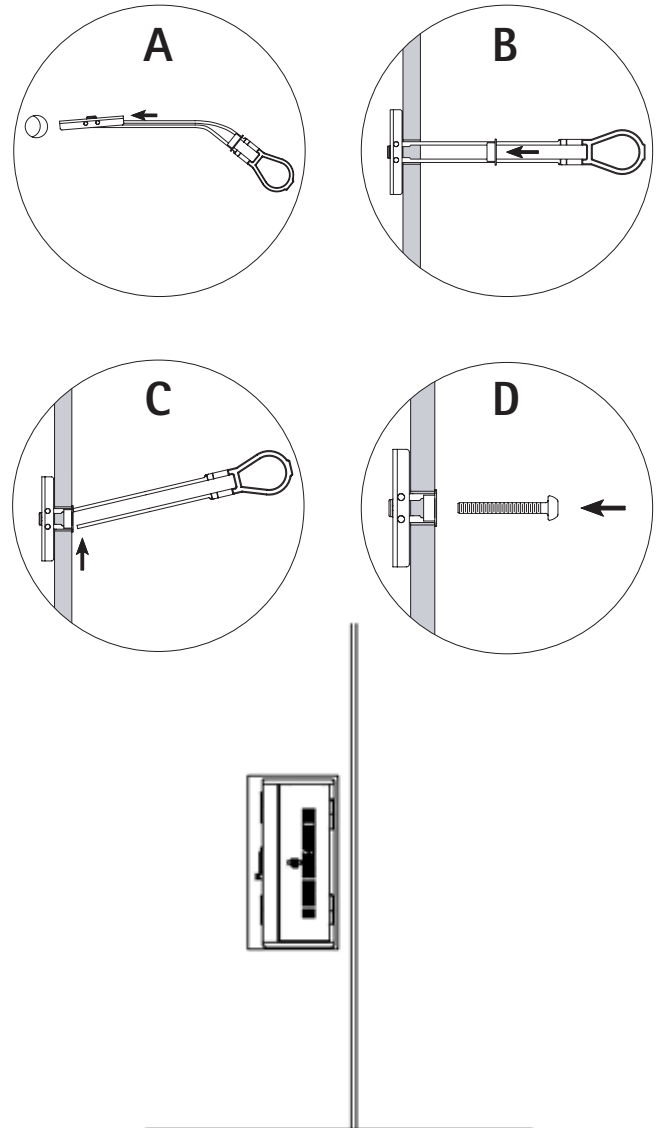


Go to Step 6.


## STEP 4
 
### Bolt-through Installation to Countertop


- Pre-drill a 1/4" dia hole in your countertop or shelf.
- Using a box knife, slice through the membrane covering the pre-drilled holes on the bottom of the cabinet.
- Slide the 3.5" bolt through the washer, through the bottom of the cabinet, through the countertop, and capture with the 325-5259-00 nut.



 3.5" Bolt  
325-5657-00



5/8" Washer  
325-5379-00

 

1/4-20 Nylock Nuts  
325-5259-00


Go to Step 6.

---

## STEP 5
 
### Install Feet

- Stick a 3/4" wood screw through each rubber bumper (581-5063-00).
- Locate the four pre-drilled holes on the bottom of the cabinet, one in each corner. Using the Anthro driver, attach each foot to the cabinet.



3/4" Button Hd PB Screw  
325-5575-00

---

## STEP 6


### Install the Bay Labels and Route Cables

- Your cabinet comes with labels for numbering the bays in your cabinet. Line up each label with the front face of the bay shelf, peel of the backer, and affix the label.
- Starting at the far left-hand side of each shelf, route one cord through the channel at the top of the divider. The right-hand divider on each shelf will not have a cord. Make sure the cord end that goes into the device is at the front of the cart and the power end goes through the back panel and into the IT area. Leave enough slack in front so users have enough cord to easily plug into the device without straining the cord. To quickly measure an adequate length, use the height of the divider as a measuring stick.
- In the IT area, poke cable clips into the holes in the pegboard divider and route cords. Plug in each power adapter, then connect each cord to an adapter. Turn the power switch to the OFF position before plugging the cart or cabinet into the wall.

# Loading Devices, Cable Management

## In the front User area of the cabinet

- Check that the vertical spacing of the shelves fits your devices. To adjust shelf height, the Anthro driver to loosen (not remove) the 2 screws that attach the left side of the shelf. Lift the left side off the screws and pull the shelf to the left to free the tabs on the right. Set aside the shelf. Remove and reinstall the screws and shelf at the desired height. [Image A]
- Check the position of the Cable Comb located at the back of the shelf. Is it at the right height? If not, reposition it! Remove the two fasteners on the left side using the Anthro driver and set them aside. Lift the left side of the comb and pull the piece to the left to free the tabs on the right. Reinstall the screws at the desired height, then reinstall the comb.
- Check that the horizontal spacing of the bay dividers fits your devices and cases. To move the dividers and adjust the bay width, press back on the divider tab under the shelf that connects the divider to the shelf until the divider pops free. If your fingers don't fit, try a flat-head screwdriver. To install the divider, angle the divider into a slot at the back of the shelf, then tilt the divider into place at the front of the shelf. [Image B] Number each bay with the provided labels.

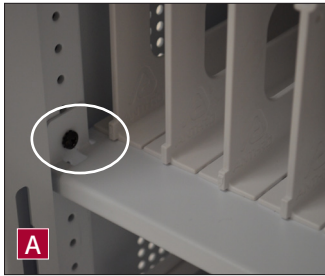

- To route the cords, route one charging cord along the top of each divider. Make sure that the cord end that goes into the device is at the front of the bay and the power end goes through the center panel and into the IT area.
- Leave enough slack in front (approximately 4.5"; use the height of the divider as a measuring stick) so users can plug in the device without straining the cord. [Image C]
- Weave the cord around the short hook at the front of the divider, then back and forth through the three long channels along the top of the divider, including the center channel that's lower than the others, and finally through the short hook at the back of the divider. [Image D and E]



## In the side IT area of the cabinet

- Plug in each power adapter, then use Cable Ties provided to organize excess cord length. [Image F]
- A great technique for coiling cables is to wind them around two fingers before securing them in the cable ties. Be sure to leave enough slack in your cord so it can plug into the adapter.
- Turn the power switch to the OFF position before plugging the cabinet into the wall. [Image H]



**CONGRATULATIONS! YOUR CABINET ASSEMBLY IS COMPLETE!**



## Troubleshooting Guide

### Does it sync?

Yes, Anthro's cabinets sync. Use either your facility's wireless network or, for a wired connection, use Anthro's USB Sync Kit (sold separately). Learn more at [anthro.com/tablet](http://anthro.com/tablet).

### How do I know if my devices will draw more than the allowed current?

Have a qualified electrician verify the unit's current draw. Perform this test with devices installed and batteries discharged.

### The devices are all plugged in, but they won't charge.

#### What do I do?

First, check the cabinet: With the switch in the down OFF position, inspect the main power cord and plug to make sure that they're undamaged. Plug the cord into a working power outlet. Next, check the devices: Verify that each device is connected to its power adapter and that each brick is plugged into the power column. Move the switch to the up ON position to direct power to the devices. Still need some help? Call Anthro at 800-325-3841 for assistance.

### Someone tried to break into the unit and damaged a door.

#### Can it be replaced?

Yes, you can order a replacement. Call Anthro at 800-325-3841. We'll ask you for the model number of your unit and whether it's for the front or side of the unit.

### My power cord/plug is damaged. Is it covered under warranty?

No, it is not covered under warranty. If the plug is damaged, have a qualified electrician replace it. If you need a replacement cord, contact Anthro at 800-325-3841.

### When I plug in the unit it trips the circuit breaker. What is wrong?

The cabinets are designed to run on a 15 amp circuit. If you have other equipment or appliances plugged into the same circuit you may be overloading it. Have a qualified electrician check that adequate power is available in the circuit.

### My unit was damaged during shipment. What should I do?

Please contact Anthro at 800.325.3841 and we'll work with you.

### How do I find the unit's serial number?

The serial number label is located inside the IT area near the base.

### Can I remove a bay divider?

Yes! Locate the tab at the base of the front of the divider. Place a piece of masking tape on the shelf in front of the tab to protect the shelf's finish, then carefully and gently pry up the tab using a narrow flat-head screwdriver.

## Anthro Corporation Limited Warranty

### What Does This Warranty Cover?

This warranty covers any defects in material or workmanship in Anthro Yes Cabinets.

### Who is Covered By This Warranty?

This warranty extends to the original consumer of the product only.

### How Long Does This Warranty Last?

The warranty lasts for five years from date of purchase for the electrical components (excluding the data cables, power cord and plug) and lifetime for the enclosure.

### What Will Anthro Do?

Anthro will send replacement parts only. Labor is not included.

### What Is Not Covered By This Warranty?

This warranty does not cover the power cord. This warranty does not cover product that has been damaged by accident, unreasonable use, neglect, inadequate repair, tampering or other causes not arising from defects in material or workmanship FOR AS LONG AS THE WARRANTY PERIODS LISTED ABOVE. Labor costs are not included. This includes but is not limited to the implied warranties or merchantability and fitness. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

### ANTHRO'S RESPONSIBILITY IS LIMITED TO THE ACTIONS LISTED UNDER "What Will Anthro Do?" AS LISTED ABOVE AND NOTHING ELSE.

This warranty does not cover, and Anthro will not be responsible for, any damages you may have due to loss of use of the product, or any other costs or expenses incurred by you or anyone else who uses the product, whether due to defects, breach of contract, negligence, strict liability or otherwise. ANTHRO IS NOT LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RELATED TO THE PRODUCT OR THIS WARRANTY. Some states do not allow the exclusion or limitations or consequential or incidental damages, so these limitations or exclusions may not apply to you.

### How Do I Get Service?

Call Anthro at 1-800-325-3841.

### How Does State Law Apply To This Warranty?

This warranty gives you specific legal rights and you may also have other rights that vary from state to state. This warranty is governed by the laws of Oregon, excluding its conflict of laws principles, unless your state requires that its law be used.



Anthro Corporation® | 10450 SW Manhasset Dr. | Tualatin, OR 97062  
Toll-free: 800.325.3841 | Fax: 800.325.0045 | email: sales@anthro.com | anthro.com  
Outside the U.S. | Tel: 503.691.2556 | Fax: 503.691.2409



**Touchboards**

205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Thank you for choosing Anthro!



300-5620-00

January 2015

Please return the enclosed  
Registration Card to receive  
our product updates, new  
catalogs, and sale flyers.



800.325.3841