



Changing The Way You Think About Carts

Users Guide for AC-PRO II

Thank you for choosing Anywhere Cart!

The AC-PRO II is designed to charge and store 1-40 Chromebooks, tablets, and laptops, plus an additional device for a teacher. Adjustable device divider bays allow fitment of any width device in 1/2" increments.

Please review this manual before installing your equipment to learn how to safely use your cart.

AC input: 120V AC 60 Hz
Max amps: 15A
Max wattage: 1875W

Identifying Components



Front of Cart (closed)

1. Locking Teacher's Drawer
2. Push Handle
3. Door Lock Latch w/ Padlock Flange
4. Cord Wrap w/ Power Cord
5. 5" Swivel / Lock Casters
6. 5" Fixed Casters



Front of Cart (open)

7. Adjustable Dividers
8. Sliding Device Shelves
9. Lower Bumpers (option)



Back of Cart (open)

10. External Power Outlets
11. External Power Switch
12. Power Outlet Strips
13. AC Adapter Baskets
14. Cord Pass-Through Slots
15. Cycle Timer



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com



Please follow these important safety tips:

- Do not allow children to push, pull, climb or sit on or touch any part of the electrical system.
- Do not use this unit outdoors.
- Liquids should not be set on or placed near the cart.
- Never unplug the cart from the outlet when your hands are wet.
- Set the power switch to the OFF position before you unplug the unit from the wall, plug the unit into the wall, or plug in devices.
- Do not use an extension cord with this unit.
- Improper repairs can create significant hazards to users and is not covered by the warranty. Repairs should always be performed by a qualified electrician.
- Always latch doors before moving the cart.
- Never use the power cord to pull the cart.
- Never roll the cart over the power cord.
- If external devices are set on top of the cart, remove them before rolling cart around.
- Before using any new charging cart, have a qualified electrician verify the current draw does not exceed the rating of the unit when all the devices are installed.
- Never plug in the cart if the switch, receptacles, or power cord are broken, cracked, torn or inadequately repaired.

IMPORTANT: The electrical system is designed to handle a MAXIMUM of 1875 Watts at one time

1. Before initial setup, IDENTIFY the wattage of your device's power adapter. Multiply this number by the number of devices being charged.

$$\begin{array}{r} 65 \text{ Watts} \\ \times \\ 40 \text{ Devices} \\ \hline 2600 \text{ Watts} \end{array}$$



2. Determine which EXTERNAL devices, if any, will be used and IDENTIFY the wattage.

$$\begin{array}{r} 257 \text{ Watts} \\ \times \\ 1 \text{ Device} \\ \hline 257 \text{ Watts} \end{array}$$



3. Add device power adapter wattage total and the external device total:

- If the combined total wattage is under 1875 Watts, any mode can be selected.
- If over 1875 Watts, **DO NOT USE YOUR TIMER IN "C" - ALL ON MODE.** Divide device wattage by 2, then add EXTERNAL devices. If under 1875 Watts, use "A" Mode or "B" Mode.
- If the total device wattage divided by 2, plus the external devices is over 1875 Watts, remove devices as needed.



$$\begin{array}{r} 2600\text{W} \text{ Devices} \\ + 257\text{W} \text{ Projector} \\ \hline = 2857\text{W} \text{ TOTAL} \\ \text{Do Not Use "C" Mode} \end{array}$$



$$\begin{array}{r} 2600\text{W} \text{ Devices} \\ \div 2 \\ \hline = 1300\text{W} \text{ Half Devices} \\ + 257\text{W} \text{ Projector} \\ \hline = 1557\text{W} \text{ TOTAL} \\ \text{Use "A" or "B" Modes} \end{array}$$

NOTE: If wattage exceeds 1875W at one time, the charging system will not operate correctly. Remove devices as needed until the total wattage is under 1875W.

Installing Handles & Bumper Option

1. Open the front of the cart and remove the cardboard box containing the handles. Locate the threaded handle bolts.



2. Using the supplied hex key, install both handles. Make sure not to overtighten bolts.



3. If equipped with the bumper option, locate the bumper kit and threaded bolts.



4. Using the supplied hex key and threaded bolts, install bumpers on corners.



Setting Up Your Devices (Front)

Device slots come set at 1" wide and are adjustable in 1/2" increments to fit any device width.

1. Using a ruler, measure the thickest part of your device. If it is less than 1" thick, skip to Step 3: Power Adapter Setup.




2. If your device is thicker than 1", locate & remove thumbscrew by turning counter clockwise.



3. Slide Retaining Strip forward & out of the way. Strip can be removed if needed.



4. Pulling forward, then up, remove divider panel.

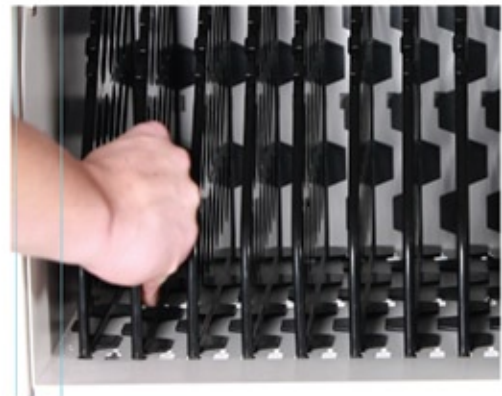

5. Adjust spacing as needed in 1/2" increments.



6. Slide retaining metal strip into place & replace thumbscrew.



Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Setting Up Your Devices (Back)

1. Remove basket by pulling forward first, then pull upward.



2. If your device power adapters are "wall wart" style, plug into outlets & skip to step 5.




3. If your device power adapters are "brick" style, feed power cables thru holes.



4. Hook basket(s) back in place & plug power cables into outlets.



5. Feed device cables thru pass-thru slots.

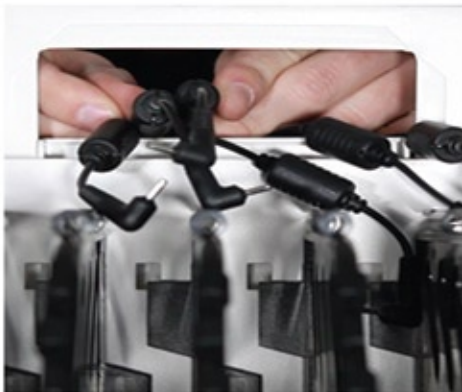


6. Working up front, weave device cables into divider tabs.




IMPORTANT: The electrical system in your cart is designed to handle a **MAXIMUM of 1875 Watts.**
 In order to reduce the risk of overloading, if your device's power adapters draw more than 45 Watts each, **use Cycle Mode 1 or 2 ONLY.**

CYCLE TIMER

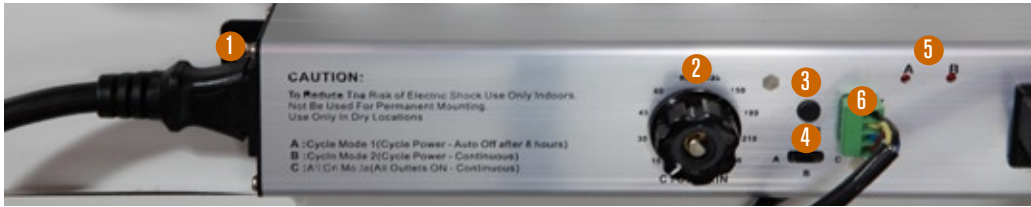

1. Power Cord Inlet
2. Timer Duration Dial
3. Internal Power Button
4. Timer Mode Switch
5. LED Indicators
6. External Switch Cable


A: Cycle Mode 1 Cycle power, Auto OFF after 8 hours of operation.

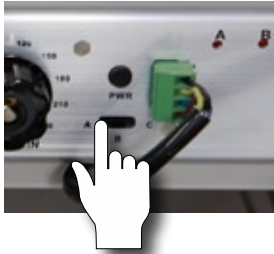

Move the Timer Mode Switch to the "A" position.



Turn the Timer Duration Dial to the desired cycle duration time (in minutes).

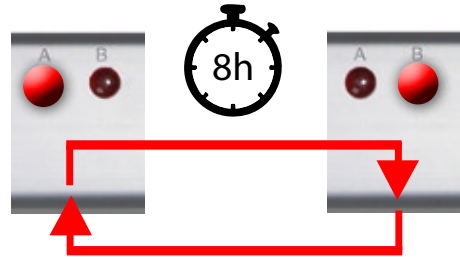


"A" LED illuminates and charges half the cart for set duration, then cycles to "B" until 8 hours is reached.


B: Cycle Mode 2 Cycle power until switched off or unplugged.



Move the Timer Mode Switch to the "B" position.

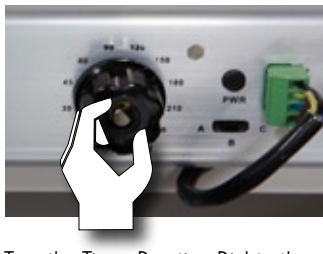

Turn the Timer Duration Dial to the desired cycle duration time.

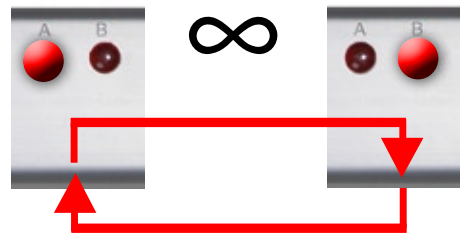

"A" LED illuminates and charges half the cart for set duration, then cycles to "B" until manually turned off.

C: ALL ON Mode Both LEDs illuminate and all power strips are active until switched off.



Move the Timer Mode Switch to the "C" position.



Both "A" and "B" LED illuminate and charges all devices until manually turned OFF.




IMPORTANT:
 If your device's **TOTAL** power draw exceeds 1875 watts
Do Not Use "C" ALL ON MODE

Turning ON the Charging System



1. Plug power cord into outlet.

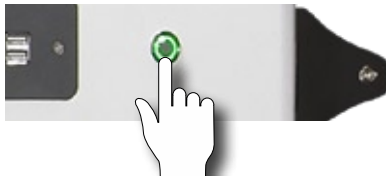


2. Press button located on the upper right side of the back of the cart. Switch will illuminate.


Timer Troubleshooting

Cart won't turn on when External Power Switch is pressed:

1) With the cart UNPLUGGED from the wall, open the rear panel door. Locate power cord inlet and verify it is securely plugged in.

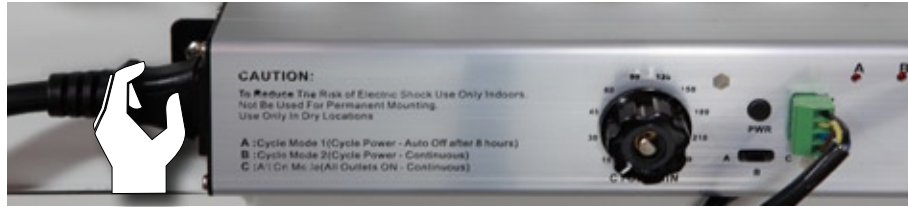

2) Plug cart into wall and press the internal "PWR" button. If Timer is operational, but External Switch is not, verify the External Switch Cable is secure and try External Power Switch again.

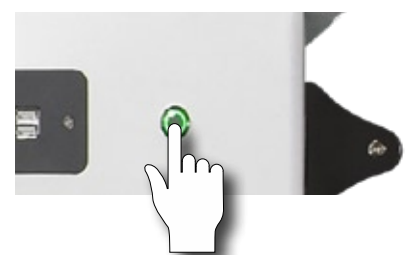


Timer is operational but devices are not charging:

1) With the cart UNPLUGGED from the wall, open the rear panel door. Check power strip cords going INTO the timer are securely plugged in.



2) Plug cart into wall, move Timer Mode Switch to "C" and press the "PWR" button. Verify all 4 power strips inside cart are illuminated.

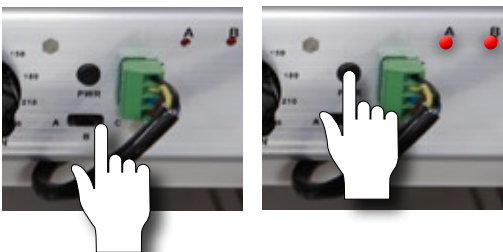



205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Limited Warranty

1. The terms below shall have the following definitions for purposes of this Warranty:

"Client" means the original party purchasing the Products from Anywhere Cart or from an authorized dealer to sell Anywhere Cart branded products.

"Components" mean the mechanical components of a Product including the wheels, locks, drawer slides and hinges.

"Electronics" mean the electronic timer, Sync station and power strips. Cords and switches are not warranted.

"Frame" means the main frame or chassis of a Product.

"Products" means any goods and any related services to be supplied by Anywhere Cart to the Client pursuant to the Acceptance of an Order and any other goods or services which Anywhere Cart supplies to the Client from time to time.

Anywhere Cart warrants that the Products to be supplied to Client are free from defects in material and workmanship under normal use and service for which they were intended if, but only if, the Products have been properly installed and operated. Anywhere Cart's obligation under this Warranty is limited to only supplying replacement part(s) for any part(s) which are returned and found to be defective, provided that such part(s) are returned to Anywhere Cart within the following Warranty Period:

- a. With regard to the Frame, the Warranty Period shall be for the life of the Product to Client.
- b. With regard to Components, the Warranty Period shall be for a period of two (2) years from the date of delivery of the Product to Client.
- c. With regard to Electronics, the Warranty Period shall be for a period of two (2) years from the date of delivery of the Product to Client.

Except as prohibited or limited by applicable law, Anywhere Cart does not warrant that the Products meet the requirements of any safety code of any country, state, municipality, or other jurisdiction, and Client assumes all risk and liability whatsoever resulting from the use thereof, whether used singly or in combination with other machines or apparatus. This Warranty shall not apply to any of Anywhere Cart's Products, or parts thereof, which have been repaired or altered, without Anywhere Cart's written consent, outside Anywhere Cart's facility or altered in any way so as, in the sole judgment of Anywhere Cart, to adversely affect the stability or reliability of the Products, or if such Products have been subject to misuse, negligence, or accident, or have been operated in a manner not in accordance with Anywhere Cart's printed instructions or have been operated under conditions more severe than, or otherwise exceeding, those set forth in the specifications for such Products.

EXCEPT AS PROHIBITED OR LIMITED BY APPLICABLE LAW, THIS WARRANTY AND THE OBLIGATIONS AND LIABILITIES OF Anywhere Cart ARE EXCLUSIVE AND IN LIEU OF WARRANTIES, GUARANTIES OR LIABILITIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY FOR MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ARISING BY LAW OR OTHERWISE OR WHETHER OR NOT OCCASIONED BY Anywhere Cart's NEGLIGENCE AND CLIENT HEREBY WAIVES ALL REMEDIES NOT EXPRESSLY PROVIDED IN THIS WARRANTY. THIS WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY A WRITTEN INSTRUMENT SIGNED BY Anywhere Cart AND CLIENT. REGARDLESS OF THE FAILURE OF THE SOLE AND EXCLUSIVE REMEDIES PROVIDED IN THIS WARRANTY, Anywhere Cart WILL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF REVENUE, BUSINESS OR PROFITS, LOSS RESULTING FROM BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, LOSS RESULTING FROM ANY CLAIM BY ANY THIRD PARTY, ANY LOSS DUE TO DAMAGE TO PROPERTY, AND INJURY TO OR DEATH OF ANY PERSONS RESULTING, DIRECTLY OR INDIRECTLY, FROM THE USE OR LOSS OF THE PRODUCTS OR ANY OTHER PECUNIARY LOSS) OF ANY KIND OR NATURE. Anywhere Cart NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OR USE OF THE PRODUCTS, AND THERE ARE NO ORAL AGREEMENTS OR WARRANTIES COLLATERAL TO OR AFFECTING THIS WARRANTY. THE EXCLUSION OF SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES IS AN INDEPENDENT AGREEMENT OF Anywhere Cart AND CLIENT APART FROM THE SOLE AND EXCLUSIVE REMEDIES PROVIDED IN THIS WARRANTY.

Client shall notify Anywhere Cart by registered or certified mail, return receipt requested, of a breach of this Warranty within thirty (30) days after discovery thereof, but not later than the expiration of the applicable Warranty Period, otherwise such claims shall be deemed waived.

2. Limitations of Warranty.

Anywhere Cart makes no warranties to any third party. You are responsible for all claims, damages, settlements, expenses, and attorneys' fees with respect to claims made against You as a result of Your use or misuse of the Product. This warranty applies only if the Product is installed, operated, maintained, and used in accordance with Anywhere Cart specifications. Specifically, the warranties do not extend to any failure caused by (i) accident, unusual physical, electrical, or electromagnetic stress, neglect or misuse, (ii) fluctuations in electrical power beyond Anywhere Cart specifications, (iii) use of the Product with any accessories or options not furnished by Anywhere Cart or its authorized agents, or (iv) installation, alteration, or repair of the Product by anyone other than Anywhere Cart or its authorized agents.

3. Disclaimer of Warranty.

Except As Expressly Provided Otherwise Herein And To The Maximum Extent Permitted By Applicable Law, Anywhere Cart Disclaims All Other Warranties With Respect To The Product, Whether Express, Implied, Statutory Or Otherwise, Including Without Limitation, Satisfactory Quality, Course Of Dealing, Trade Usage Or Practice Or The Implied Warranties Of Merchantability, Fitness For A Particular Purpose Or Noninfringement Of Third Party Rights.

4. Limitation of Liability.

In no event shall Anywhere Cart be liable for indirect, incidental, special, exemplary, punitive, or consequential damages of any nature including, but not limited to, loss of profits, data, revenue, production, or use, business interruption, or procurement of substitute goods or services arising out of or in connection with this limited warranty, or the use or performance of any product, whether based on contract or tort, including negligence, or any other legal theory, even if Anywhere Cart has advised of the possibility of such damages. Anywhere Cart's total, aggregate liability for damages of any nature, regardless of form of action, shall in no event exceed the amount paid by you to Anywhere Cart for the specific product upon which liability is based.

5. Governing Law and Your Rights.

This warranty gives You specific legal rights; You may also have other rights granted under state law. These rights vary from state to state.

6. Warranty Period for Anywhere Cart Product Purchased:

AC-PRO II, AC-SLIM, AC-SYNC, AC-MINI, AC-MAX, AC-PLUS	Lifetime Frame, 2 Years Components, 2 Year Electronics
---	--