



Heavy Duty VESA Tilt Head

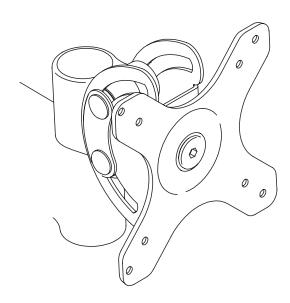

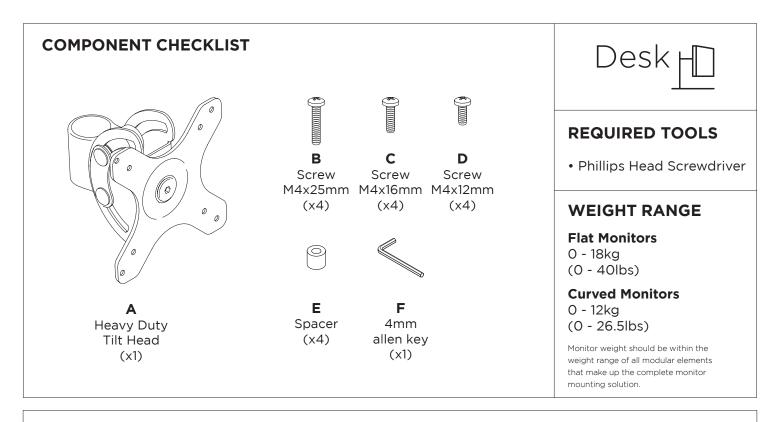


IMPORTANT INFORMATION


- ! Please ensure this product is installed as per these installation instructions.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is compatible with Atdec AWM Series products.
- ! Curved monitors, deep devices (such as all-in-one PCs) and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.


1. Attach VESA head to monitor

1.1 Screw the VESA head onto monitor

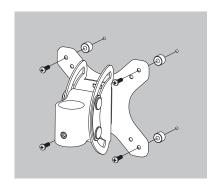

Note: Spacers may be required for curved, recessed or uneven monitor surfaces.

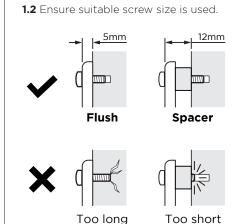

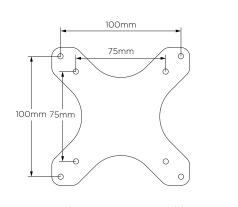


Note: For other sizes, use a suitable adaptor plate


1.3 VESA mounting compatibility

2. Mount monitor onto arm


2.1 Push tilt head onto the shaft at the end of the monitor arm.

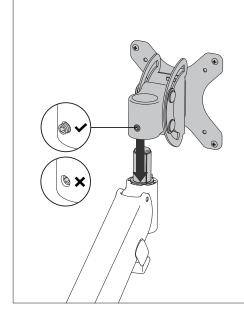

2.2 Ensure tilt head is fully pushed onto shaft.

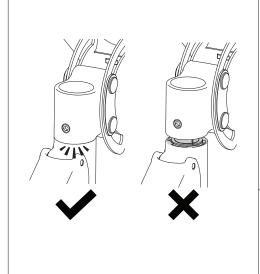

2.3 Tighten the joint screw to secure the tilt head and monitor in place.

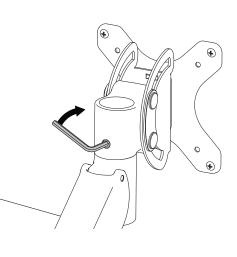

Note: Check the arm rotation is smooth after tightening.

3. Adjust tilt tension

