

KN4164V/KN8132V/KN8164V KVM over IP Switch Quick Start Guide

© Copyright 2015 ATEN® International Co., Ltd.
ATEN and the ATEN logo are trademarks of ATEN International Co., Ltd. All rights reserved. All other trademarks are the property of their respective owners.

This product is RoHS compliant.

Part No. PAPE-1223-D70G Printing Date: 05/2015



KN4164V / KN8132V / KN8164V KVM over IP Switch Quick Start Guide

www.aten.com

Hardware Review A


Front View

1. Power LEDs
2. Port LEDs
3. LAN LEDs
4. Laptop USB Console (LUC) Port
5. USB Ports
6. Reset Switch
7. Audio Ports
8. Port Switching Buttons

Rear View

1. Power Sockets (With holes for Lok-U-Plug cable holders)
2. Power Switches
3. Secondary LAN Port
4. PON Port
5. Primary LAN Port
6. Serial Port
7. Local Console Ports
8. KVM Ports
9. Grounding Terminal
10. Reserved for Remote Console Port

A Hardware Review

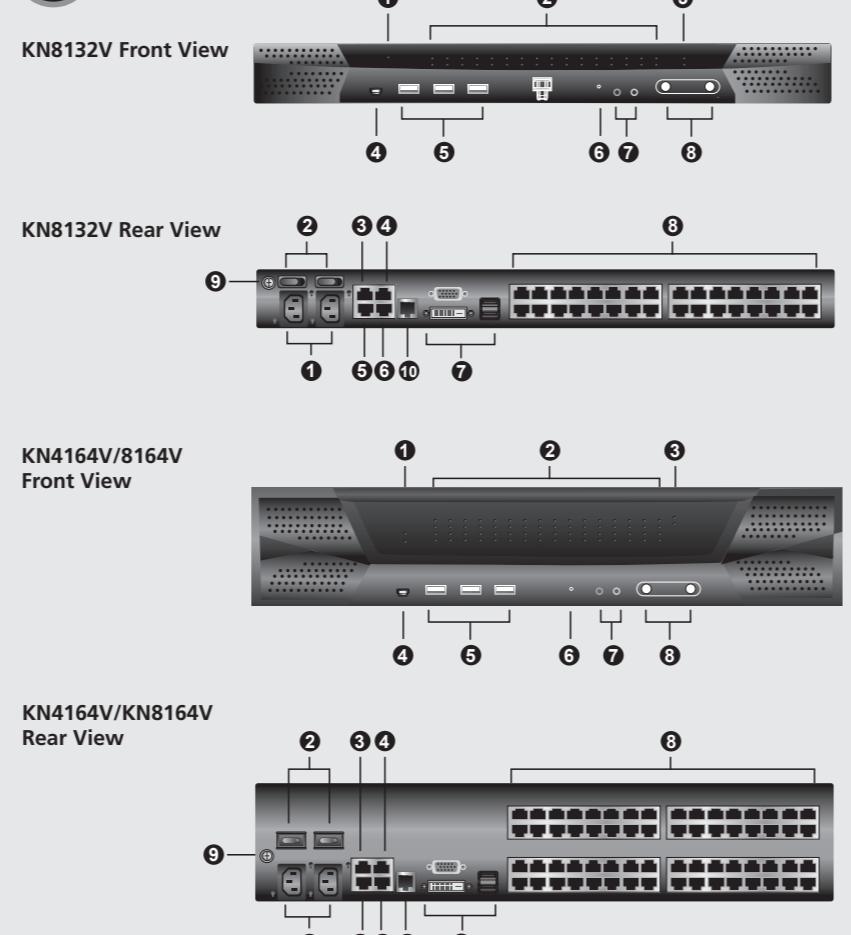


Package Contents


- | | |
|-------------------------------|--------------------------------|
| 1 KN4164V / KN8132V / KN8164V | 1 Lok-U-Plug Installation Tool |
| KVM over IP Switch | 1 Foot Pad Set (4 pcs.) |
| 2 Power Cords | 1 User Instructions |
| 1 Rack Mount Kit | |
| 2 Lok-U-Plugs | |

B Hardware Installation

Rack Mounting (KN8132V)

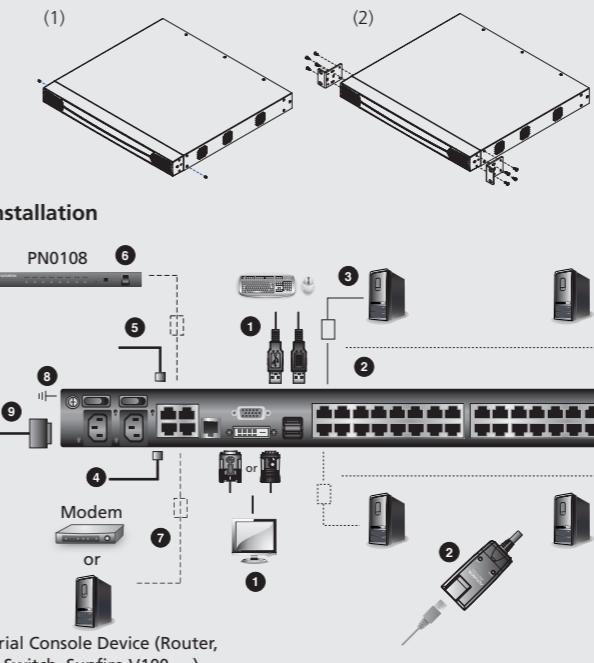

Installation

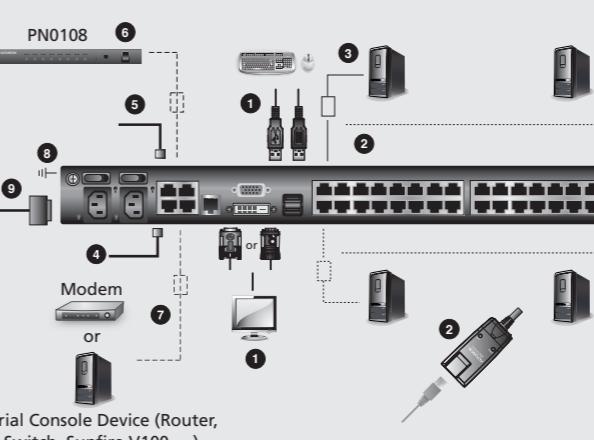

Hardware Installation B

Rack Mounting

To mount the unit on the front of the rack, do the following:

1. Remove the screws at the front of the unit.
2. Screw the mounting brackets into the front sides of the unit.
3. Slide the unit into the front of the rack and secure it to the rack.

Installation

1. Plug the local console's USB keyboard and mouse, and the DVI or VGA connectors into the unit's console ports. Each port is color coded and marked with an appropriate icon.

Note: 1. USB keyboards and mice can plug into the USB ports on the front panel, as well as into the ports in the console port section.

2. The KVM over IP switch does not support distances that exceed 20m between itself and the local monitor.

2. Use Cat 5e/6 cable to connect any available KVM port to a KVM Adapter Cable that is appropriate for the server you are installing.

Note: The distance between the KVM over IP switch and the KVM Adapter Cable must not exceed the maximum distance specified for the KVM Adapter Cable you are using.

3. Plug the connectors on the KVM Adapter Cable into the appropriate ports on the server you are installing.

4. Plug an Ethernet cable from the LAN into the KVM over IP switches' Primary LAN port.

5. (Optional) Plug another Ethernet cable from the LAN into the KVM over IP switches' Secondary LAN port.

6. (Optional) Use a Cat 5e/6 cable to connect the KVM over IP switches' PON port to an SA0142 adapter. Connect the adapter to the PON IN port of a PN0108 Power Over the NET™ unit.

7. (Optional) Use Cat 5e/6 cable to connect the KVM over IP switches' serial port to an SA0142 adapter. Connect the adapter's serial connector to a modem's DB-9 port.

8. (Optional) Use a grounding wire to ground the unit by connecting one end of the wire to the grounding terminal and the other end of the wire to a suitable grounded object.


9. Plug the power cord(s) supplied with this package into the switch's power socket(s), and then into an AC power source. When using a single power socket, be sure to turn on the correct power switch. When using both power sockets, either of the power switches can be used to turn on the KVM switch, or turn on both power switches to enable dual power.

10. After the KN4164V / KN8132V / KN8164V is cabled up you can turn on the power. After the switch powers on, you can turn on the servers.

Note: The KN8132V is pictured above. The KN4164V / KN8164V rear panel is the same as the KN8132V, except that it has 64 KVM ports and is 2U high, whereas the KN8132V has 32 KVM ports and is 1U high.

Securing the Cables


For additional safety, use ATEN Lok-U-Plug cable holders to secure the power cord. Secure the cable holders using the specially designed holes around the individual power outlets. (See the KN4164V / KN8132V / KN8164V user manual for more details.)

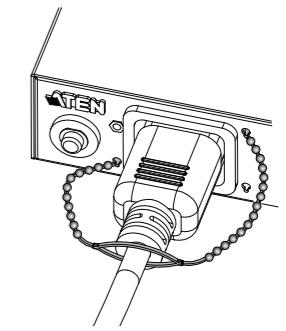

Remarque : La figure ci-dessus représente le KN8132V. Le panneau arrière du commutateur KN4164V / KN8164V est identique à celui du KN8132V, à l'exception du fait qu'il possède 64 ports KVM et une hauteur de 2U, tandis que le KN8132V possède 32 ports KVM et une hauteur de 1U.

Fixation des câbles


Pour plus de sécurité, utilisez des supports de câble Lok-U-Plug ATEN pour fixer les câbles. Fixez les supports de câble en utilisant les orifices prévus à cet effet autour des différentes prises d'alimentation. (Plus plus de détails, consultez le manuel d'utilisation des commutateurs KN4164V / KN8132V / KN8164V.)

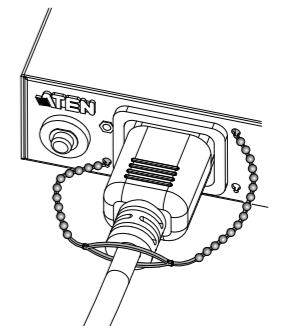

Hinweis: Die obige Abbildung zeigt den KN8132V. Die Rückseite des KN4164V / KN8164V ist mit der des KN8132V identisch, mit der Ausnahme, dass dieser 64 KVM-Ports besitzt und die Bauhöhe 2U aufweist. Der KN8132V besitzt 32 KVM-Ports und die Bauhöhe 1U.

Kabel sicher verlegen


Zur verbesserten Sicherheit, sichern Sie das Netzkabel mit den Lok-U-Plug-Kabelhaltern von ATEN. Fixieren Sie die Kabelhalter mithilfe der speziell angefertigten Löcher, die um die einzelnen Steckdosen herum angebracht sind. (Weitere Informationen entnehmen Sie dem Benutzerhandbuch zum KN4164V / KN8132V / KN8164V.)

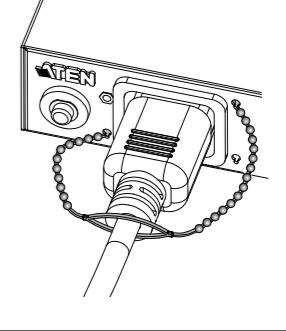

Nota: La imagen anterior representa al KN8132V. El panel posterior del KN4164V / KN8164V es igual al del KN8132V, excepto que este tiene 64 puertos KVM y su altura es de 2U, mientras que el KN8132V tiene 32 puertos KVM y su altura es de 1U.

Instalar los cables de forma segura

Para más seguridad, fije el cable de alimentación con los sujetadores para cables Lok-U-Plug de ATEN. Fije los sujetadores de cables en los agujeros especialmente distribuidos alrededor de las tomas eléctricas. (Para más detalles, consulte el manual del usuario del KN4164V / KN8132V / KN8164V.)

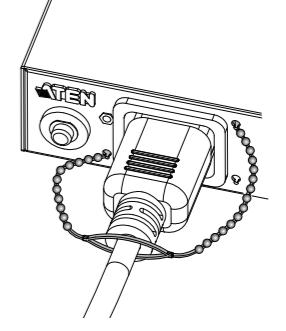

Connessione sicura dei cavi

Utilizzare i fermacavi ATEN con chiusura di sicurezza Lok-U-Plug per bloccare in sicurezza il cavo di alimentazione. Fissare i fermacavi tramite i fori appositamente progettati attorno alle singole prese di alimentazione. (Per maggiori dettagli, consultare il manuale dell'utente del KN4164V / KN8132V / KN8164V.)

