Connecting to WiFi

Equipment needed: F70W w/power adapter, PC/Mac w/A+ Suite installed, access to WiFi network



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com





Connecting to HDMI

Equipment needed: F70W w/power adapter, HDMI display, HDMI cable



©2015 AVer Information Inc. All rights reserved.



Connecting to PC/Mac via USB

Equipment needed: F70W w/power adapter, PC/Mac w/A+ Suite installed, mini USB cable





Remote Control

The remote control requires two (2) "AAA" size batteries (supplied), make sure batteries are installed properly before use.



For more information, please go to www.averusa.com/classroom-technology/

Contact Information

AVer Information Inc. USA 668 Mission Court, Fremont, California 94539 USA Toll Free: (877) 528-7824 Email: support.usa@aver.com

