

2.17 Setting Up the Analyzer

The analyzer has been set up at the factory for the following defaults:

Temperature Units°F
 Pressure UnitsInches of Water Column (inwc)
 Pollution Units.....ppm
 Language.....English
 DateCurrent date
 Time.....Current Eastern Standard Time
 O₂ Reference.....0% for all gases
 Test ID.....(blank)
 Display TimeoutNever (no timeout)
 Display FormatOrder of test data:
 O₂, CO, EFF, CO₂, T-STACK, T-AIR, EA,
 NO, NO₂, NO_X, SO₂, HC, CO(0), NO(0),
 NO₂(0), NO_X(0), SO₂(0)
 Primary Air.....No preset
 Data Logging.....Off
 Statistics.....Off
 User Name(blank)
 Keypad Sound.....On
 High Resolution NO_x Enable....Off
 Print Pressure.....Off

Values for these parameters can be entered or changed by selecting the desired parameter from the Setup List screen, which is displayed by pressing the **SETUP** key.

```

■■■■■SETUP LIST■■■■■
■ Temperature Units
  Pressure Units
  Pollution Units
  Language
  Date
  Time
  O2 Reference
  Test ID
  Display Timeout
  Display Format
  Primary Air
  Data Logging
  Statistics
  User Name
  Keypad Sound
  High Res NOX Enabl
  Print Pressure
  Information
  
```