 


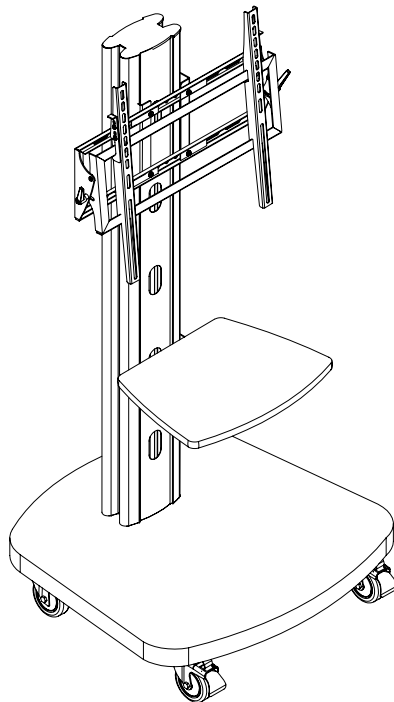

#27542

Tall Institutional Stand

 
 

 
 
 

 

 

 
 
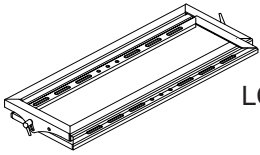 


 

 
 
 


Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Assembly Instructions
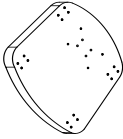
#27542 Tall Institutional Stand

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P1		Wood Base	1 EA	Hardware List			
P2		Metal Column	1 EA	A		Screw M6X15mm	18 EA
P3		Metal Plate-Column	1 EA	A1		Screw M8X18mm	4 EA
P4		Wood Shelf	1 EA	A2		Screw M10X72mm	4 EA
P5		Left Shelf Bracket	1 EA	A3		Screw M6*20mm	16 EA
P6		Right Shelf Bracket	1 EA	B		Lock Washer 6mm	20 EA
P7		LCD Bracket	2 EA	B1		Lock Washer 10mm	4 EA
P8		LCD TV Mount	1 EA	C		Square Washer	4 EA
P9		Adj Bracket-left	1 EA	D		4" Locking Caster	2 EA
P10		Adj Bracket-right	1 EA	E		4" Caster	2 EA
				F		Allen Wrench	1 EA
				G		Big Allen Wrench	1 EA

WARNING

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.

WARNING

 
Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

#27542 Tall Institutional Stand Assembly Diagram

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.


1.) Identify and Separate all the Parts and Hardware.

2.) Attach 2 Locking Plate Casters (D) and 2 Plate Casters (E) to the Bottom Platform (P1) using 16 screws (A3) and 16 Lock Washers (B) as shown in illustration # 2. Tighten (A3) Screws using Allen Wrench (G).

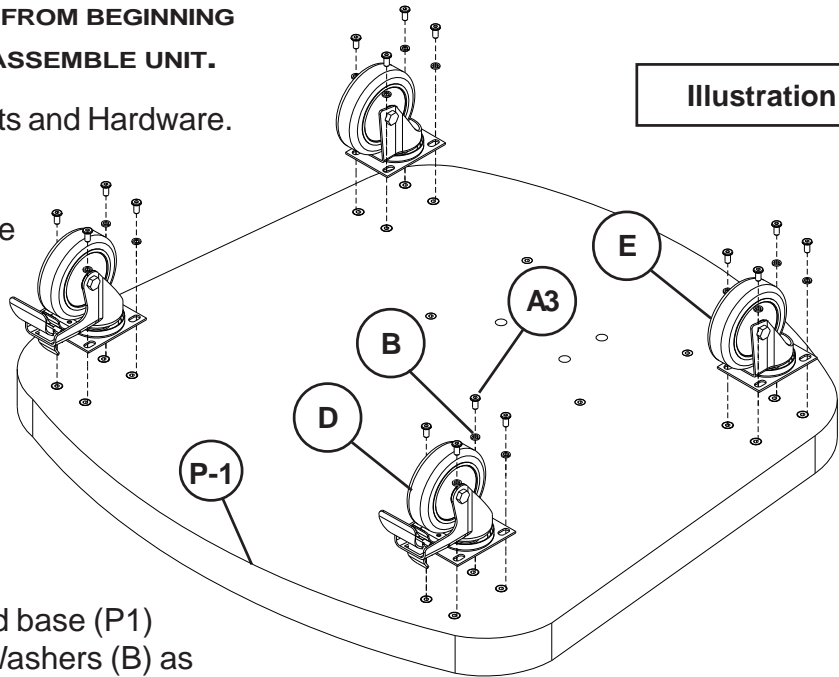

3.) Attach Metal Plate (P3) to Wood base (P1) using 4 screws (A) and 4 Lock Washers (B) as shown in illustration # 2. Do not tighten Screws.

 4.) Attach Metal Column (P2) to Metal Plate (P3) and Wood base (P1) using 4 screws (A2) and 4 Lock Washers (B1) as shown in illustration # 2. Tighten (A) Screws using Allen Wrench (F). Tighten (A2) Screws using Allen Wrench (G).

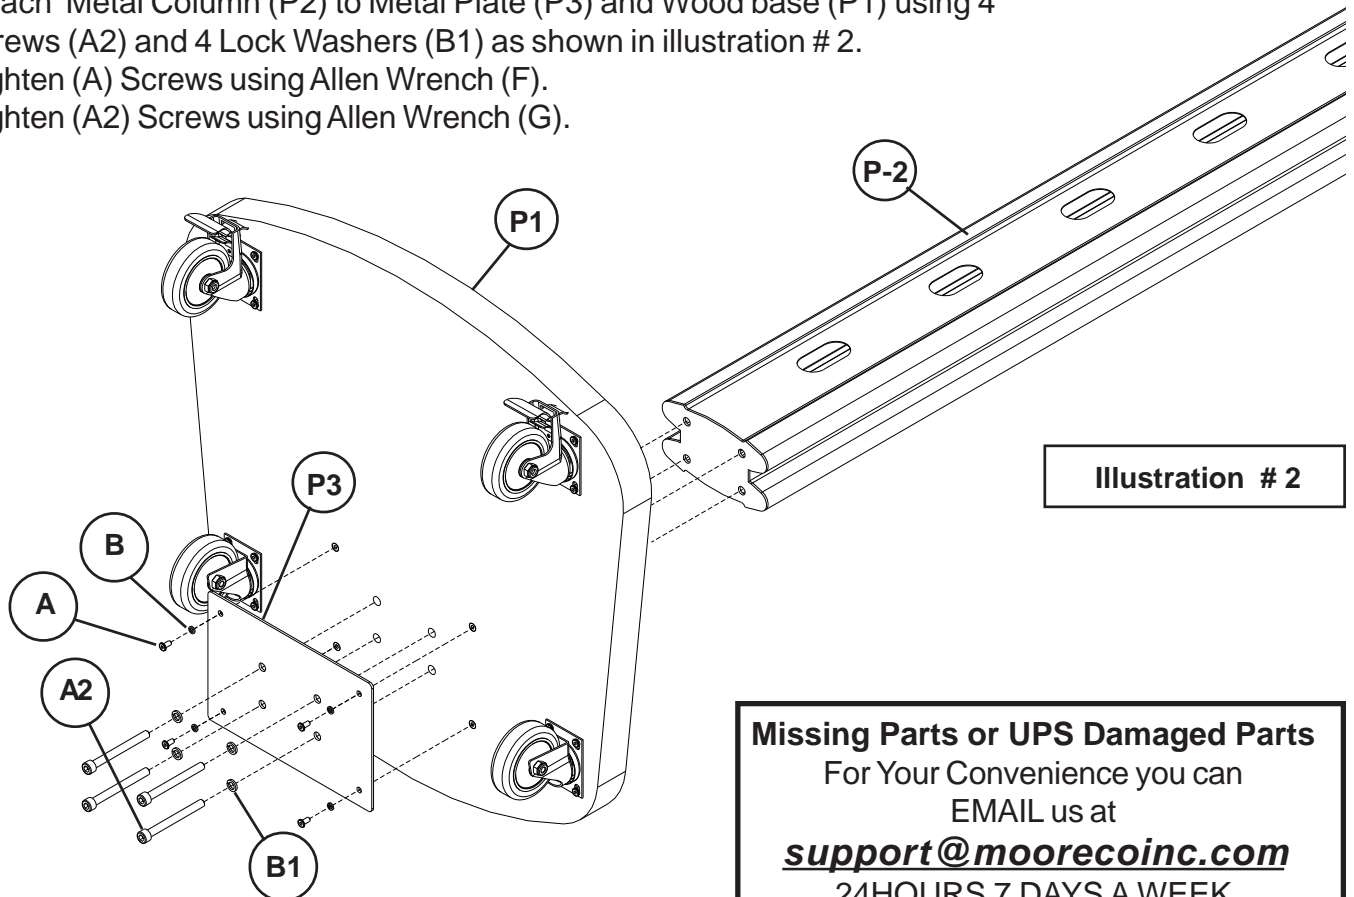

Missing Parts or UPS Damaged Parts
For Your Convenience you can
EMAIL us at
support@moorecoinc.com
24HOURS 7 DAYS A WEEK

Illustration # 3

5.) Attach 2 LCD Brackets (P7) to the LCD TV Mount (P8) using 4 screws (A1) and 4 Square Washers (C) as shown in illustration # 3.

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com


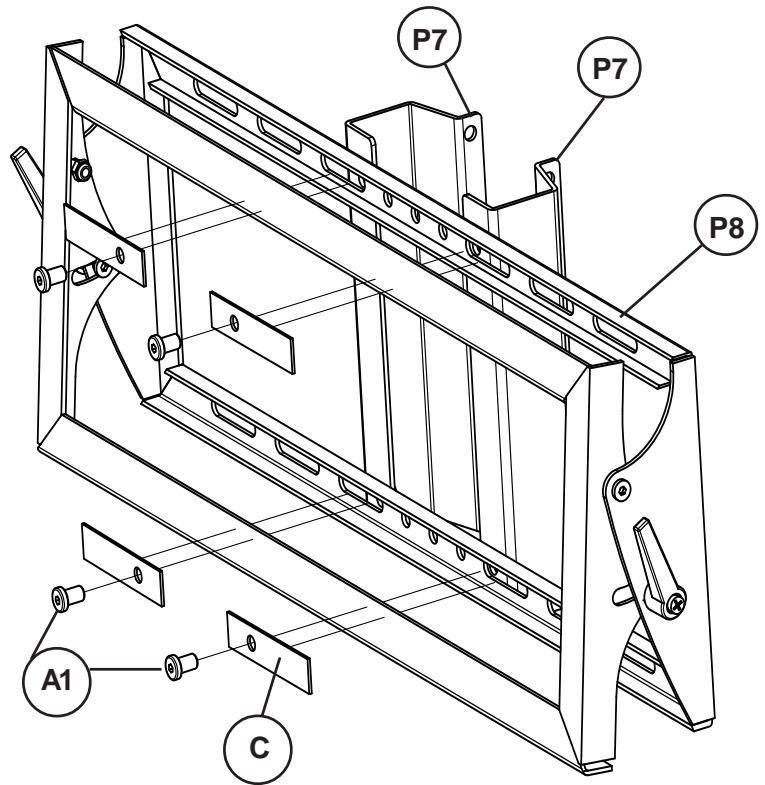 


Illustration # 4

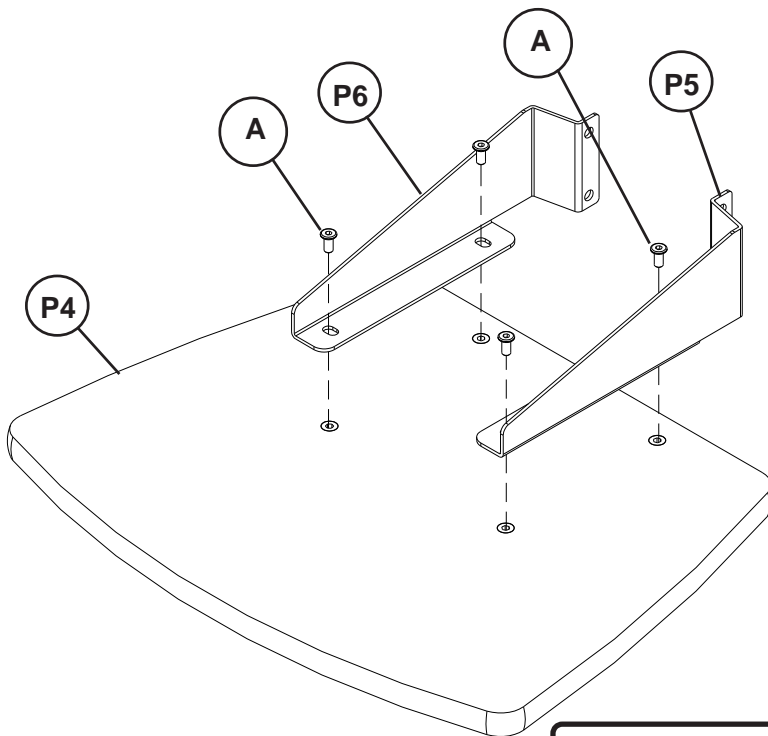 

6.) Attach Left and Right Shelf Brackets (P-5 & P-6) to Wood Shelf P-4) using 4 screws (A) as shown in illustration # 4. Do not tighten.


Important

The Balt product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase. Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.

- 7.) Slide (P-4 + P-5 and P-6) assembly from Step 6 onto Metal Column (P-2). Secure at desired height using 4 screws (A) as shown in illustration # 5.
- 8.) Slide (P-7 + P-8) assembly from Step 5 onto Metal Column (P-2) and secure at desired height using 6 screws (A) .

 Illustration # 5
Rear View

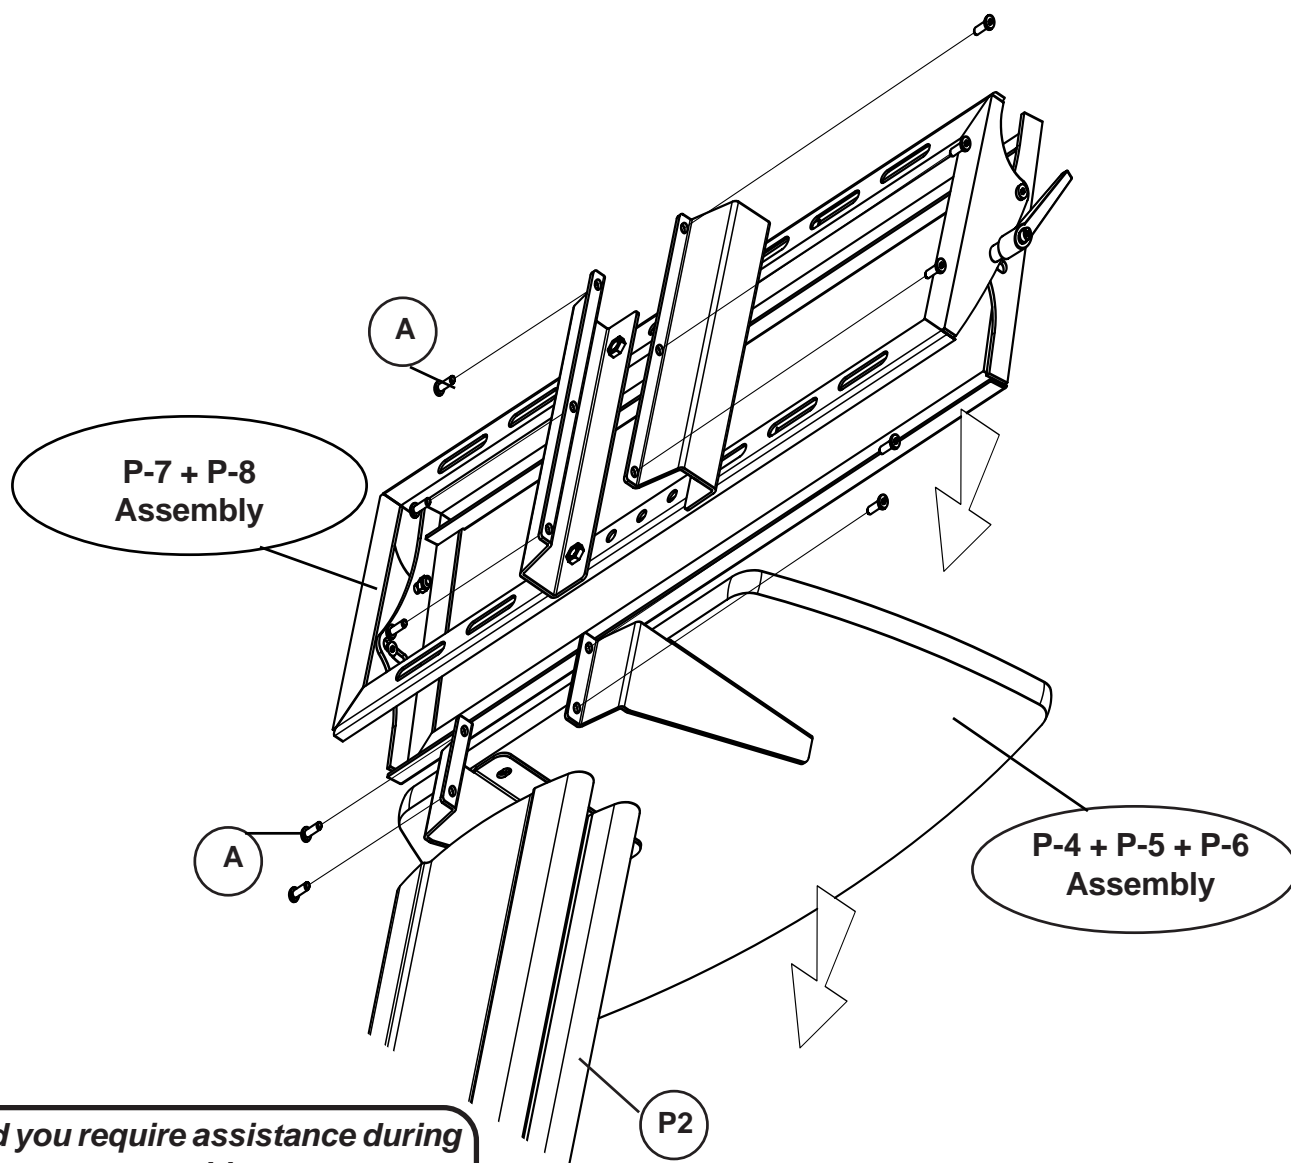

**Should you require assistance during
assembly,
please call our Customer Service
Department Monday - Friday
8 a.m. - 5 p.m.
Central Standard Time
1-800-749-2258**

9.) Slide Left and Right Adj Brackets (P-9 & P-10) onto the LCD TV Mount (P-8) as shown in illustration #6.

10.) Lift Left and Right LCD Lock Brackets on Left and Right Adj Brackets (P-9 & P-10) as shown in illustration #7. Secure by tightening 4 screws (A) using Allen Wrench(F).

Illustration #7


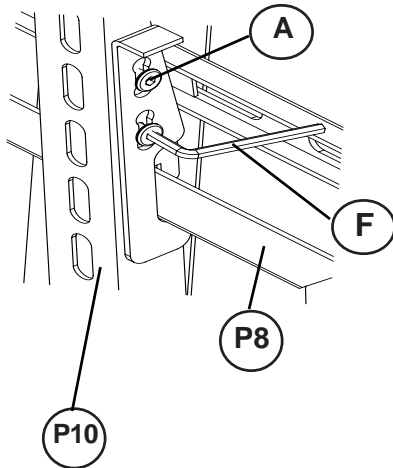 


Illustration #6

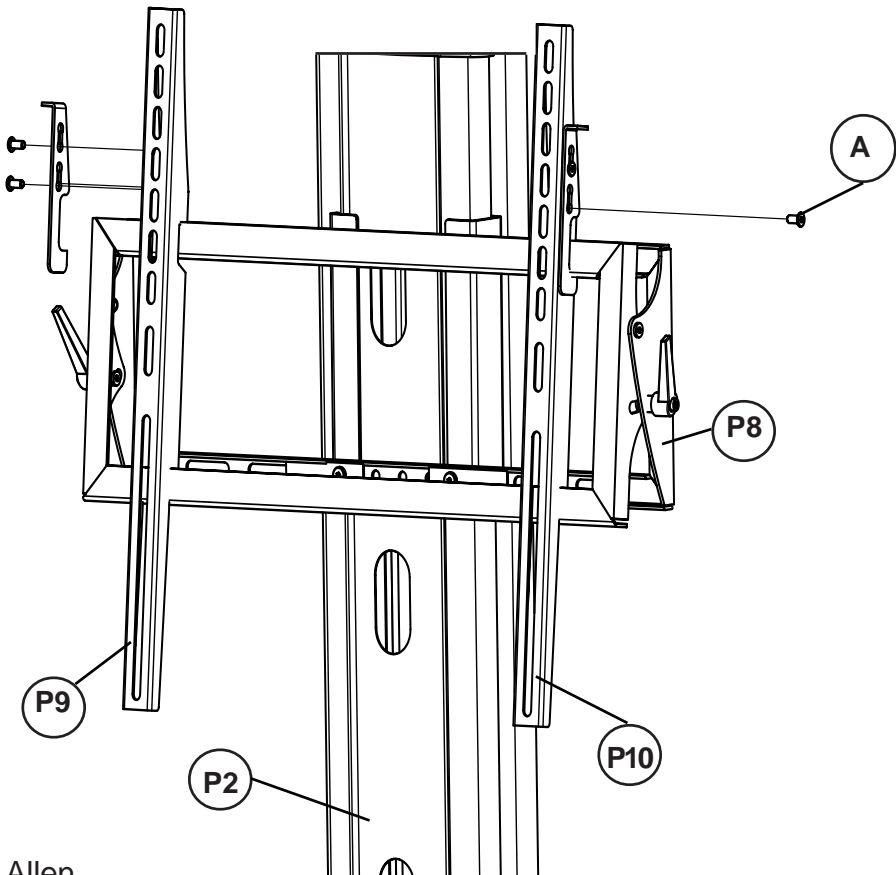 


11.) Tighten all (A) Screws using Allen Wrench (F).

To purchase optional electrical w/Cordwinder #66450, call our customer service department @1-800-749-2258.

Attach Optional Cord Winder and Electrical Strip to the back of Metal Column (P2) using 2 screws as shown in illustration #8.

 Illustration #8 Optional Electrical w/Cordwinder

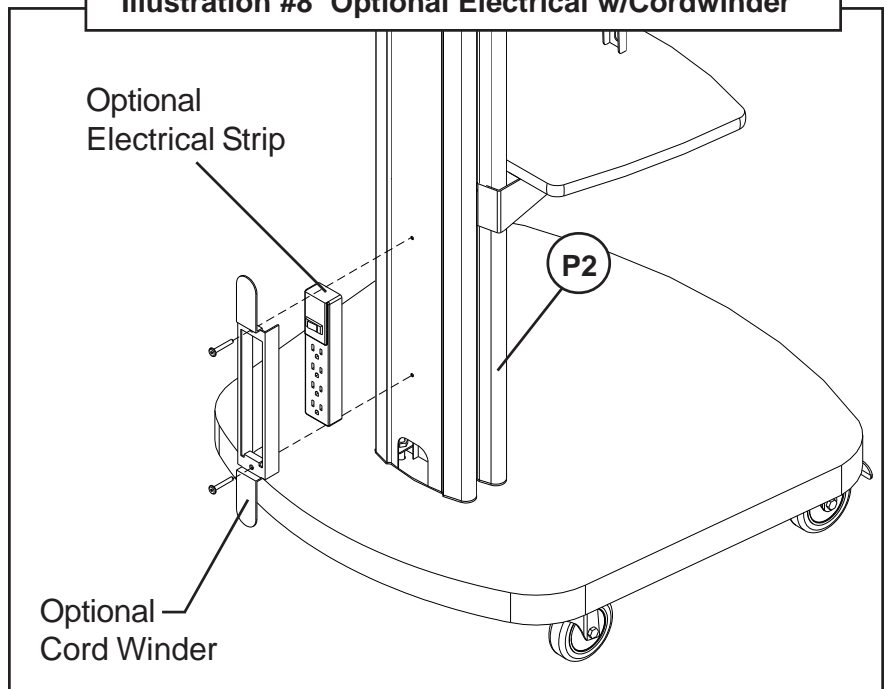

205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com