

# USER GUIDE

## CORE™ 10S CABINET

STORE & CHARGE | CHGCAB10-CK



### TECHNICAL SPECIFICATIONS

#### CAPACITY

10 Devices

#### COMPATIBILITY

Chromebook screen sizes up to 13.3" (thickness less than 1")  
Tablet screen sizes up to 13.3" (thickness less than 1" with case)

#### UNIT DIMENSIONS

20.5"W x 17"D x 18"H

#### SLOT DIMENSIONS

0.875"W x 12"D x 9.25"H

#### WEIGHT WITHOUT DEVICES

48 lbs.

#### WARRANTY

12-years, 1-year on electrical

#### CONSTRUCTION

Steel constructed case with plastic molded slots.

#### SHIPPING

Ships fully assembled.

### CAUTION

- Product is for indoor use only
- User can only connect 10 devices at one time
- Turn power switch off before plugging in devices
- Turn power switch off before unplugging the cabinet
- Do not plug the cabinet in if the switch or power cord has been damaged



Power Switch



AC Outlet Access - Adapter Storage



Device Storage

## GENERAL USE

### POWER SWITCH

Located on the right hand side of the cabinet.

### AC OUTLET ACCESS - ADAPTER STORAGE

Plug adapters into AC outlets as needed. Use velcro straps to tie down brick type power adapters.

### DEVICE STORAGE


Thread associated power cables through slots in AC access door and then close.



Using the Handle



Inserting the Shackle

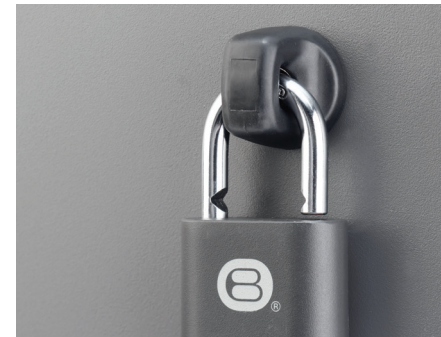

Lock Programming

## HANDLE & LOCK INSTRUCTIONS

### USING THE HANDLE

The Flywheel Handle/Lock serves as a handle to open and close the cabinet when the shackle is not inserted.

### INSERTING THE SHACKLE

Hold the lock shackle on a slight angle when inserting into the shackle opening and push firmly. Once the shackle is inserted the cam is no longer engaged and the Flywheel Handle/Lock will spin without engaging the locking cam, preventing the door from opening.

### LOCK PROGRAMMING



To program the user programmable combination padlock included:

1. Open the padlock using combination "0000."
2. Insert the programming key and turn 90 degrees.
3. Set the combination you would like to use.
4. Remove the programming key.

## ATTACH TO DESKTOP/COUNTERTOP

1. Using the two internal holes in the bottom front of the cabinet as guides, (see orange arrows) drill two pilot holes into the mounting surface.
2. Using appropriate length screws (customer supplied), with washers if necessary, fasten the screws into the mounting surface. **DO NOT OVER TIGHTEN.**

*(For mounting to optional carrier, see separate instructions included with CTUCAR-CK.)*

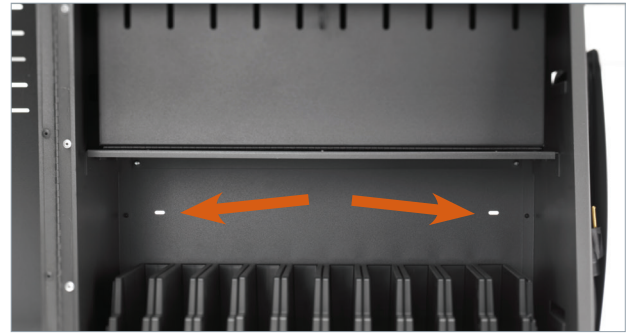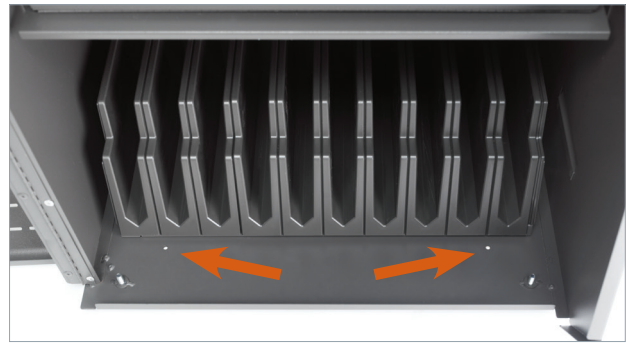

## MOUNTING TO WALL

1. Attach the cabinet mounting plate to the wall using suitable hardware for your chosen mounting surface. The mounting method must be able to support up to 220 lbs. (100 kg.).
2. Once the mounting plate is securely mounted to the wall, lift the plate into place and slide the matching plate located on the rear of the cabinet into the lip of the wall-mounted plate. (See pictures above.)
3. To prevent the cabinet from being lifted off of the plate, secure it by inserting the 2 screws provided through the holes in the back of the cabinet (see picture) and fasten securely. Once the front door is locked these screws will be inaccessible, preventing the cabinet from being removed from the wall.

## CAUTION

- For added safety and ease of installation, use a qualified professional to properly install the correct mounting hardware. Failure to secure the cabinet properly will void the warranty.
- The wall mounting plate is intended to support the cabinet and ten mobile devices (maximum weight of devices not to exceed 40 lbs.).
- Do not place anything on top of the cabinet.
- Use only the mounting plate provided with this product.
- Bretford will not be liable for the improper use installation of its products.