

# Orbiter

System No.:  
ORB-CMD-001  
ORB-CMD-LR001

## Quick Start Guide

# Touchboards

205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: [sales@touchboards.com](mailto:sales@touchboards.com)



## Cetacea Sound

 
*Technical Audio for the 21<sup>st</sup> Century Classroom*

## READ BEFORE INSTALLING


For in-depth safety, installation, and operational procedures, read or download the Orbiter Owner's Manual at [www.cetaceasound.com](http://www.cetaceasound.com).

### ORBITER™ SYSTEM CONTENTS


Orbiter Transmitter

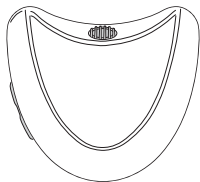


Orbiter Receiver

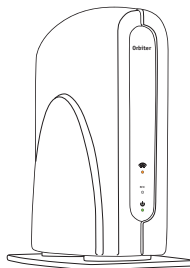 


Transmitter Charger

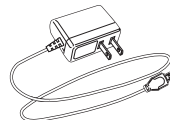 

Lanyard Kit

 

Receiver Power Supply

 


Audio Cable (optional)



## CHARGE UP ORBITER TRANSMITTER
 
### PRIOR TO OPERATION

Please allow two hours of charge prior to first use.

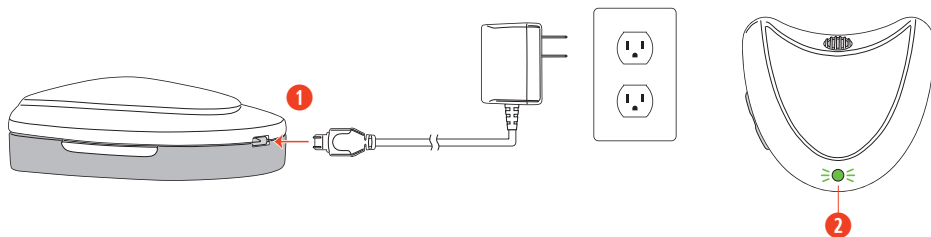

### CONNECT ORBITER TO CHARGER

1. Connect the charger to the power connector on the Orbiter.
2. Green LED will begin flashing.
3. Allow for two hours of charge time prior to first use or when Green LED is glowing steady.

### NOTE

 
The Orbiter has built-in overcharge protection. Once fully charged, the Green LED will cycle between charge (steady) and discharge (blinking).

## SET UP AND CONNECT RECEIVER

### INSTALLER NOTES

No tools are required to set up the Orbiter other than to run cable as needed. Clips, hangers, and hooks are recommended for long cable runs.

## POSITION RECEIVER ON A FLAT SURFACE NEAR AN AC SOURCE

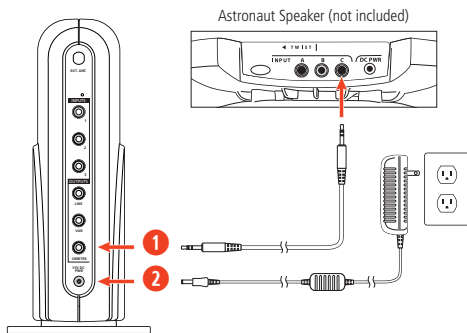

1. Connect 3.5 mm speaker cable to ORBITER OUTPUT connector and amplifier/speaker INPUT.
2. Connect the power supply to the receiver POWER connector and AC source.
3. Green LED will illuminate to indicate receiver is ON.




## OPERATE THE ORBITER TRANSMITTER
 
### CONTROLLING FEEDBACK


When operating the Orbiter for the first time, step away from the speaker and be ready to adjust volume down as needed.

Have a second person help determine appropriate loudness by listening from the audience location.

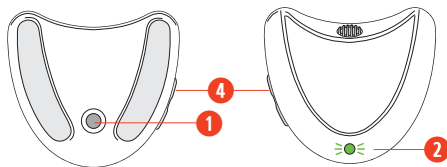

## REMOVE ORBITER FROM CHARGER PRIOR TO USE

 1. Click MASTER CONTROL once for ON.
  - Click again to cycle between ON and MUTE. To turn OFF, push and hold MASTER CONTROL for 4 seconds, then release.
2. Green LED will illuminate on the transmitter while ON.

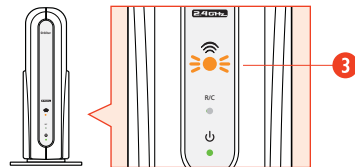

3. Amber LED will illuminate on the receiver while connected.
4. Set appropriate volume with VOLUME CONTROL button.

### NOTE

The Orbiter will not connect to the receiver while charging. Once charged, disconnect charger and operate pendant as normal.

# REFERENCE IMAGES

## Orbiter Transmitter



## Orbiter Receiver

