Orbiter

WIRELESS PENDANT MICROPHONE

 


205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com


Pairing Instructions

Orbiter Pairing Instructions


- 1) Make sure the Orbiter pendant transmitter has been properly charged and is **NOT** connected to the charger.
- Both the transmitter and receiver must be ON in order to pair.
 Note: We recommend that the receiver is not plugged into the speaker while pairing.
- **3**) Straighten the end of a medium paper clip.



mm) into the pairing hole on the receiver. Use a light press when inserting the paper clip not to damage the hardware. The receiver amber light will begin to flash indicating that it's in pairing mode.

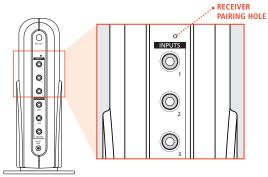

5) Insert the end of the paper clip approximately 1/2" (1.3 cm) into the pairing hole on the transmitter. Use a light press when inserting the paper clip not to damage the hardware. Successful pairing will result in a solid amber light on the front side of the receiver.

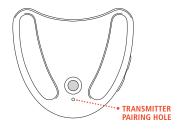

6) Receiver pairing mode lasts only a short time. If unsuccessful, repeat steps 4 and 5.

