

CA320 TC Calibrator CA330 RTD Calibrator Setting the Temperature Unit (/TE)

Foreword

You can set the temperature unit to celcius(°C) or fahrenheit (°F) using /TE option.

Changing the Temperature Unit for the First Time

The product is shipped with the temperature unit setting function set to OFF. To change the temperature unit for the first time, you need to turn the function on by following the procedure below.

1. While holding down the following two keys, press the CA320 or CA330 **POWER** key to turn the power on.

Keep holding down the keys until **Unit** appears on the screen.


PASS appears on the screen, which is the password input screen.




2. Enter the password. You can enter the password by pressing the following four ▲ keys in order from the right-most key.

When the password is entered correctly, **deg F** appears on the screen.

Otherwise, **PASS** remains on the screen. Press the ▲ keys in the correct order once again.

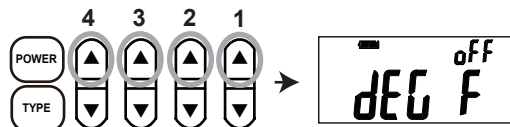


3. Use the right-most ▲/▼ key to change OFF in the sub display position to ON, and then press **TYPE**. The temperature unit function has been set to ON.

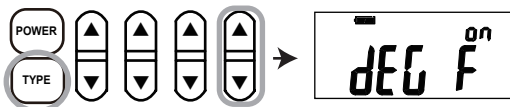

4. Use the left-most ▲/▼ key to display the following screen.

Press **TYPE** to return to the normal operation screen.

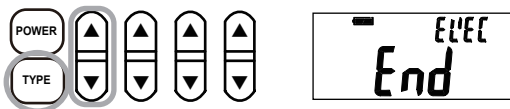

Setting the Temperature Unit

1. Set the rotary switch to SETTING.
2. Press the left-most ▲ or ▼ key to display **Unit**.
3. Press the right-most ▲ or ▼ key to display the temperature unit to set at the option display position.
4. Press **TYPE** to confirm the setting.

The setting remains effective even if the power is turned off.