INSTALLATION INSTRUCTIONS




K0P100



K0W100



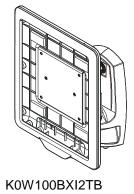

Pitch/Pivot Mount Series



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com



K0 Series

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

 $\label{lem:chief} \begin{tabular}{ll} Chief @ is a registered trademark of Milestone AV Technologies. \\ All rights reserved. \\ \end{tabular}$

 



IMPORTANT SAFETY INSTRUCTIONS!

WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.



CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.



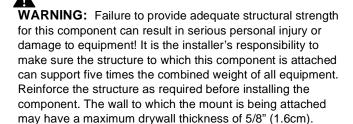

WARNING: Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

WARNING: Never operate this mounting system if it is damaged. Return the mounting system to a service center for examination and repair.


WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the K0 Series Monitor Arm up to (and including) the display does not exceed the weight limits in the table below. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.


MODEL	Max Weight
K0P100	40 lbs (18.14 kg)
K0W100	40 lbs (18.14 kg)
K0W100BXI2	2 lbs (0.9 kg)
K0W100BXI2TB	2 lbs (0.9 kg)

WARNING: Do not use this product outdoors.

--SAVE THESE INSTRUCTIONS!--

DIMENSIONS

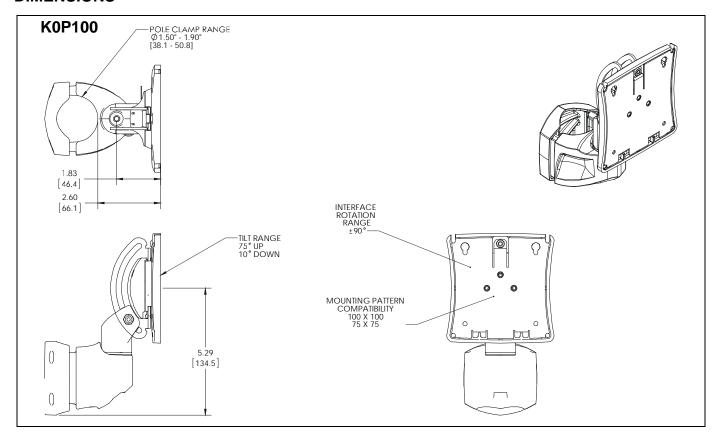

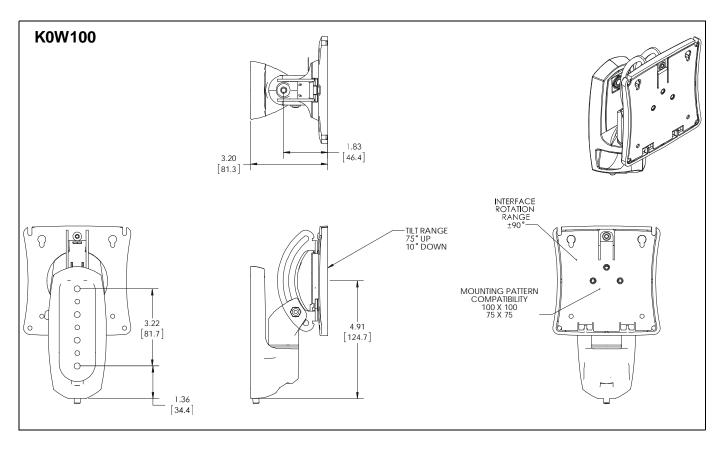


LEGEND


	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
 	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
_	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
*)	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
1	Kreuzschlitzschraubendreher	Einstellen
(<u>A</u>)	Chave de fendas Phillips	Ajustar
W	Cacciavite a stella	Regolare
lacktriangle	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	I I DUITIEVIS A DOILLE CIUCIOITIE I I	
		·
	Open-Ended Wrench	Remove
111	Open-Ended Wrench Llave de boca	Remove Quitar
GS	Open-Ended Wrench Llave de boca Gabelschlüssel	Remove Quitar Entfernen
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas	Remove Quitar Entfernen Remover
68	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte	Remove Quitar Entfernen Remover Rimuovere
68	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel	Remove Quitar Entfernen Remover Rimuovere Verwijderen
6	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez
68	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Optional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcional En option
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opcional Opcional Opcional Opcional Security Wrench
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza
	Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche By Hand A mano Von Hand Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez Optional Opcional Opcional Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança

Δ

TOOLS REQUIRED FOR INSTALLATION

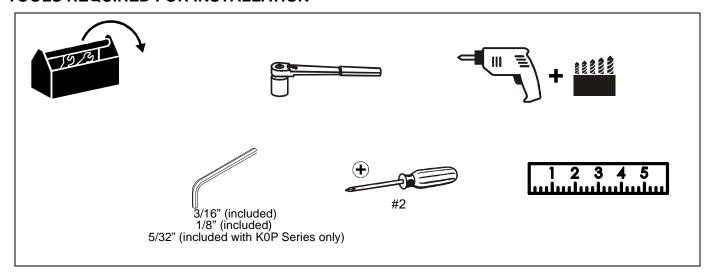

PARTS

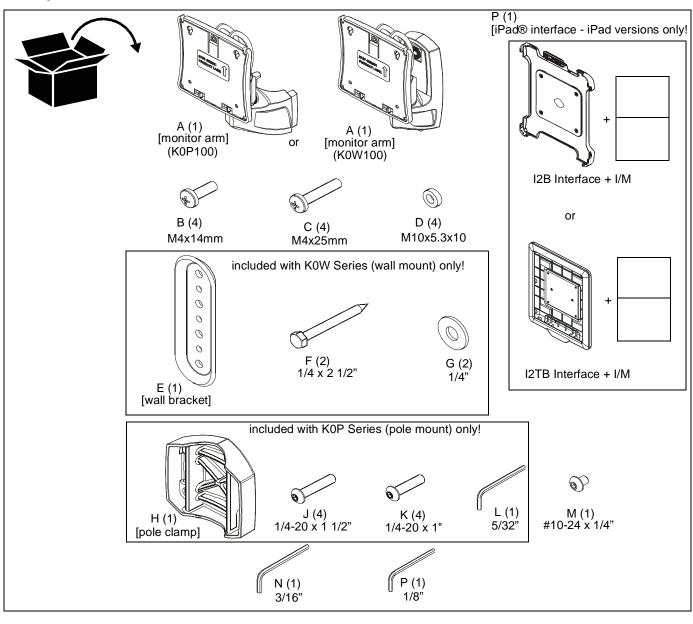

Assembly And Installation

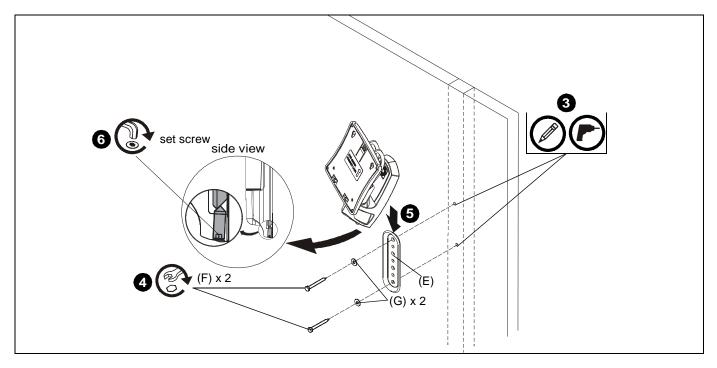


Figure 1

Connecting K0W Series (wall mount) to Wall

- 1. Determine mounting location on wall.
- 2. Use a stud finder to locate 2" x 4" wood stud.
- 3. Use wall bracket (E) to mark and drill two 1/8 x 2 1/2" holes in wall at desired mounting location. (See Figure 1)
- Use two 1/4-2 1/2" hex head lag screws (F) and two 1/4" washers (G) to install wall bracket (E) onto wall. (See Figure 1)

IMPORTANT!: Over tightening screws (F) may cause bracket to compress into soft wall surface resulting in difficult mount installation or improper engaging of set screw in Step 6.

- Hang monitor arm (A) over wall bracket (E). (See Figure 1)
- Secure monitor arm to wall bracket (E) by tightening set screw. Ensure set screw engages back side of wall bracket (E) to properly secure mount. (See Figure 1)

Connecting K0P Series to Pole

- Determine approximate location for mount keeping in mind display size, extension, height adjustment requirements.
- Place mount (A) against pole with clamp (H) on opposite side of pole. (See Figure 2)

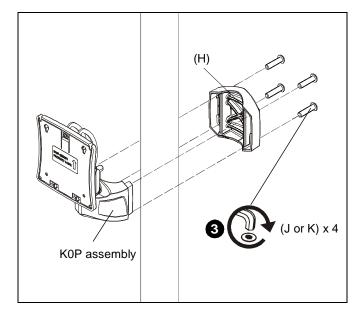


Figure 2

- Using 5/32" hex key (L) and appropriate length screws, loosely attach K0P assembly to pole clamp (H). If installing to 1 1/2" NPT pipe, use 1/4-20 x 1 1/2" button head cap screws (J). If installing to 1 1/2" diameter pipe, use 1/4-20 x 1" button head cap screws (K). (See Figure 2)
- 4. Position mount at desired height and orientation.
- 5. Equally tighten screws against mount and the pole clamp.

Display Installation

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components attached to the K0 Series Monitor Arm up to (and including) the display does not exceed the weight limits in the table below. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.

MODEL	Max Weight
K0P100	40 lbs (18.14 kg)
K0W100	40 lbs (18.14 kg)
K0W100BXI2	2 lbs (0.9 kg)
K0W100BXI2TB	2 lbs (0.9 kg)

NOTE: For K0W100BXI2 mounts, refer to FSBI2B installation instructions to install iPad® to mounting arm.

 Remove quick release faceplate from mount by pulling quick release lever and sliding faceplate off mount. (See Figure 3)

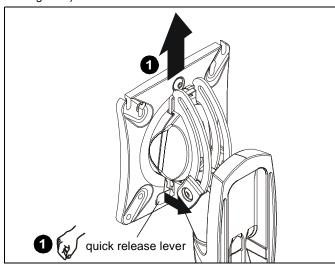


Figure 3

WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! See Display Removal section for details.

- 2. Carefully place display face down on protective surface.
- 3. Connect faceplate to display

For flush mounting hole installation:

 Using Phillips screwdriver, carefully install four M4x14mm screws (B) through corresponding holes on faceplate and into the mounting holes on the display. (See Figure 4)

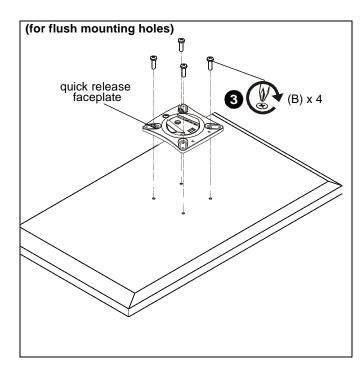


Figure 4

For recessed mounting hole installation:

- Place four spacers (D) on top of mounting holes on back of display. (See Figure 5)
- Using Phillips screwdriver, carefully install four M4x25mm screws (C) through corresponding holes on faceplate, spacers (D) and into the mounting holes on the display. (See Figure 5)

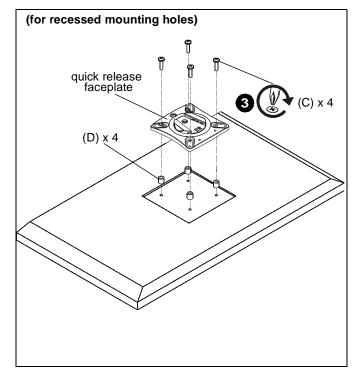


Figure 5

- Position display with faceplate attached above mount. (See Figure 6)
- Slide faceplate onto mounting head until quick release tab clicks into place. (See Figure 6)

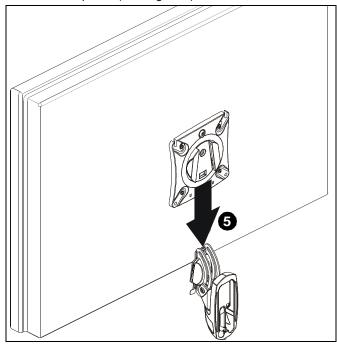


Figure 6

Adjustments

Pitch Adjustment

- 1. Adjust pitch to desired tilt position. (See Figure 8)
- Adjust pitch tension screw to change the adjustment tension. (See Figure 8)

Pivot Adjustment

- 3. Adjust pivot position as desired. (See Figure 8)
- Use 3/16" hex key (N) to adjust pivot point tension screws to change pivot adjustment tension. (See Figure 8)

Rotational Adjustment

NOTE: (Optional) Rotational adjustment may be locked by installing rotational locking screw (M) into back of faceplate. (See Figure 7)

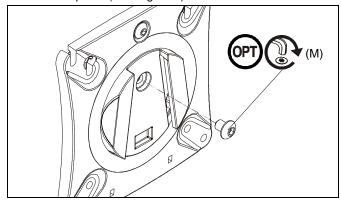


Figure 7

- The monitor may be adjusted 90 degrees in either direction in order to provide a portrait view of the monitor. (See Figure 8)
- 6. Use 3/16" hex key (N) to adjust rotational adjustment screw to adjust rotational tension. (See Figure 8)

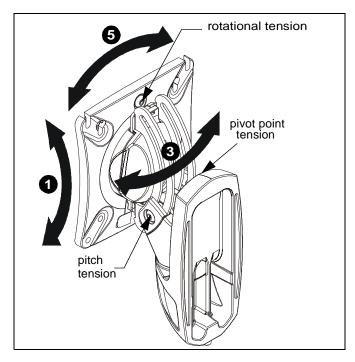


Figure 8

Display Removal

WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! (See Figure 9)

- 1. Make sure display is in the upright position.
- Remove quick release faceplate from mount by pulling quick release lever and sliding faceplate off mount. (See Figure 9)

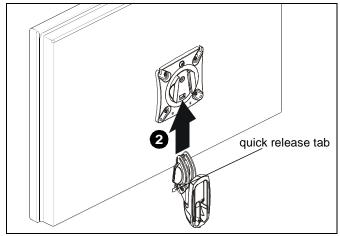


Figure 9



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

©CHIEF

Our Mounts. Your Vision.

Chief, a products division of Milestone AV Technologies

8800-002476 Rev02 ©2014 Milestone AV Technologies www.chiefmfg.com 07/14 USA/International A 6436 City West Parkway, Eden Prairie, MN 55344

P 800.582.6480 / 952.225.6000

F 877.894.6918 / 952.894.6918

Europe A Franklinstraat 14, 6003 DK Weert, Netherlands

P +31 (0) 495 580 852

F +31 (0) 495 580 845

Asia Pacific A Office No. 918 on 9/F, Shatin Galleria

18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

P 852 2145 4099 **F** 852 2145 4477

