
INSTALLATION INSTRUCTIONS



Large Flat Panel Static Mount

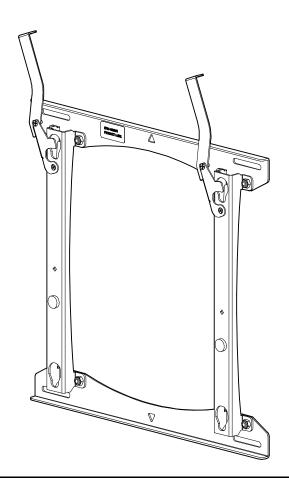

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com



PST₁₆

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.


CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component. The wall to which the mount is being attached may have a maximum drywall thickness of 5/8" (1.6cm).

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located on the PST16 does not exceed 200 lbs (90.7 kg). Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.

DIMENSIONS

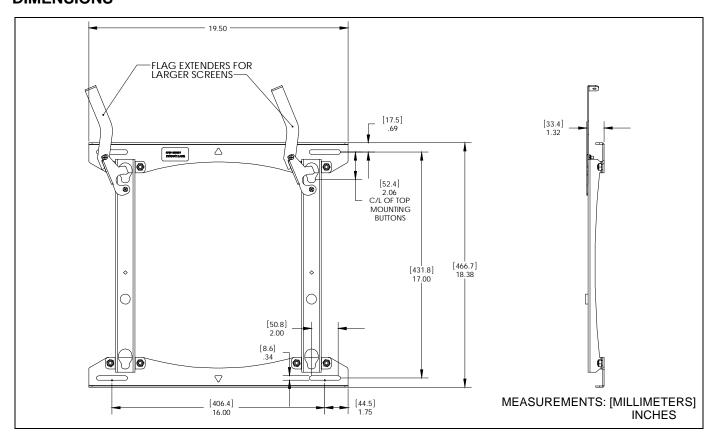


Installation Instructions PST16


LEGEND

	Tighten Fastener	Pencil Mark
G	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
0	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
(4)	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
650	Open-Ended Wrench	Remove
	Llave de boca	Quitar
	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Steeksleutel	Verwijderen
	Clé à fourche	Retirez
	By Hand	Optional
	A mano	Opcional
	Von Hand	Optional
	Com a mão	Opcional
	A mano	Opzionale
	Met de hand	Optie
	À la main	En option
	Hex-Head Wrench	Security Wrench
	Llave de cabeza hexagonal	Llave de seguridad
	Sechskantschlüssel	Sicherheitsschlüssel
	Chave de cabeça sextavada	Chave de segurança
	Chiave esagonale	Chiave di sicurezza
	Zeskantsleutel	Veiligheidssleutel
	Clé à tête hexagonale	Clé de sécurité
	Ole a lete Hexagoliale	Ole de securite

TOOLS REQUIRED FOR INSTALLATION

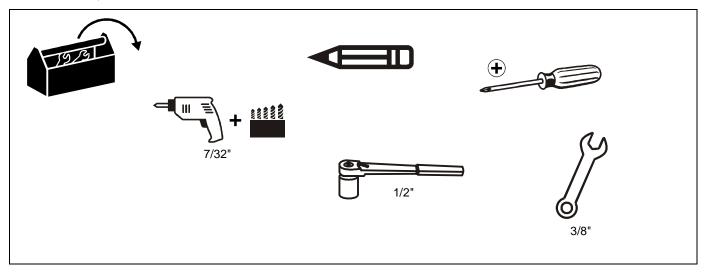

PARTS

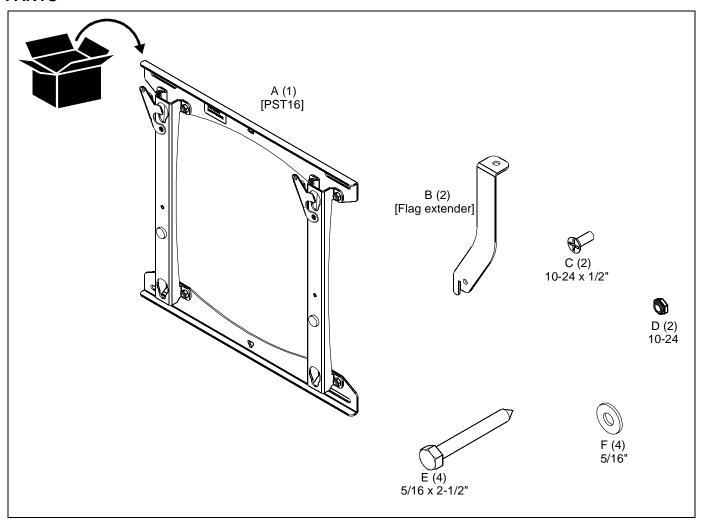

Installation Instructions PST16

ASSEMBLY AND INSTALLATION

NOTE: The PST16 may be mounted to a wood 2" x 4" stud wall, 16" on center. The PST16 has a lateral shift of 1" after attachment to stud wall.

IMPORTANT!: If the installation of this product requires OSHPD seismic approval, refer to the OSHPD preapproval documents and drawings before beginning installation. OSHPD documents and drawings are available at www.chiefmfg.com, and located on the PST16 product information page.

Mount Assembly (Optional)

- 1. Insert flag extender (B) slot into top of right latching flag.
- 2. Attach using one 10-24 x 1/2" Phillips undercut machine screw (C) and one 10-24 nylon locknut (D). (See Figure 1)
- 3. Repeat with left latching flag. (See Figure 1)

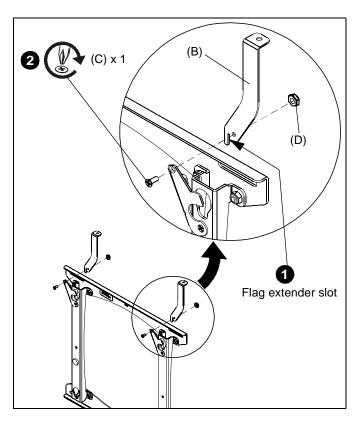


Figure 1

Mount Installation

WARNING: IMPROPER INSTALLATION CAN LEAD TO DISPLAY FALLING CAUSING SERIOUS PERSONAL INJURY OR DAMAGE TO EQUIPMENT! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

 Identify a suitable wall location for the PST16 taking into consideration the display size.

- Using a stud finder, locate and mark the two studs to which the PST16 will be installed.
- Use a nail as a temporary mount and hang the PST16 on the wall using the triangular hole in the center of the PST16. (See Figure 2)
- Level the PST16 and mark the four mounting holes. (See Figure 2)
- 5. Remove the PST16 from the wall.

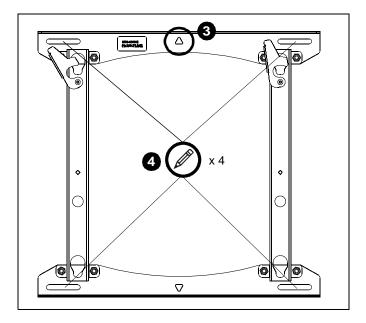


Figure 2

WARNING: ELECTRICAL SHOCK HAZARD! CUTTING OR DRILLING INTO ELECTRICAL CORDS OR CABLES CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surface is free of electrical wires and cables before drilling or installing fasteners.



WARNING: EXPLOSION AND FIRE HAZARD! CUTTING OR DRILLING INTO GAS PLUMBING CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surface is free of gas, water, waste, or any other plumbing before cutting, drilling, or installing fasteners.

- Using a 7/32" drill bit, drill four 2-1/2" deep pilot holes, ensuring they are centered on the studs. (See Figure 3)
- 7. Fasten PST16 to wall using four 5/16 x 2-1/2" lag bolts (E) and four 5/16" flat washers (F). (See Figure 3)

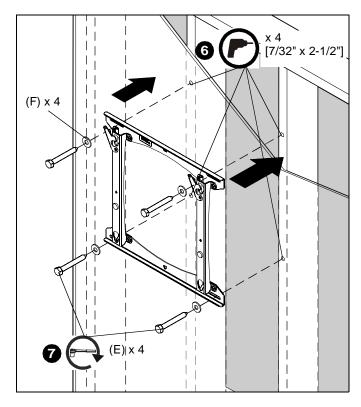


Figure 3

Display Installation

WARNING: IMPROPER INSTALLATION CAN LEAD TO MOUNT FALLING CAUSING SEVERE PERSONAL INJURY OR DAMAGE TO EQUIPMENT! DO NOT install display in a manner other than that specified by the manufacturer. Certain displays may require the use of an interface bracket for proper installation of the display. If an interface bracket is not installed or there are any questions regarding which interface bracket should be used, immediately contact a Chief Customer Service representative.

WARNING: IMPROPER INSTALLATION CAN LEAD TO MOUNT FALLING CAUSING SEVERE PERSONAL INJURY OR DAMAGE TO EQUIPMENT. Make sure mounting buttons on display are properly seated in mounting holes in faceplate.

- Install Listed interface bracket (not included) following the installation instructions provided with the interface bracket.
- Move two latching flags on PST16 to the OPEN position. (See Figure 4)

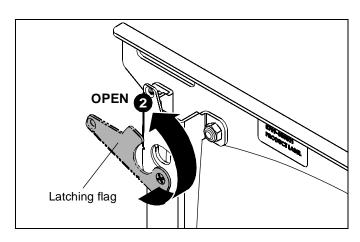


Figure 4

- 3. Align mounting buttons on display with teardrop mounting holes in mount. (See Figure 5)
- Move display forward until recessed area of mounting buttons is positioned over lower area of teardrop mounting holes. (See Figure 5)
- Lower display until recessed area of mounting buttons is seated in lower area of teardrop mounting holes. (See Figure 5)

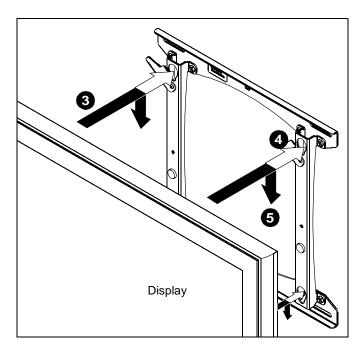


Figure 5

Move two latching flags on PST16 to the CLOSED position. (See Figure 6) Installation Instructions PST16

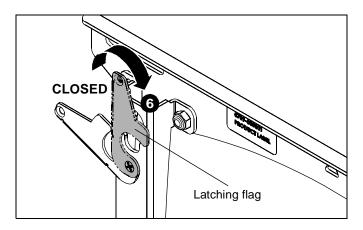


Figure 6

OPTIONAL: Lock the latching flags with a padlock or bolt, if required. (See Figure 7)

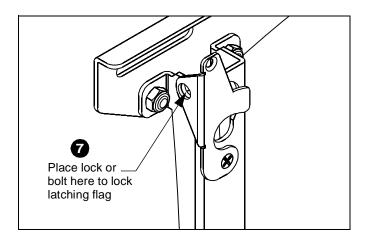


Figure 7

8. Route wires and cables to display.



Our Mounts. Your Vision.

Chief Manufacturing, a products division of Milestone AV Technologies

8805-002006 Rev02 ©2010 Milestone AV Technologies, a Duchossois Group Company www.chiefmfg.com 08/10 **USA/International**

Europe

A 8401 Eagle Creek Parkway, Savage, MN 55378

P 800.582.6480 / 952.894.6280

F 877.894.6918 / 952.894.6918

A Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands

P +31 (0)40 2668620

F +31 (0)40 2668615

Asia Pacific A

A Office No. 1 on 12/F, Shatin Galleria 18-24 Shan Mei Street

Fotan, Shatin, Hong Kong

P 852 2145 4099

F 852 2145 4477

