



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Label Placement Instruction Sheet

INTRODUCTION



If not already equipped, two (2) new safety labels (included in this package) must be affixed to the outside skin of your M Series projector – a Power Switch Location label and a Danger Hazardous Voltage label. Please use the following placement instructions and accompanying diagram (Figure 1) when placing these new labels onto your projector.

LABELS REQUIRED

- Label AC Power Switch Location (PN 013-101549-01)
- Label Danger Hazardous Voltage (PN 013-101546-01)

INSTRUCTIONS

1. Place the AC Power Switch location label directly below the bevel and in line with the licence label as shown in Figure 1.
2. Place the Danger Hazardous Voltage label between the two center screws in the orientation shown in Figure 1.

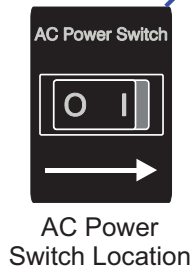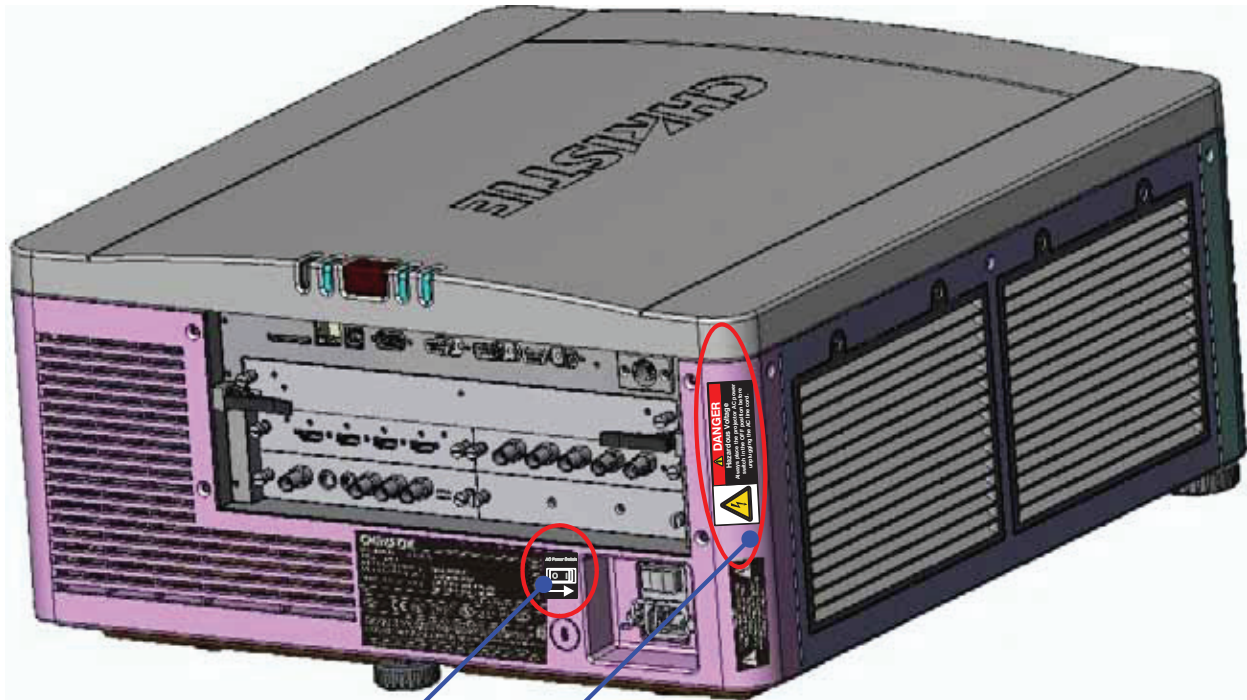

Danger Hazardous Voltage

Figure 1