



Things to Remember:

- \*Not Included
- Cat5 not included

Notes:

- For IR forwarding place dip switch 3 down on HD-18 and the HD-19, dip switch 4 for the HD-20
- Before connecting cameras, in the Cisco menu click on Admin Settings/Advanced Settings/System Unit and turn the IR setting to ON, default setting is AUTO.
- Place IR emitter over IR receiver on front of the codec.
- In order for presets to work properly, follow instructions at [http://www.vaddio.com/library?path=d&file=technote\\_200-by.pdf](http://www.vaddio.com/library?path=d&file=technote_200-by.pdf) with the PDF file, "Cisco/Tandberg Technical Notes"