# **Owner's Manual**

# **Compact Presentation Lectern**

55218	Standard CPL
55223	with Overbridge Control Console <sup>™</sup>
	with Balloon Wheels

55218BW

CAUTION: Before using this product, read this manual and follow

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if

you have any questions, please call 1-800-235-1262.

To purchase parts or accessories, please contact us at www.spectrumfurniture.com

1-800-235-1262

Thank you for purchasing Spectrum products!

all safety and operating instructions.

# 

SPECTRUM/

INDUSTRIES INC.

CPL with Overbridge Control Console & Balloon Wheels 55223BW shown with optional insert panel (shaded)



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com



Spectrum Industries, Inc Chippewa Falls, WI 54729, USA




# Safety

· Read this owner's manual before assembly or operation.

Ŷ

- Do not allow children to move lectern.
- Move slowly and carefully when mobile.
- For indoor use only. Do not install or store the unit where it will be exposed to weather. Keep unit dry.
- For added safety, plug the unit into a grounded three-prong receptacle controlled by a GFI

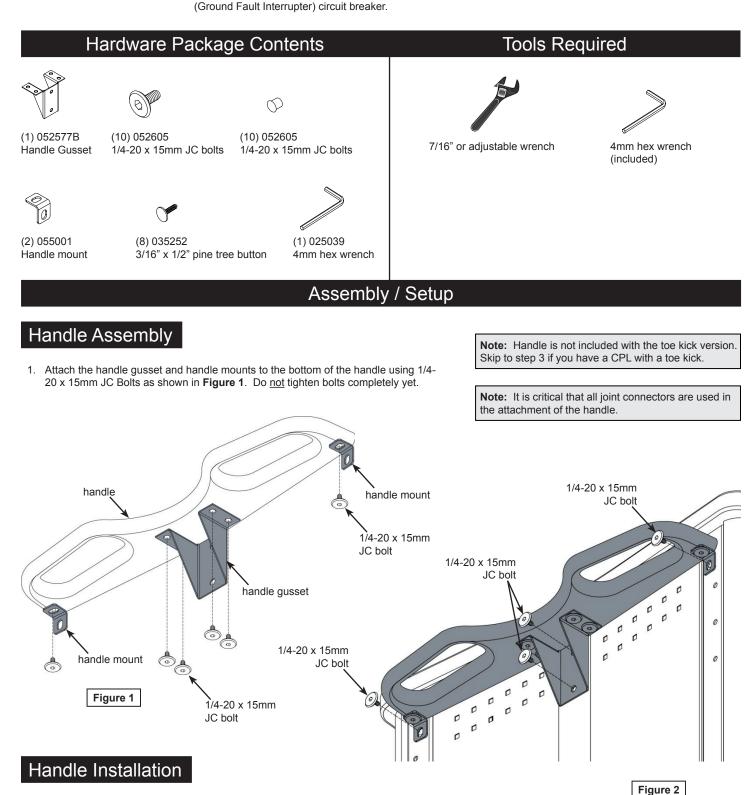



- 1. Determine which side of the lectern you would like the handle to be mounted, and open both doors.
- 2. Attach the handle assembly to the side of the lectern with (4) 1/4-20 x 15mm JC bolts. As shown in Figure 2.
- 3. Tighten all bolts securely.



# Hole Plug Installation

- 1. If one side of the unit will not have a handle or flip-up document camera shelf attached, install pine tree buttons in the unused mounting holes as shown. Figure 3.
- 2. Install 1/4" hole plugs and pine tree buttons in the remaining open holes as shown.

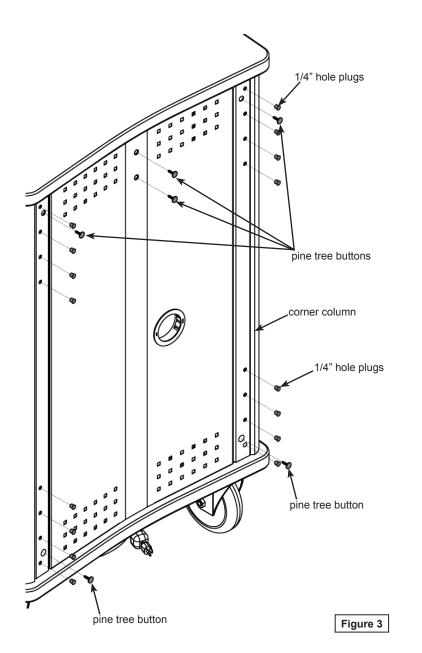


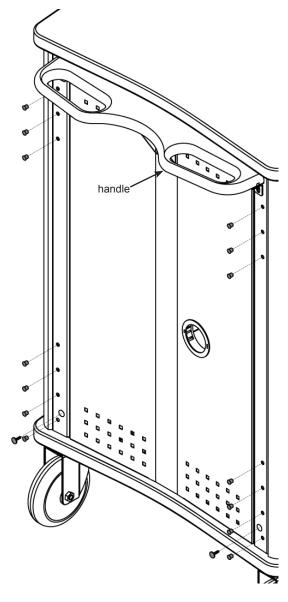




# Floor Anchoring (Toe Kick models only)

- 1. If your CPL is equipped with a toe-kick, and you wish to attach it to the floor, the toe-kick will need to be detached from the unit. To detach, remove the (4) 1/4-20 x 40mm JC bolts (one on each corner) from inside the cart.
- 2. Carefully lift the lectern off the toe-kick. This will require several people. Figure 4.
- Locate the toe-kick into its final position on the floor and mark the (4) mounting hole locations on the floor (The toe-kick mounting holes are approximately 1/2" dia.)
- 4. Drill holes into the floor and anchor the toe-kick with appropriate fasteners.
- 5. Carefully lift the lectern back onto the toe-kick and align the (4) mounting holes.
- 6. Re-attach the lectern to the toe-kick with the previously removed JC bolts.

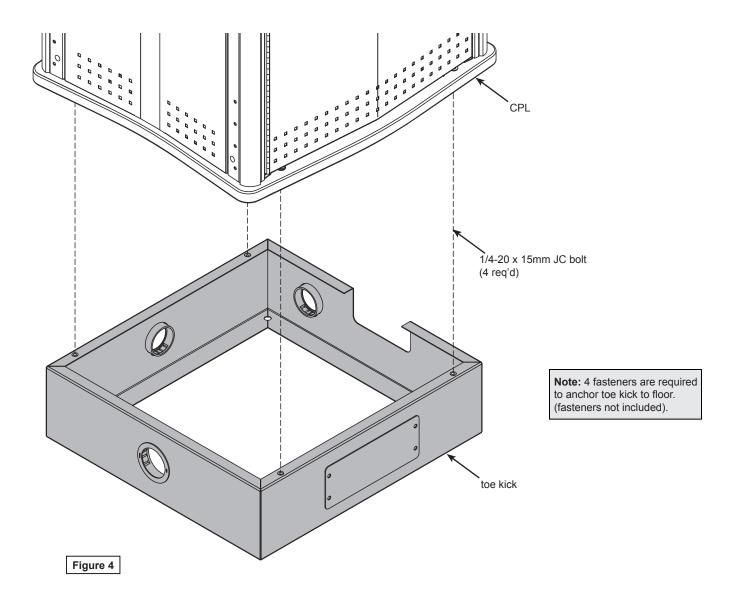


# Rack Rails

The standard CPL comes with rack rails mounted in the front (instructor-side) position. They can be moved to the rear position (student-side) if required. **Figure 5**. Rack-mount equipment can be fastened to the rack rails using 10-32 screws.

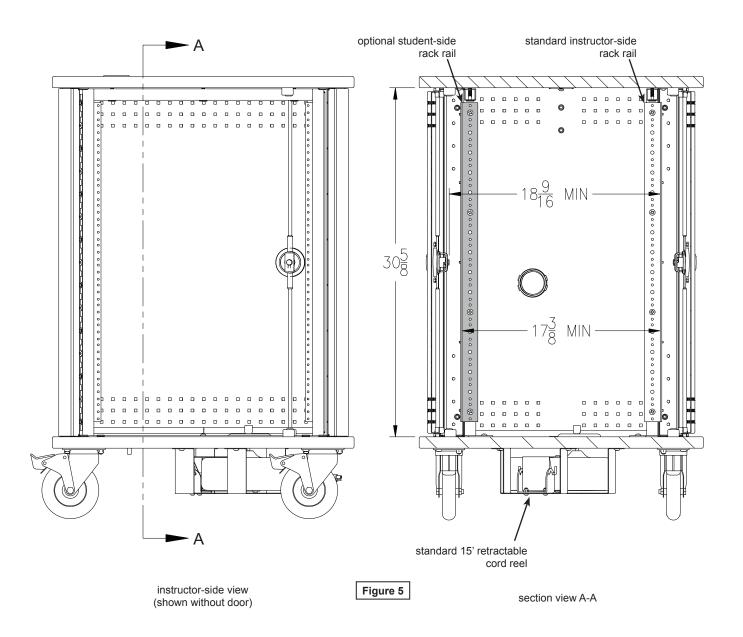

# Overbridge insert panel removal (overbridge models only)

- 1. To remove the insert panel, remove the (2) 1/4-20 x 35mm JC bolts with a 4mm hex wrench. Figure 6A.
- 2. Lift the panel out. Figure 6B.

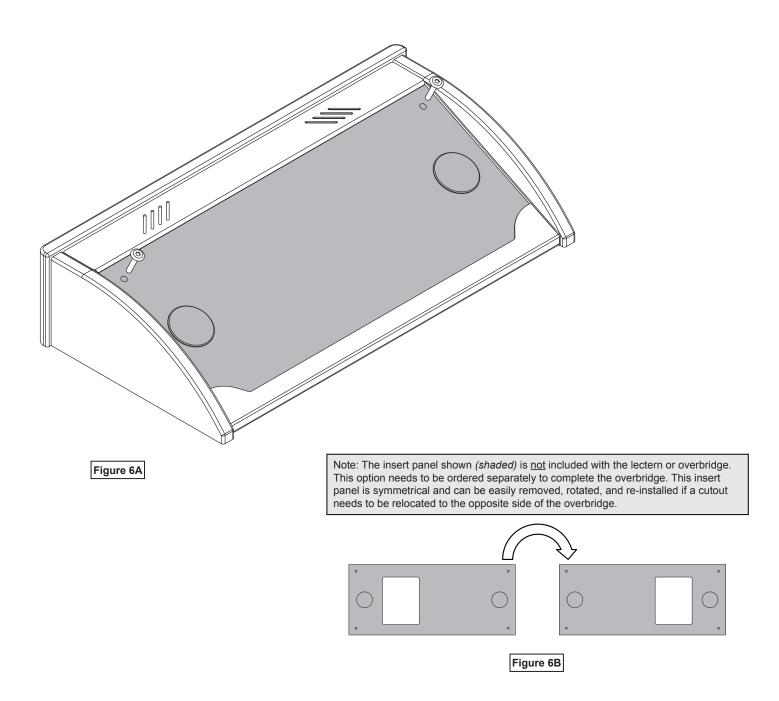

# Cord reel operation

### **Operating Instructions:**

- <u>To latch cord</u> Pull cord out to full length. Allow the cord to retract 1-2 feet back into the reel. Pull the cord out slowly. When a 'click' is heard, the cord will latch in place.
- 2. Plug into 110-125V (single phase), 3-conductor wall outlet.
- <u>To release cord</u> Unplug from wall outlet. Pull cord out slowly until clicking stops. The latch will release and the cord can be guided back into the reel. Do not allow the cord to fly unrestricted back into the reel.
- 4. Do not overload or circuit breaker (15-amp maximum) will cut off current. To restore power, remove overload, wait two minutes, then reset the circuit breaker by pressing the button on the back of the 3-prong male power plug.

### Maintenance:


- Remove dirt and grime as soon as it accumulates on the reel case by using a soft, damp cloth (a mild detergent may be used if needed), being careful not to wet the electrical plug. Never immerse any part of the unit in any solution to clean.
  DO NOT use solvents such as gasoline, turpentine, etc. to clean unit.
- Keep cord clean to assure smoothest automatic retraction. Simply pull cord to its full length and allow to retract through a dampened rag. Pull out full length again and sprinkle cord with talcum powder.


### **Specifications:**

15' retractable, 15-amp, 125V, 12 AWG with breaker, UL Listed




- This cord reel is intended for general indoor use only. It is not intended to be used in potentially dangerous locations such as flammable or explosive atmospheres. The reel is not waterproof and not intended for use in potentially wet locations.
- Do not overload (15-amp maximum).

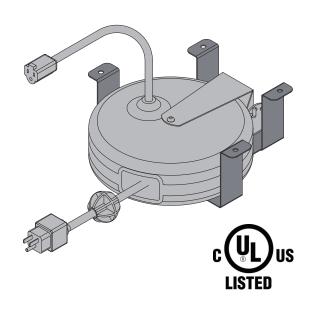

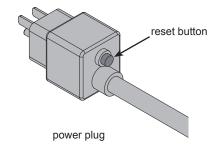


# Moving the lectern

- 1. Before moving the unit, unplug all power cords and retract power cord into the reel (if equipped).
- 2. Be sure the casters are in the unlocked position and the doors closed.
- 3. Move the lectern slowly and carefully.
- 4. Lock the casters after moving.

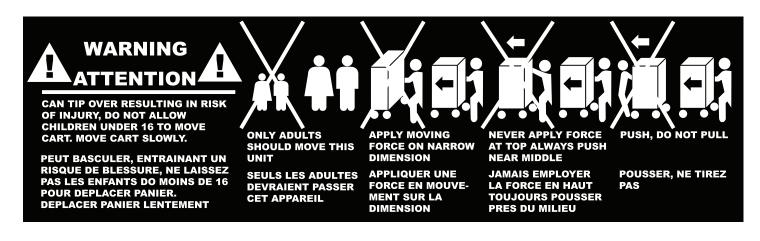


# Options

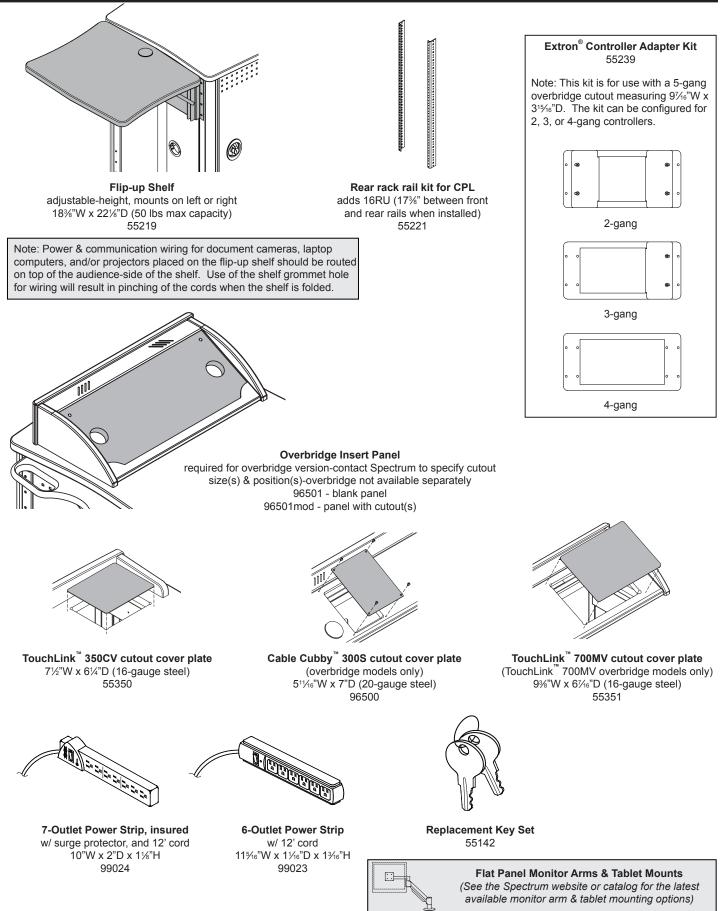

SPECTRUM

Worksurface drilling required to mount 058719R8 Page 8 of 10

# Rack-mount accessories

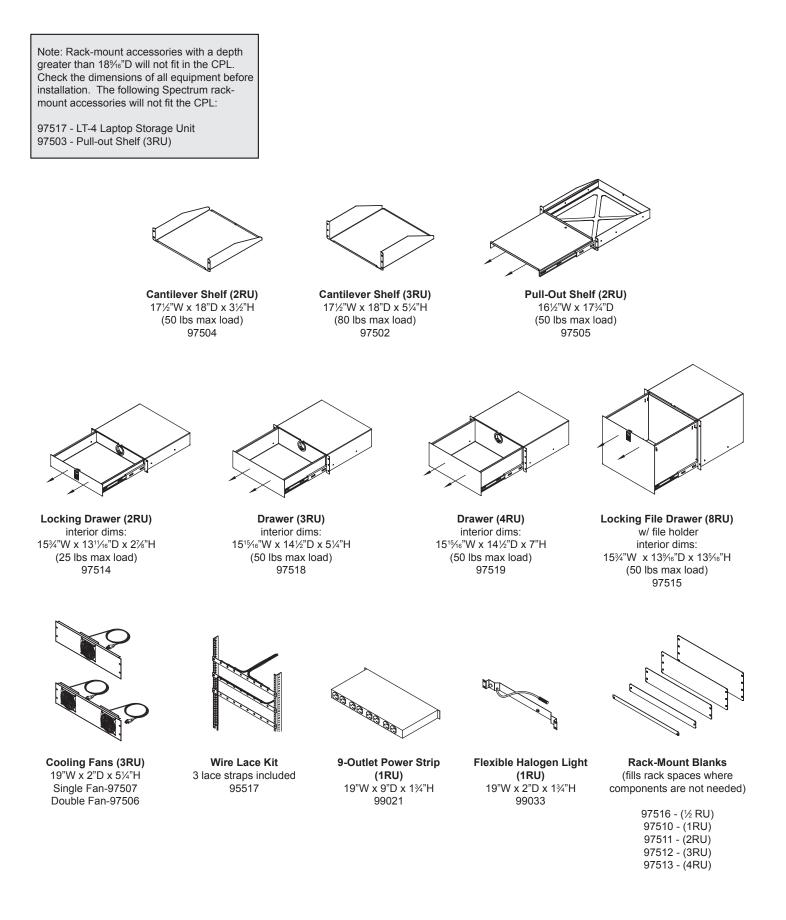

SPECTRUM

# Warranty

### WE WILL MAKE IT RIGHT FOR YOU!

Spectrum is committed to provide complete customer satisfaction. Each of our products are manufactured from the best materials available and each product is stringently monitored throughout the production process through our P.A.C.E. program (Product Assurance to meet Customer Expectations). Our Customer Service Help Line 1-800-235-1262 is ready to provide immediate attention to any questions, comments or concerns. We are available to answer your calls Monday through Friday from 7 am to 5 pm CST, excluding observed holidays. In addition your product comments or concerns are welcome via e-mail at: spectrum@spectrumfurniture.com.

### Warranty Statement

We guarantee all Spectrum products to be free of all defects in materials and workmanship, for the original owner, for a period of ten years. Any item deemed defective by Spectrum or the original manufacturer, under normal use conditions, will be repaired or replaced at Spectrum's discretion. This warranty applies to all products manufactured and distributed by Spectrum except the products listed below.

Items that have a varying warranty include, but are not limited to, the following:

- Adjustable Crank/Electric Desk Legs (1 yr)
- Flat Panel Desk Gas Cylinders (1 yr)
- Upholstered Soft-Goods (5 yrs)
- Adjustable Height & Stacking Chair Parts including frames, gas cylinders, wood and plastic parts, and control handles (7 yrs)
- Adjustable Height & Stacking Chair Casters (2 yrs)
- Chair Upholstery & Textiles (2 yrs of normal use of Soft Goods, Adjustable Height, Stacking, Wood and Metal Chairs)
- Chair Upholstery Graded-In Fabrics and C.O.M (no warranty)
- Height Adjustable Columns and Lifts (1 yr)
- General Use Casters (1 yr)
- Electrical Electri-Pak, Power Communication Modules, and special order ECA electrical items (1 yr)
- Electrical Power Strips & Electrical Timers (1 yr)
- Electrical Surge Suppressors (lifetime)
- · Electrical Retractable Power Cords (1 yr)
- Keyboard/Mouse Trays (1 yr)
- Flat Panel Monitor Arm General Parts (5 yrs)
- Flat Panel Monitor Arm Gas Cylinders (2 yrs)
- CRT Monitor Arm (1 yr)

Warranty is void if product is not used for its intended purpose or subjected to an unusual application, multiple-shift use, alteration, accident, abuse or abnormal wear and tear. Representations of colors on-line and in printed materials are meant to be a close reference to the actual colors but not an exact match. Slight variations in color and texture of wood stains, powder coating, laminates, fabrics and other materials are normal in different manufacturing lots; as such these variations are not considered defects.

**DESIGNED FOR INDOOR USE ONLY** – Unless specifically stated in the product specifications, Spectrum's products have been designed and constructed for indoor use only. Moving or using outdoors, or on excessively rough surfaces, may cause damage to the products and will void the warranty. If an outdoor application is desired please contact us to discuss potential custom design solutions.

### The warranty, as stated above, supersedes any previous warranties and is effective as of 9/1/2010



Touchboards

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com



INDOOR AIR QUALITY Indoor Advantage | Furniture





925 First Avenue, PO Box 400, Chippewa Falls, WI 54729 Ph: 1-800-235-1262 Fax: 1-800-335-0473