
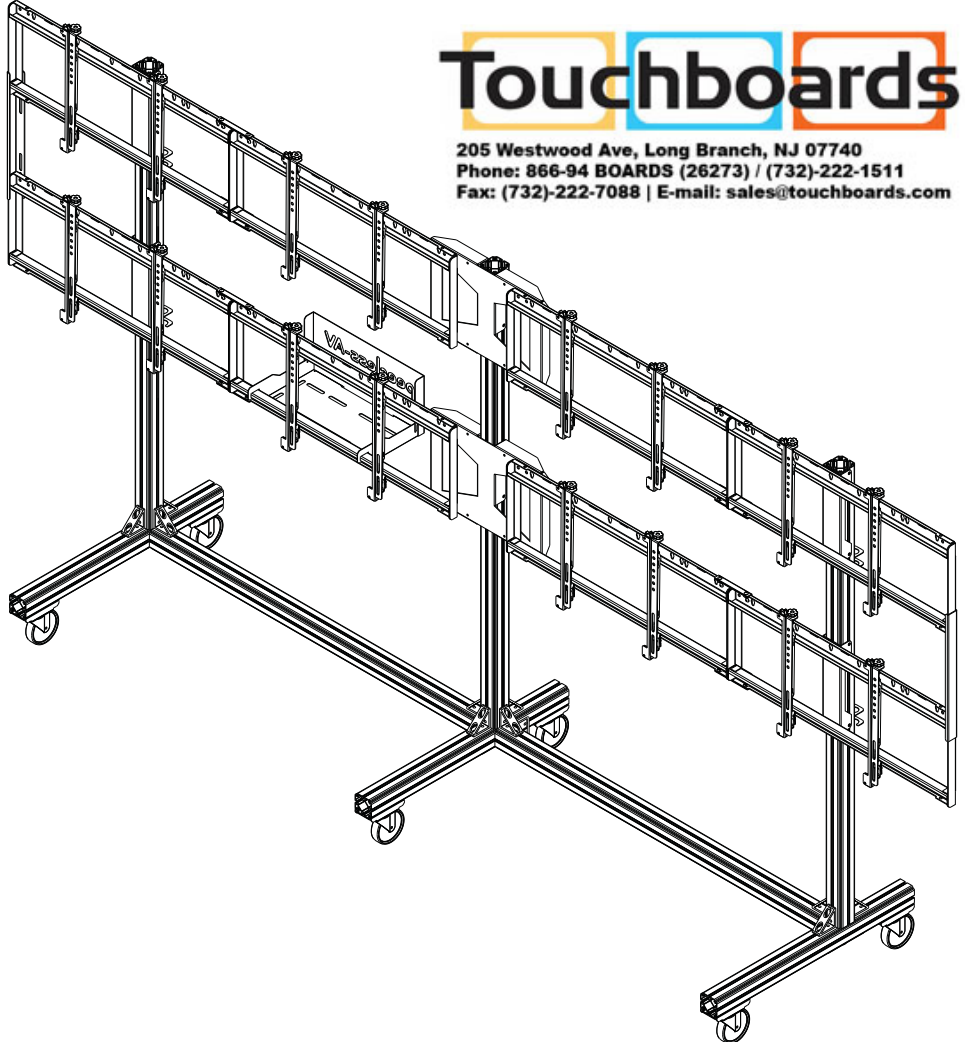


# peerless-AV<sup>®</sup>

## DS-C555-4X2

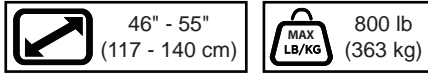

# Touchboards

205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: sales@touchboards.com



This page intentionally left blank.


## ⚠ WARNING

Do not begin to install product until you have read and understood the instructions and warnings contained in this user guide. Always use an assistant or mechanical lifting equipment to safely lift and position equipment. This product must be installed onto flat, hard, level surface to prevent tipping. The cart or stand is not affixed or secured to the floor, and may therefore tip over and/or fall if screen and/or stand is shaken or hit. Displays must be removed before moving cart. Not recommended for use in areas with heavy traffic. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury. Screws must be tightly secured. Do not overtighten screws or damage can occur and product may fail. Never exceed the Maximum Load Capacity. Be careful not to pinch fingers when operating the mount. For support please call customer care at 1-800-865-2112.

ENG Symbols



ENG WARNING

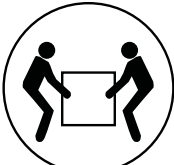


Heavy



ENG Screws must get at least three full turns and fit snug.




ENG Display center.

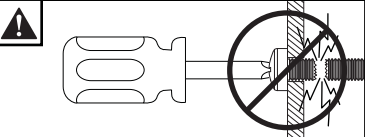

ENG Do not overtighten screws.

ENG Tools Needed for Assembly.

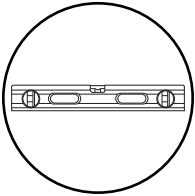


(13mm)




To properly tighten screws: Tighten until screw head makes contact, then tighten another 1/2 turn. Do not overtighten screws.


1

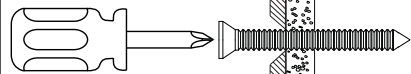

2

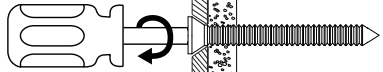

3

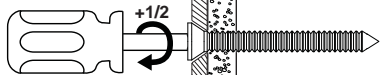


4




Parts (Before beginning, make sure you have all parts shown below).

## Parts List

Description	Qty	Part #
A caster, 5" swivel	6	600-0026
B caster support	6	145-T1799
C cover	9	145-T1809
D base leg	3	145-T1767
E horizontal leg support	2	145-T1785
F base support tube	3	145-T1812
G base support	12	560-T1261
H vertical leg support	3	145-T1777
I adaptor bracket	16	145-T1792
J side support bracket	2	145-T1807
K vertical support bracket	4	145-T1806
L computer cover	1	145-T1930
M computer shelf	1	145-T1931
N dual cross support	4	145-T1924
O locking tab	6	145-T1936
P cord bracket	6	145-T1929
Q bracket, 4x2 configuration	2	145-T1858
R M8 x 16mm socket button screw	180	520-9527
S M8 square nut	108	530-1066
T cover clip	36	590-0317
U M5 x 10mm type-f, socket pin screw	18	520-1164
V M5 x 12mm socket pin screw	6	520-1064
W 1/4" power bit	1	560-0263
X 5mm allen wrench	1	560-9640
Y nylon shoulder washer	32	590-2233
Z M6 x 12mm socket pin screw	32	520-1050
AA 4mm allen wrench	1	560-9646

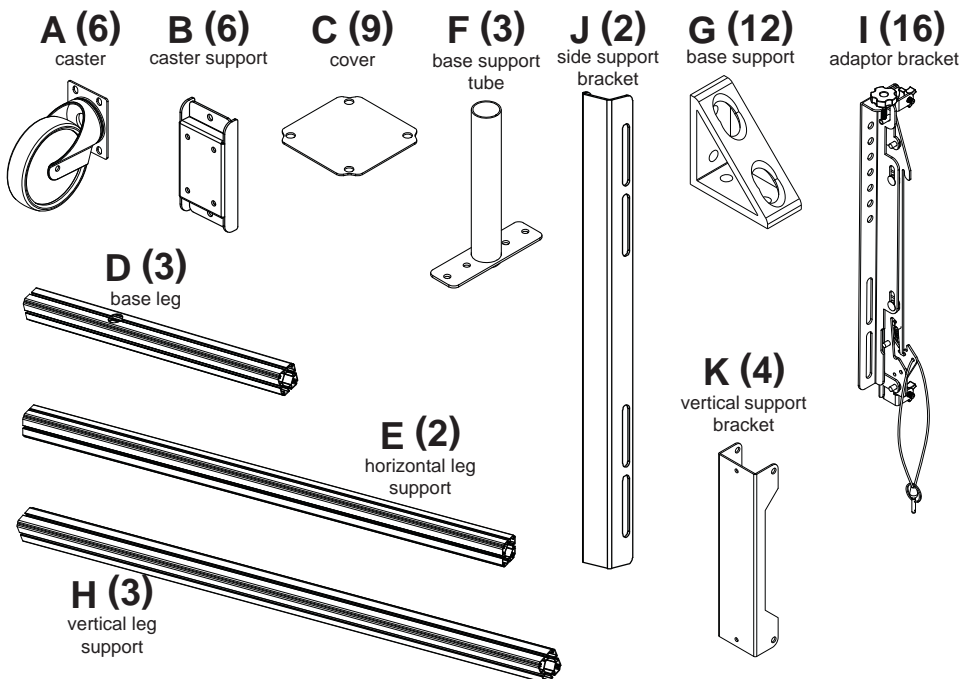

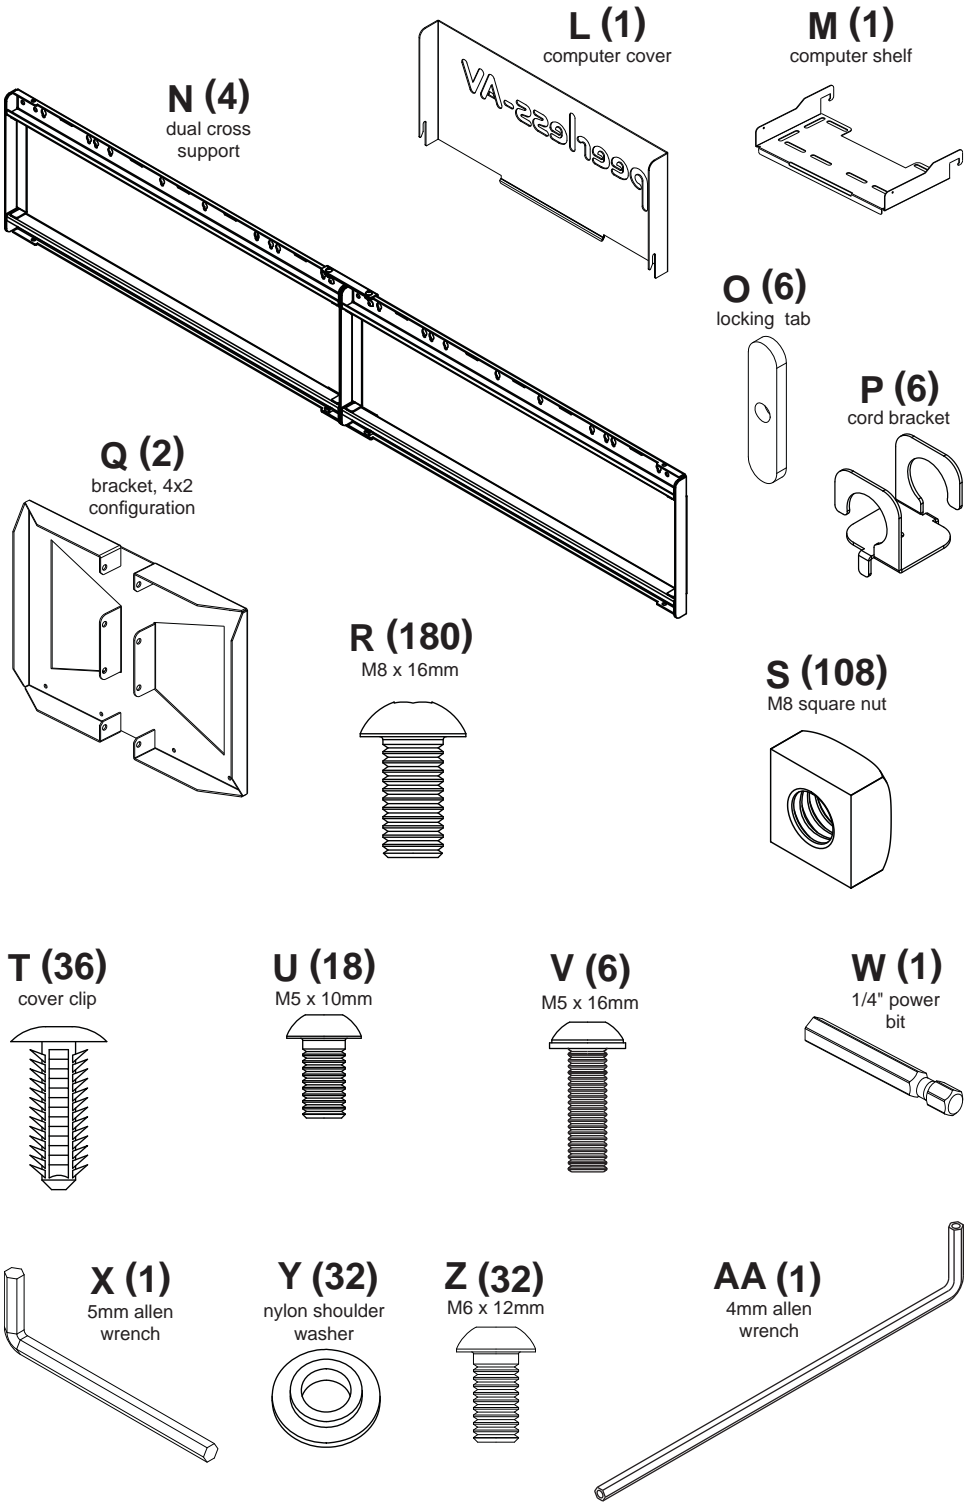

**N (4)**  
dual cross  
support

**L (1)**  
computer cover

**M (1)**  
computer shelf

**Q (2)**  
bracket, 4x2  
configuration

**O (6)**  
locking tab

**P (6)**  
cord bracket

**R (180)**  
M8 x 16mm

**S (108)**  
M8 square nut

**T (36)**  
cover clip

**U (18)**  
M5 x 10mm

**V (6)**  
M5 x 16mm

**W (1)**  
1/4" power  
bit

**X (1)**  
5mm allen  
wrench


**Y (32)**  
nylon shoulder  
washer

**Z (32)**  
M6 x 12mm


**AA (1)**  
4mm allen  
wrench

1


Repeat for each caster assembly.

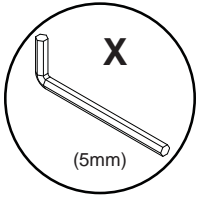



**R (4)**

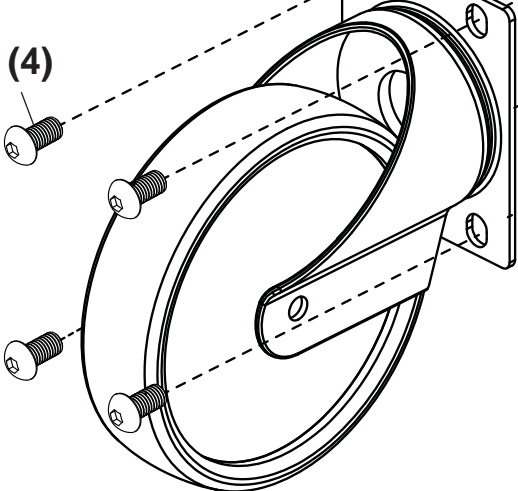

**B**

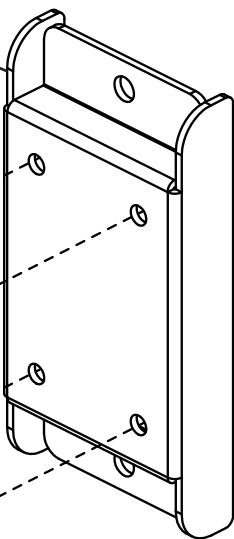


**A**

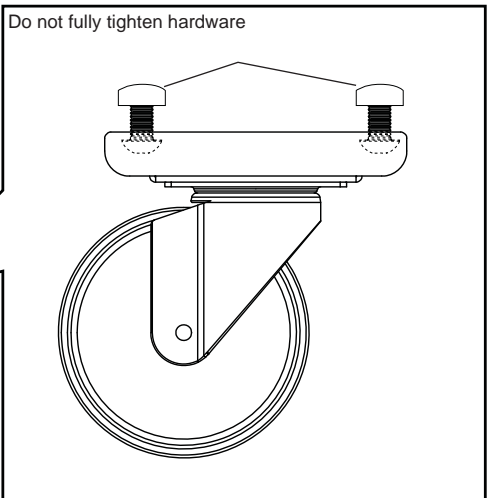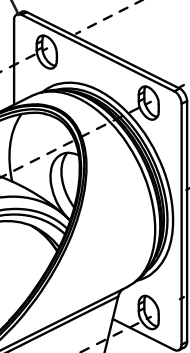

**S (2)**





**R (2)**

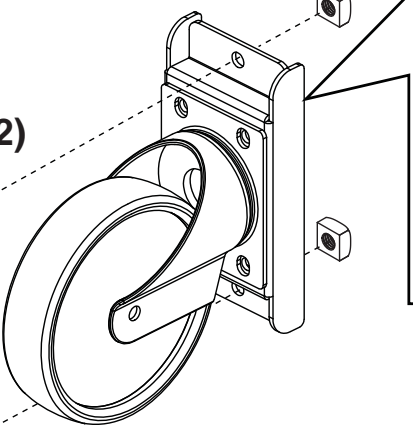

**SIDE VIEW**



2

Repeat for each base leg assembly.

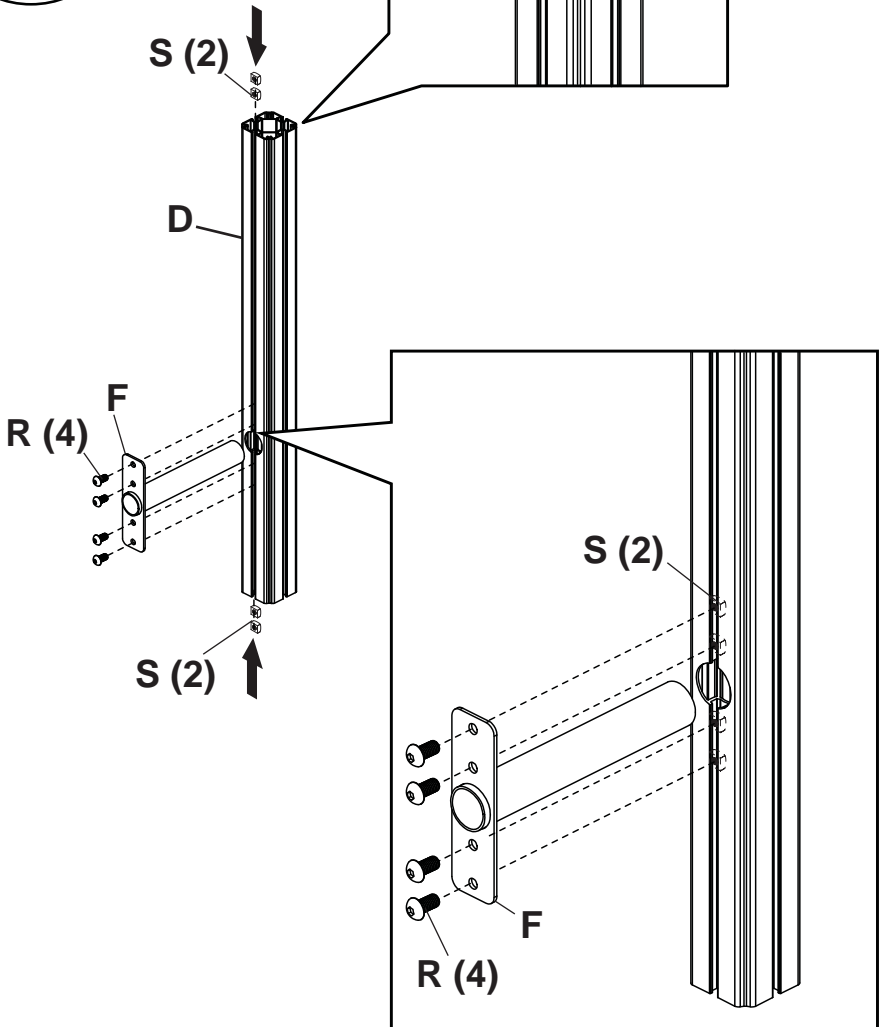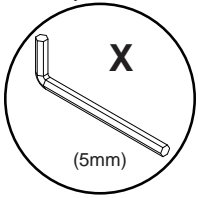


### 3

Repeat for each base leg assembly.

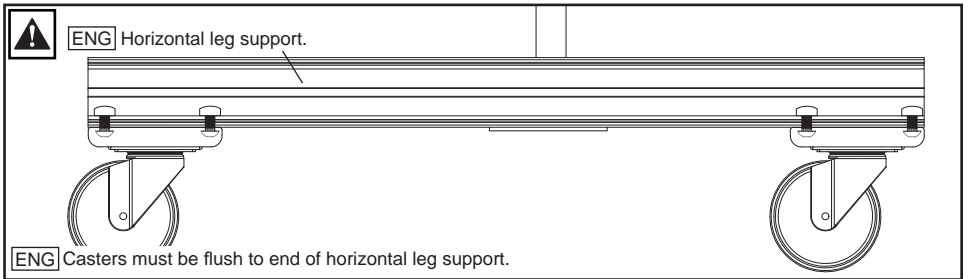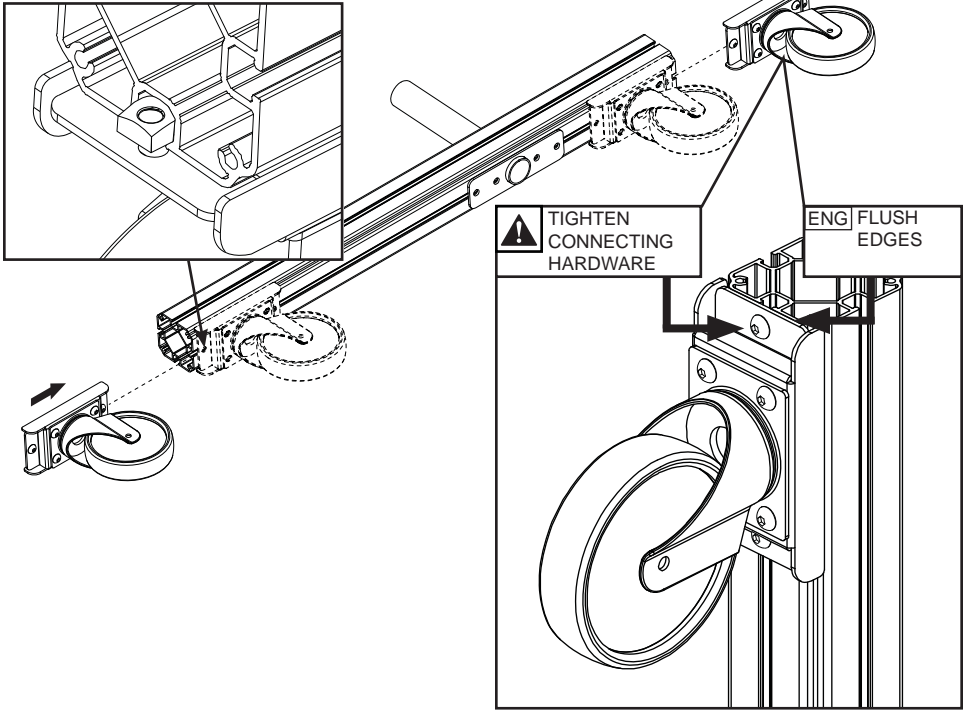

### 4


Repeat for each base support (x12).

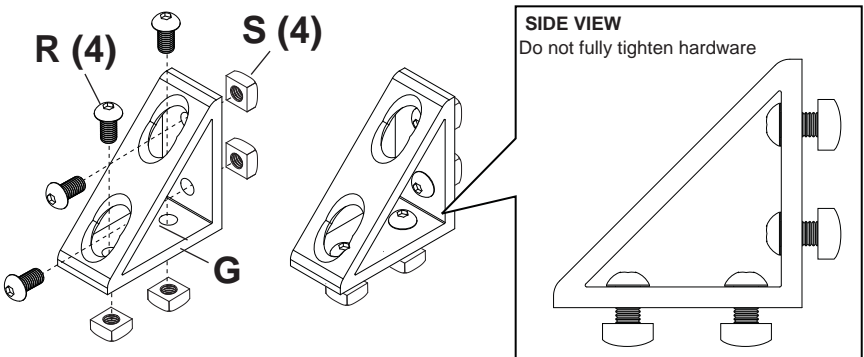




5

Repeat for each side (x2).

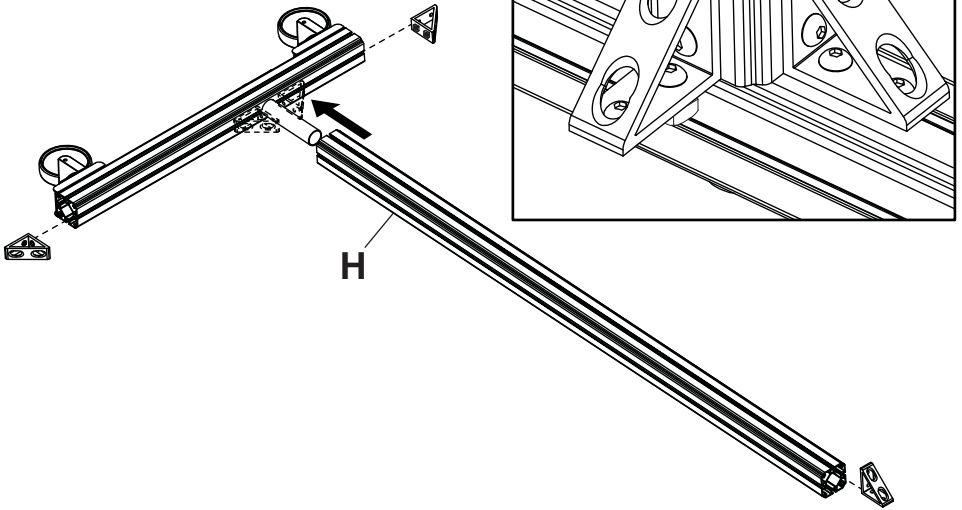


6

Assemble middle support bracket.



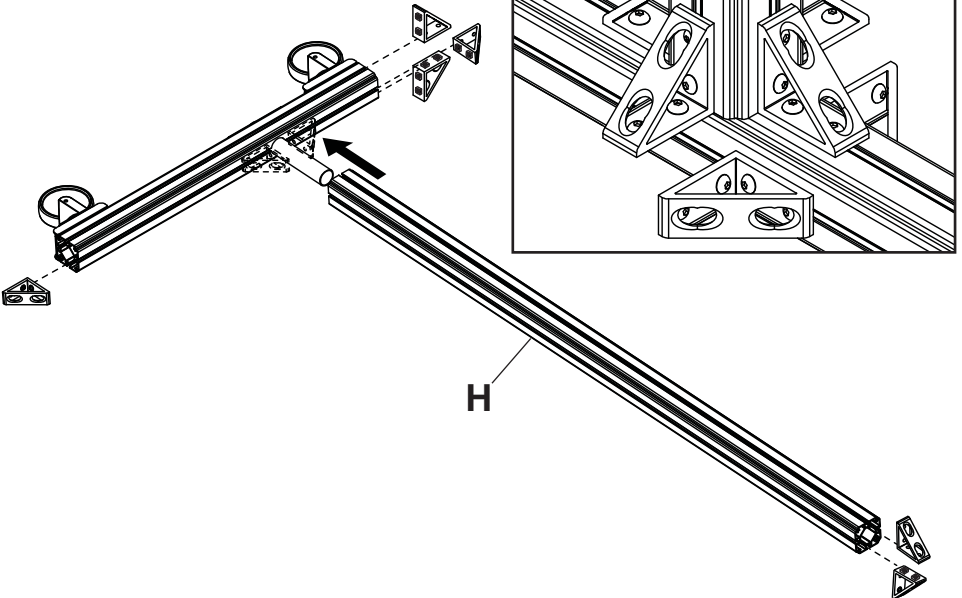


7

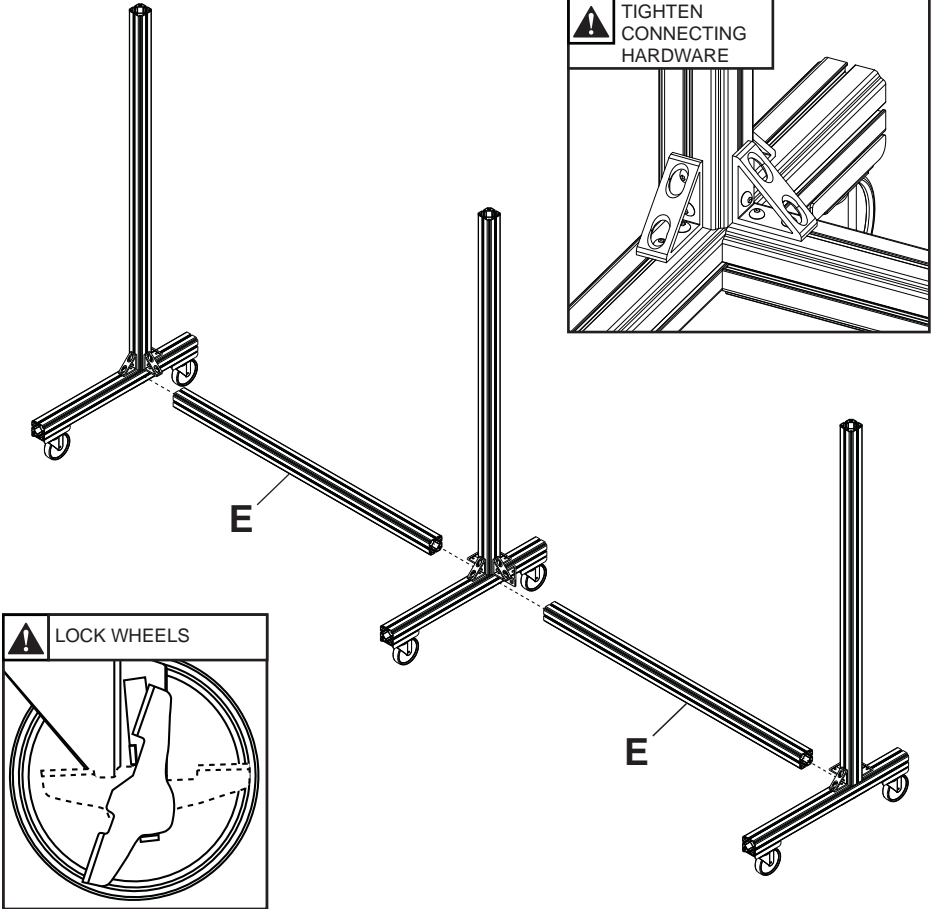 

8


Repeat for each vertical support bracket (x4).

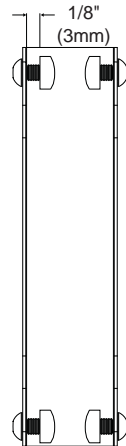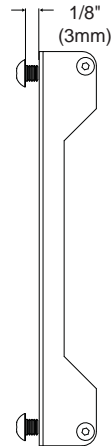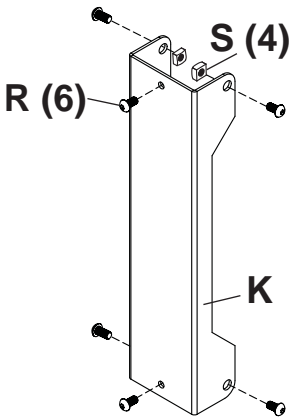



# 9

Use metric formula below and diagram to right to determine hole pattern required for center vertical support bracket. Repeat (x2).




All dimensions are metric.

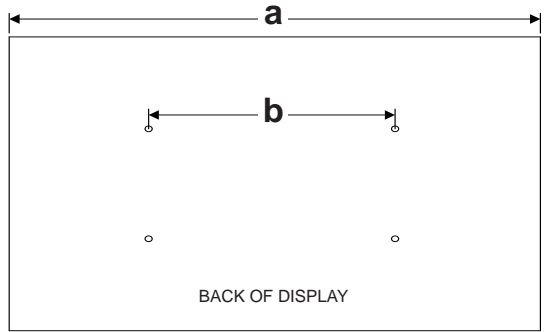


Use the outside mounting holes when...  
 $a \times 4 > 4368\text{mm}$  and  $a \times 3 + b < 4318\text{mm}$

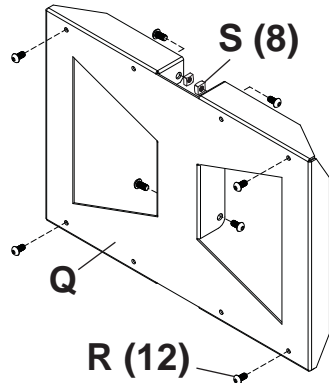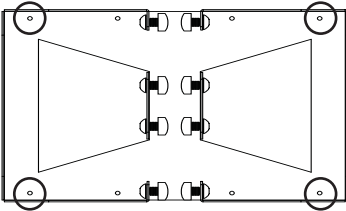


Use the inside mounting holes when...  
 $a \times 4 > 4098\text{mm}$  and  $a \times 3 + b < 4064\text{mm}$

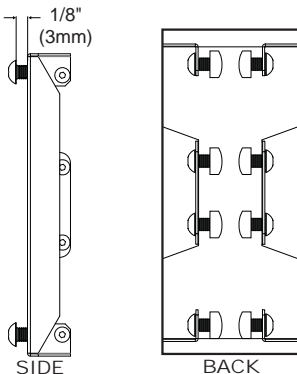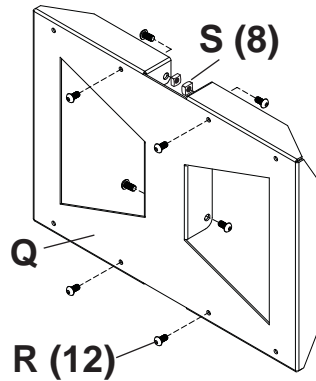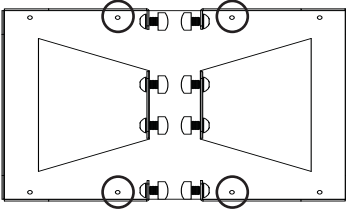

10

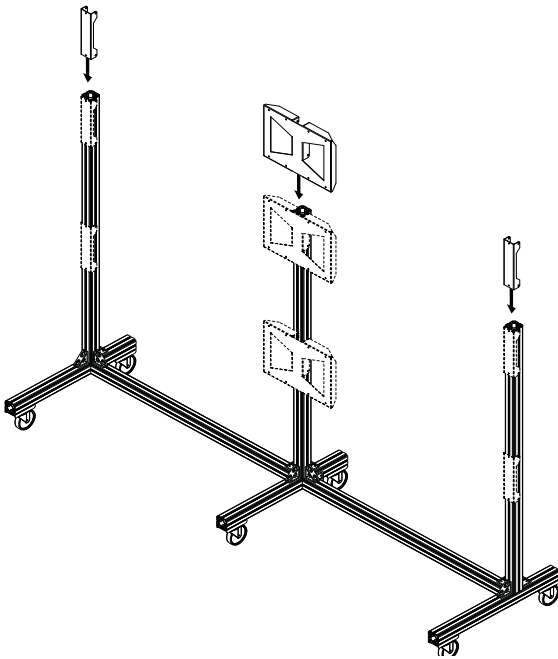


11

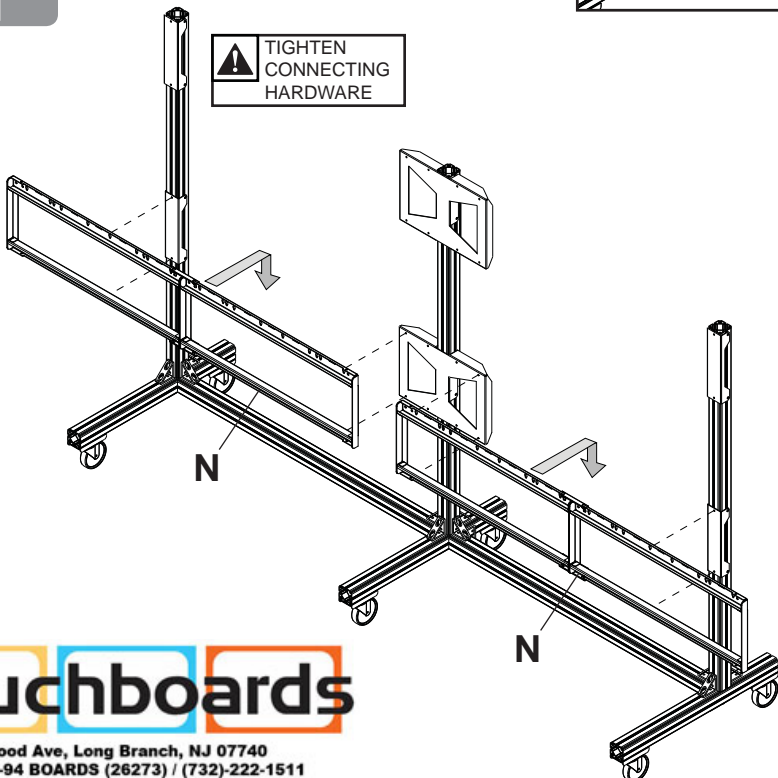


**Touchboards**


205 Westwood Ave, Long Branch, NJ 07740  
Phone: 866-94 BOARDS (26273) / (732)-222-1511  
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

12


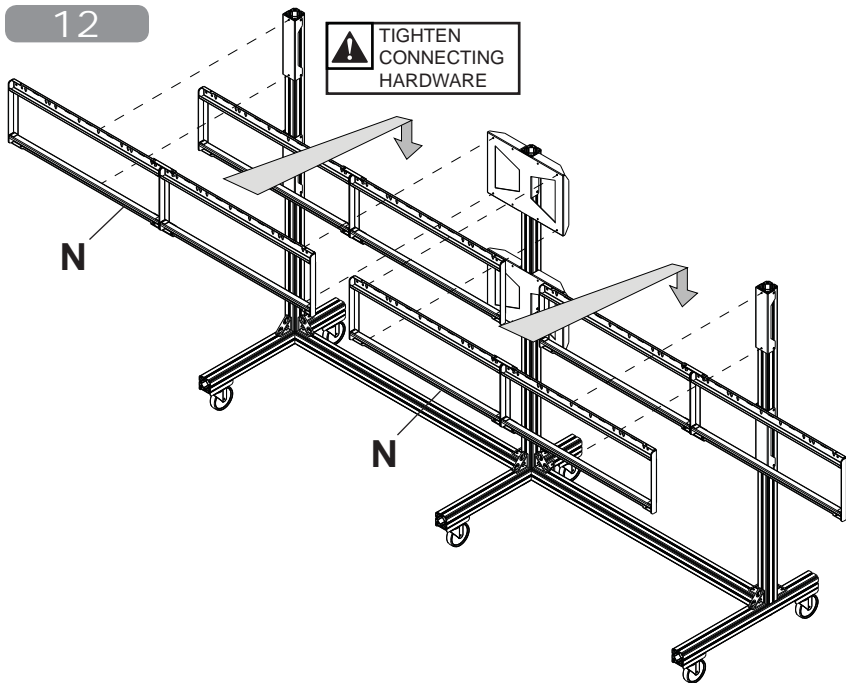


13

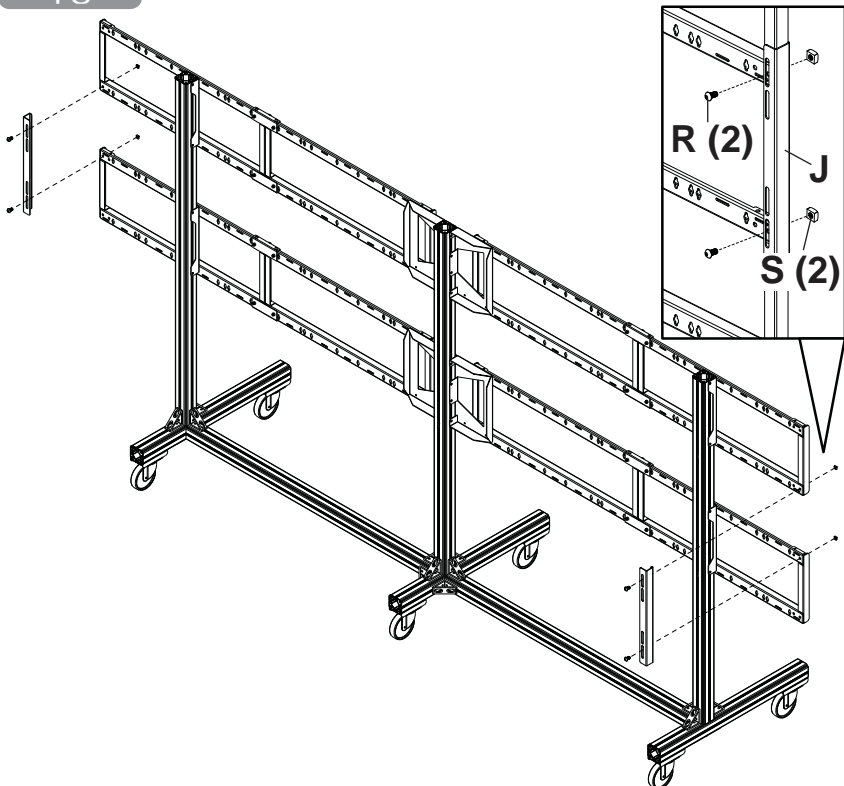





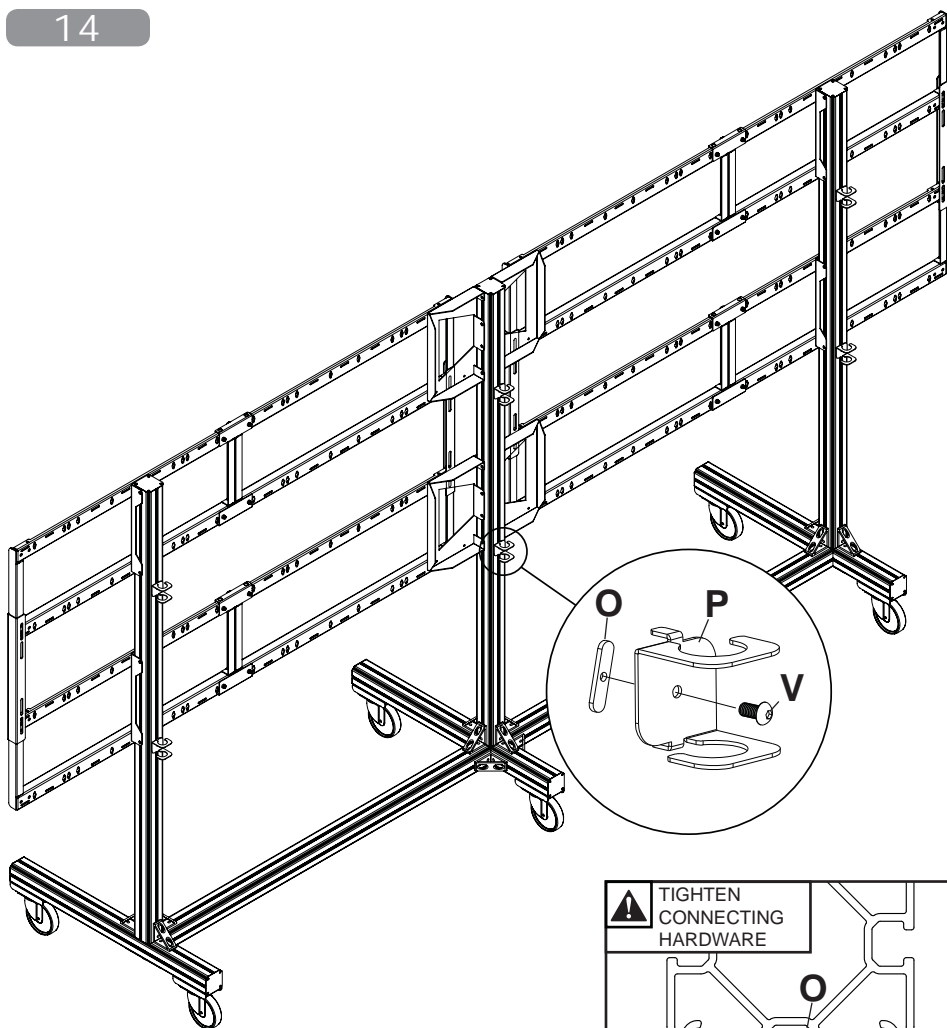


OPTIONAL: Unlock wheels to move cart to desired location; Lock wheels before hanging screens.

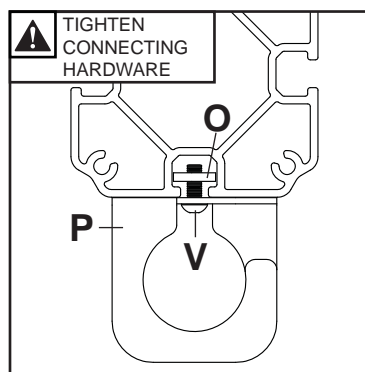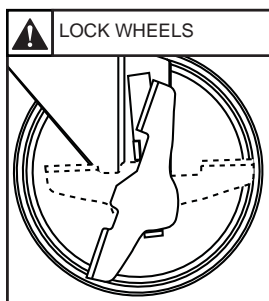




TOP VIEW

Center adaptor brackets vertically on back of screen.

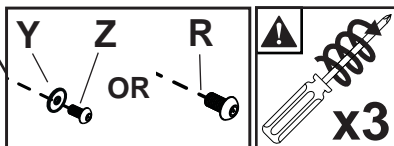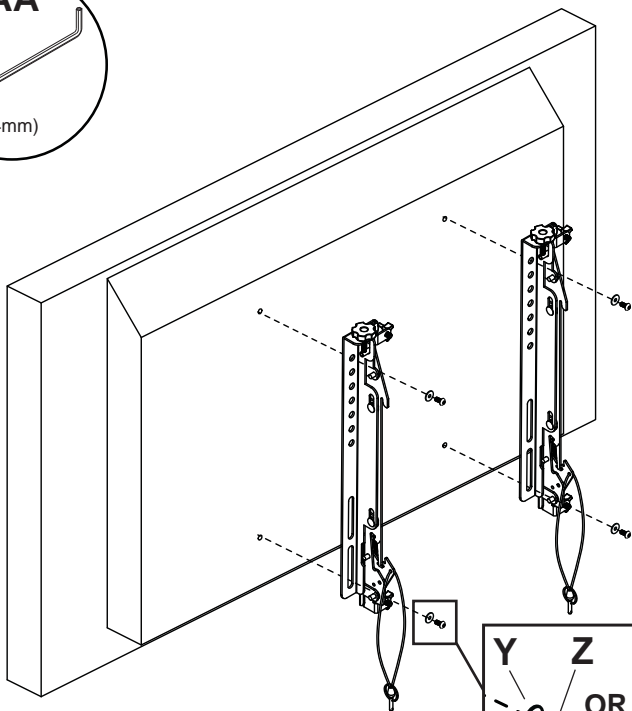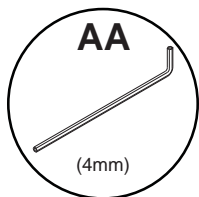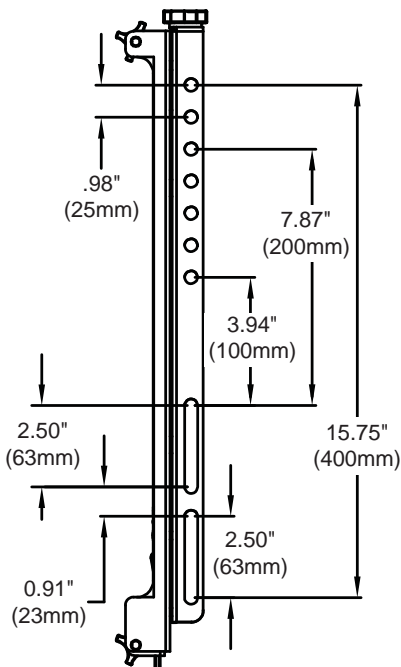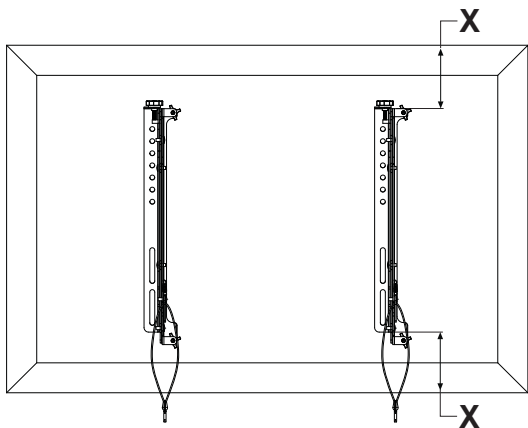




## 16-1

Must hang displays to bottom row first; Secure pin in "locked" position.

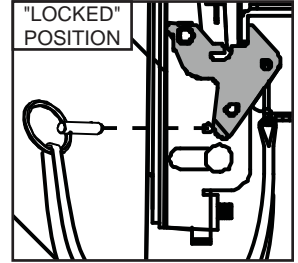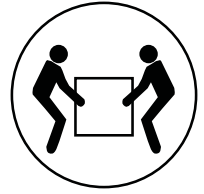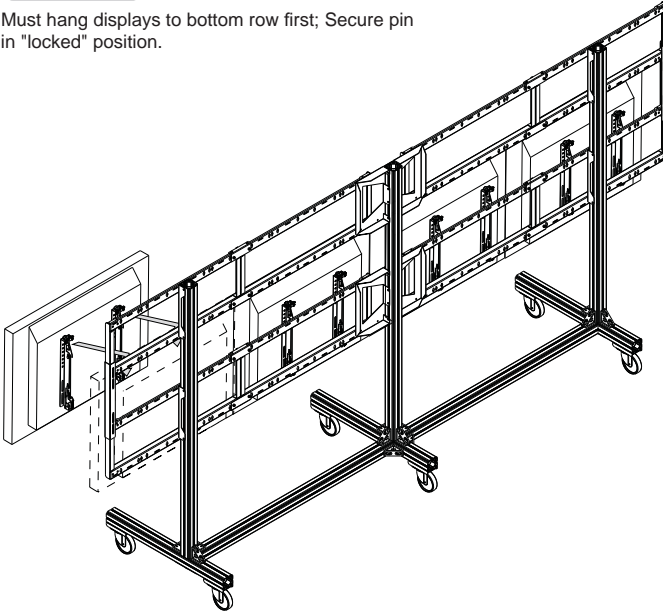

## 16-2



Must hang displays on top row last; Secure pin in "locked" position.

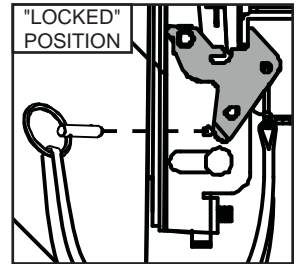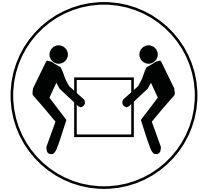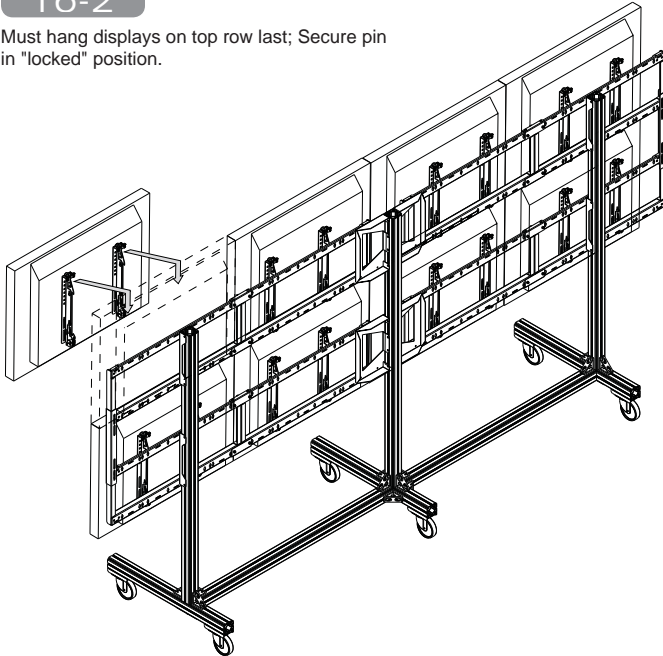





# 16-3




OPTIONAL: Insert M5 x 10mm type-F socket pin screws to lock latches.

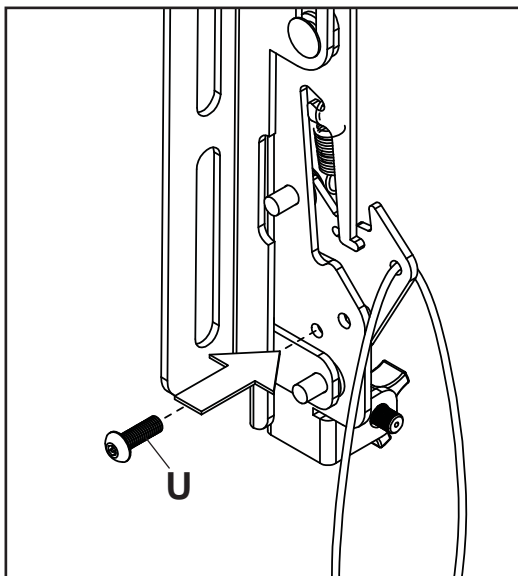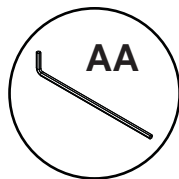


# Display Adjustment

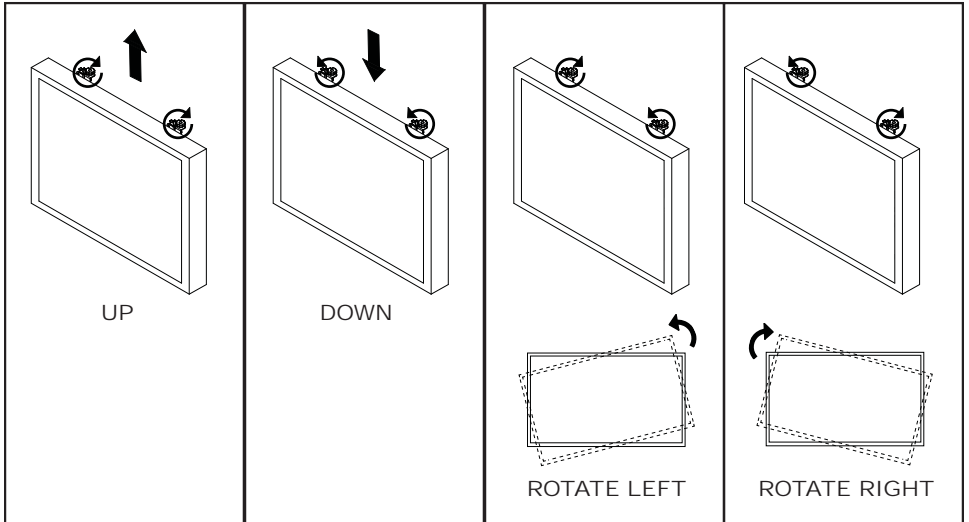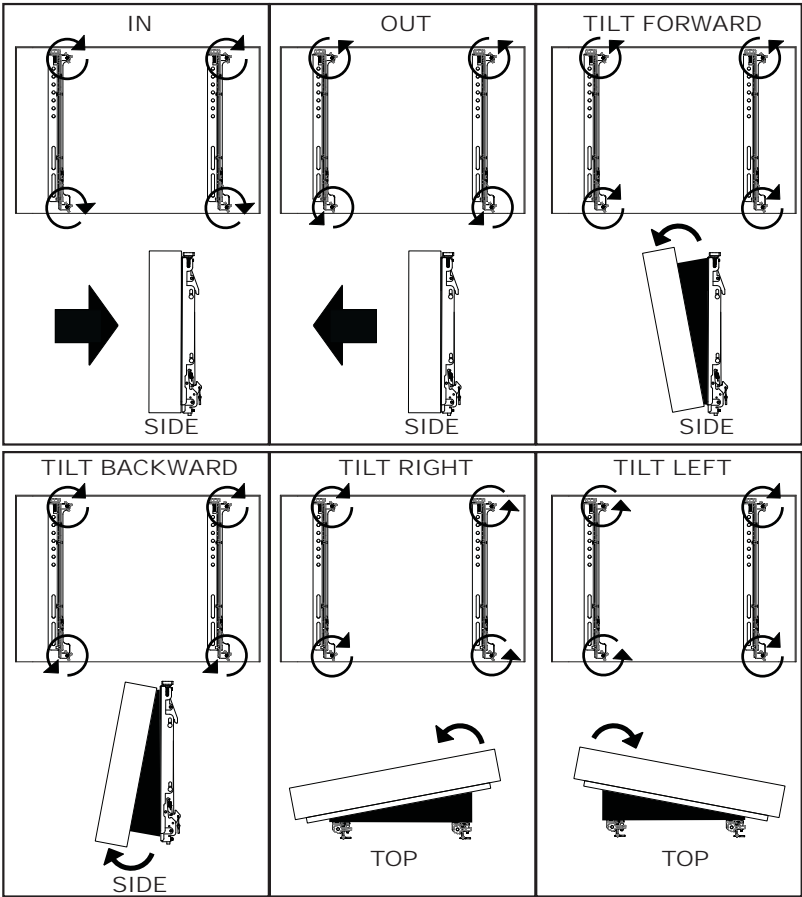


17

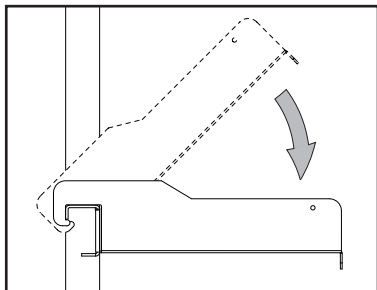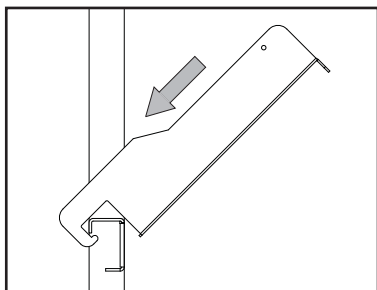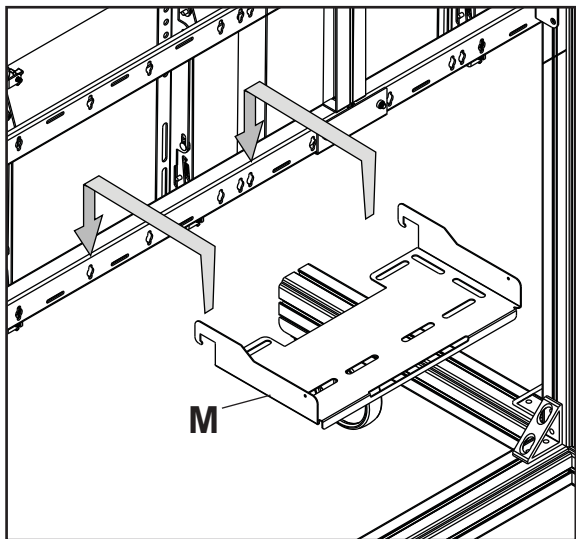



18

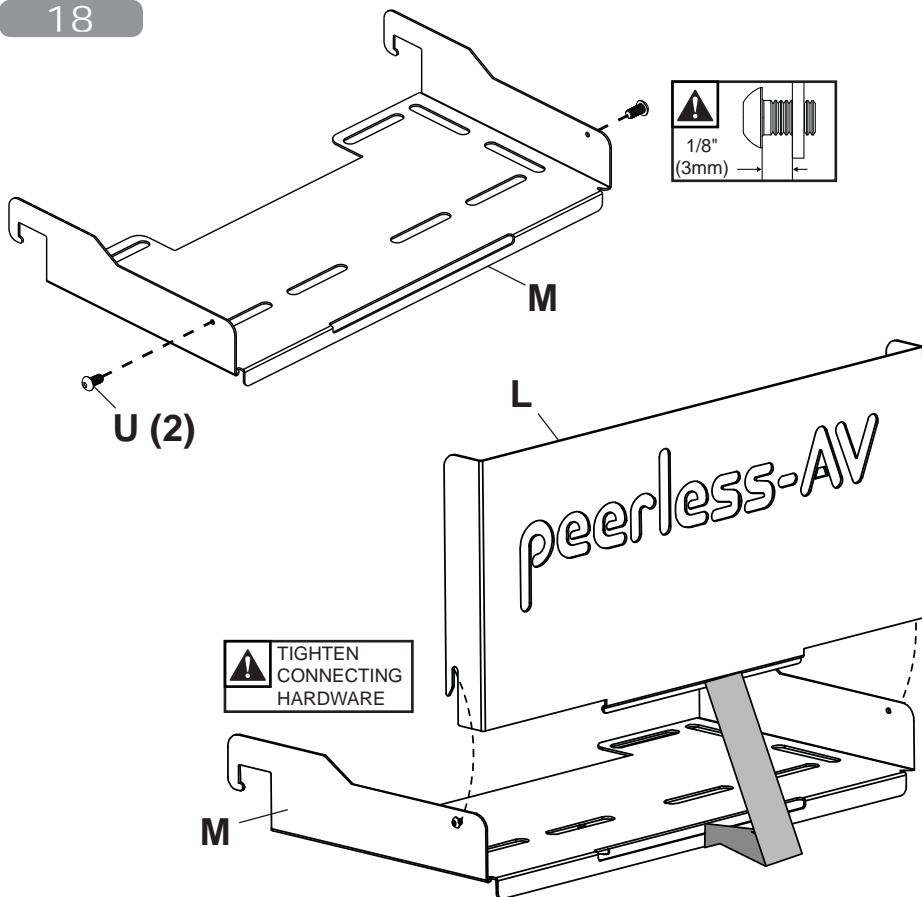

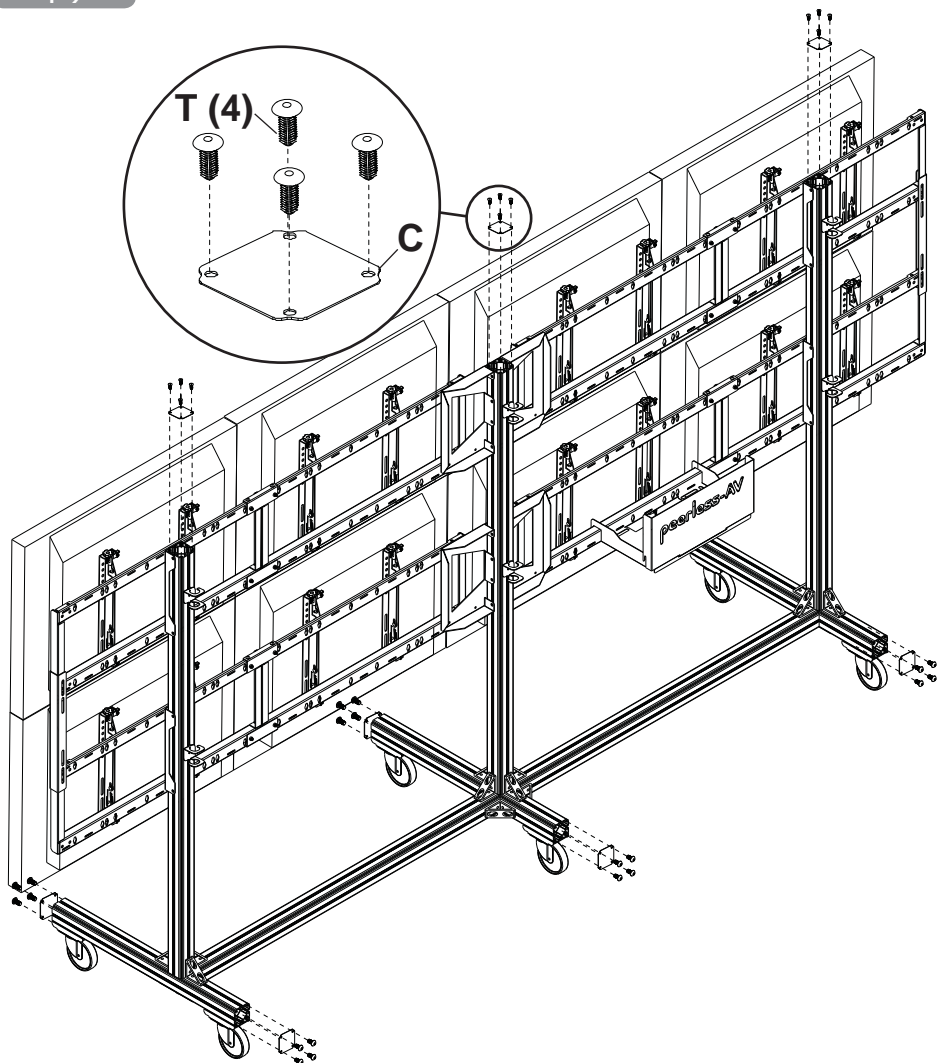


Route cables through cord brackets.

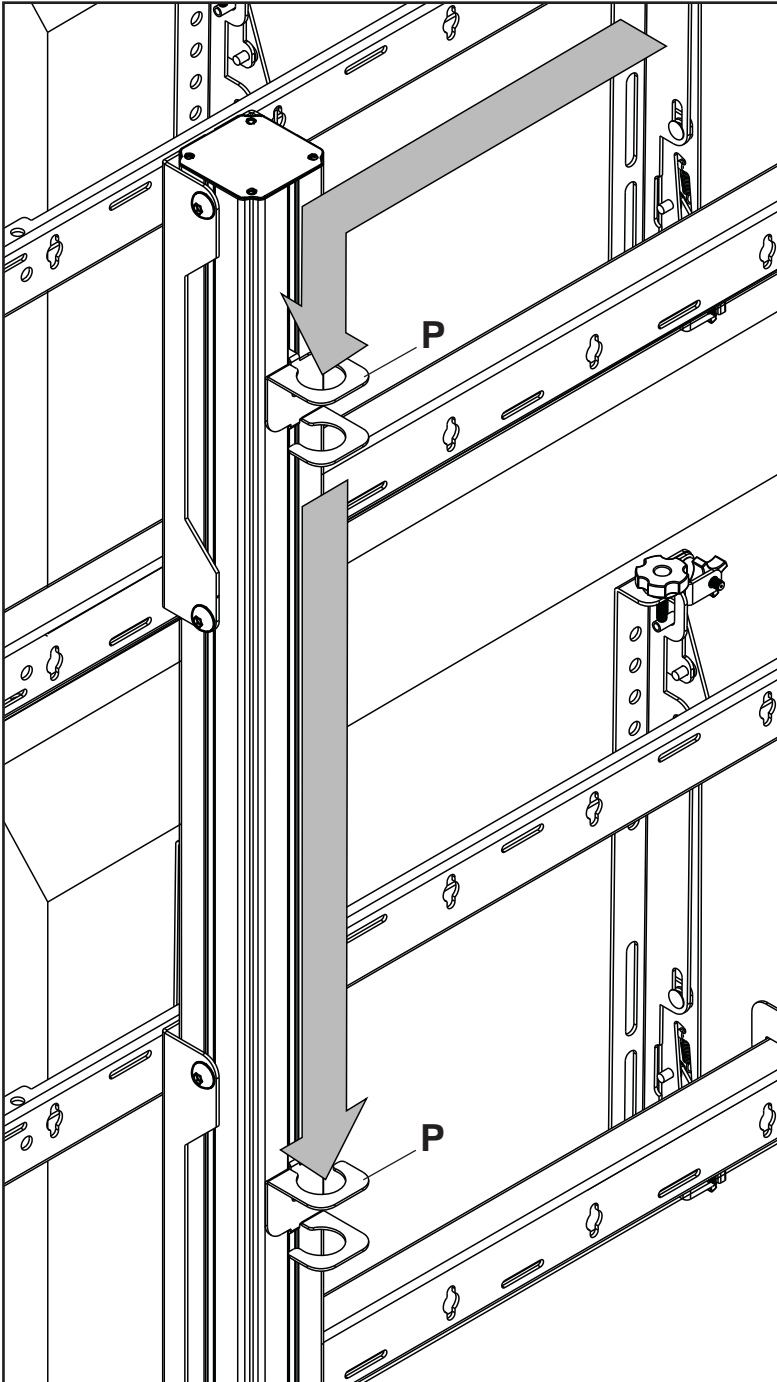



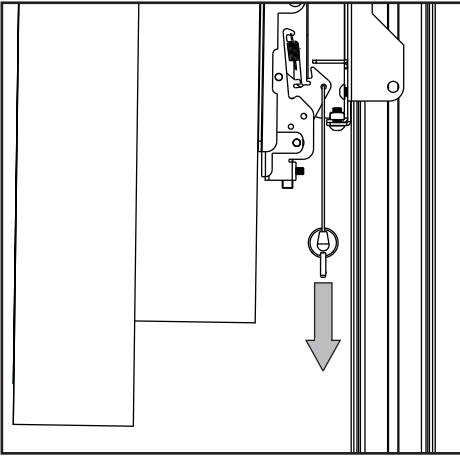


Pull down on bracket cords and hold.



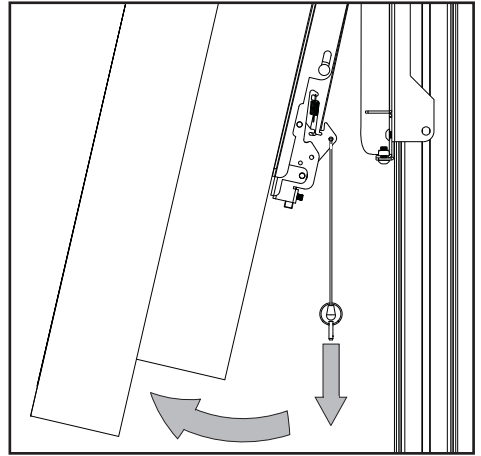


Swing screen away from cart and lift to remove.

Remove displays from top row first.

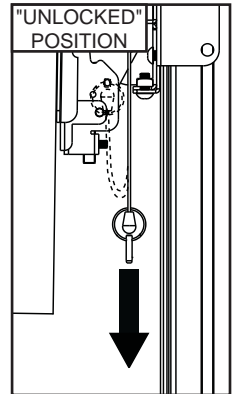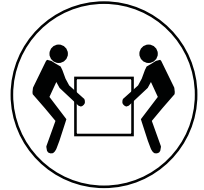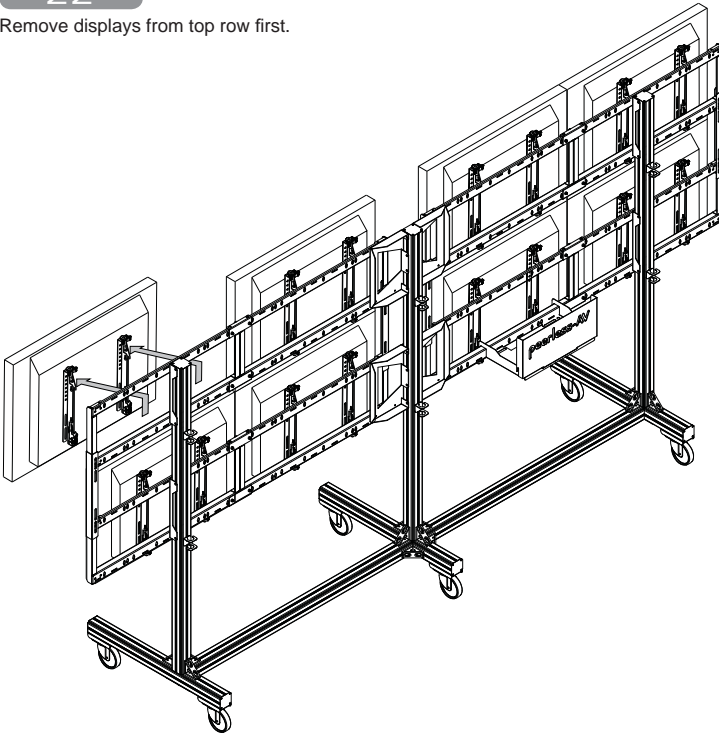

Repeat step 21 to remove displays from bottom row last.

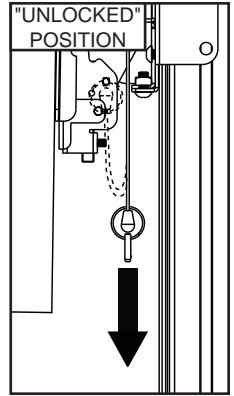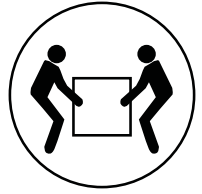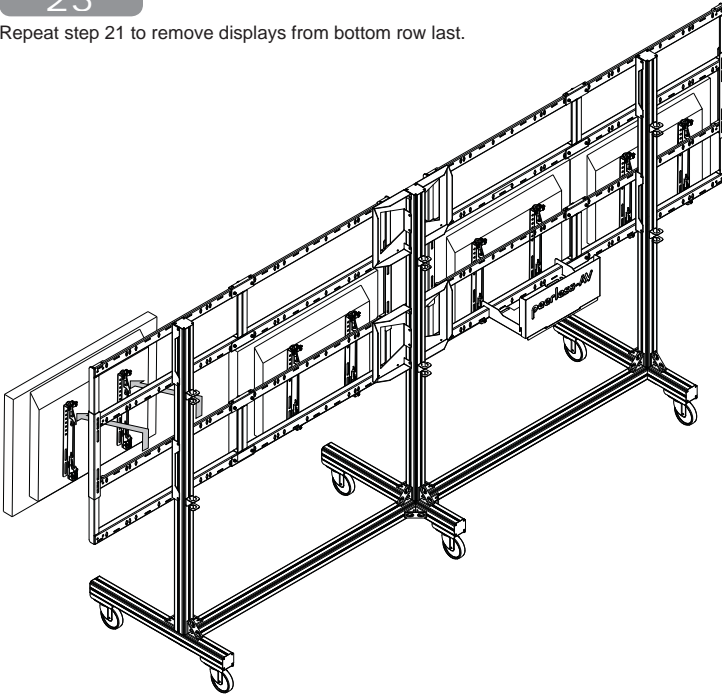

## LIMITED FIVE-YEAR WARRANTY

Peerless Industries, Inc. ("Peerless") warrants to original end-users of Peerless® products will be free from defects in material and workmanship, under normal use, for a period of five years from the date of purchase by the original end-user (but in no case longer than six years after the date of the product's manufacture). At its option, Peerless will repair or replace, or refund the purchase price of, any product which fails to conform with this warranty.

**In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above.** Some states do not allow limitations on how long a implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless' instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third party actions and force majeure.

**In no event shall Peerless be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless® product.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, expressed or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless in connection with the sale of any Peerless® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.



**205 Westwood Ave, Long Branch, NJ 07740**  
**Phone: 866-94 BOARDS (26273) / (732)-222-1511**  
**Fax: (732)-222-7088 | E-mail: sales@touchboards.com**

**peerless-AV<sup>®</sup>**

**Peerless-AV**  
2300 White Oak Circle  
Aurora, IL 60502  
Email: tech@peerlessmounts.com  
Ph: (800) 865-2112  
Fax: (800) 359-6500  
www.peerless-av.com

**Peerless-AV Europe**  
Unit 3 Watford Interchange,  
Colonial Way, Watford, Herts,  
WD24 4WP, United Kingdom  
Customer Care  
44 (0) 1923 200 100  
www.peerless-av.com

**Peerless-AV de Mexico**  
Ave de las Industrias 413  
Parque Industrial Escobedo  
Escobedo N.L. Mexico 66050  
Servicio al Cliente  
01-800-849-65-77  
www.peerless-av.com