 



DTen Wireless Display 70" Quick Start Guide

STEP 1

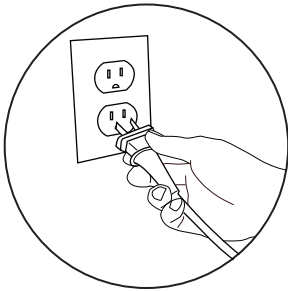


Plug in the power cord.

 STEP 2

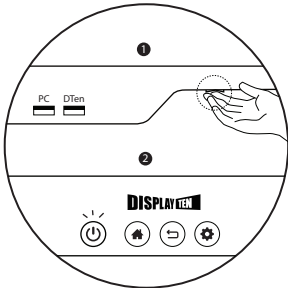


Turn on the power switch located underneath the wireless display. The power button will light up.

 STEP 3

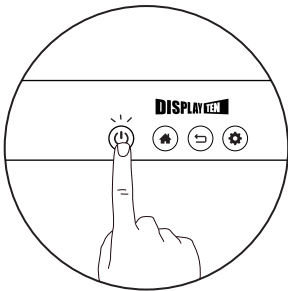

 Press the power button to turn on the monitor.

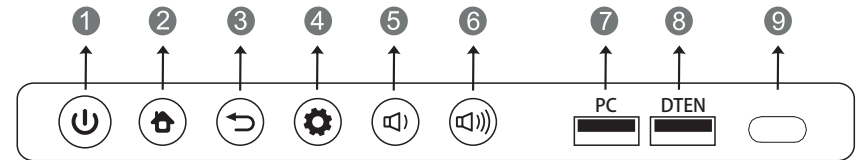

Items	Function description	
1		Tap to enter Sleep mode
2		DTEN Home: back to main interface
3		Return: return to previous level menu
4		System Settings
5		Volume down
6		Volume up
7	PC	Optional PC USB port
8	DTEN	DTEN system USB port
9	Remote control signal receiver	Receiving remote control signal

Disclaimer

When any of the following cases occurs, the company does not guarantee the liability of free maintenance.

- A. Product damages caused by violating the user guidance.
- B. Hardware damages caused by improper assembly.
- C. Product damages caused by unauthorized modification or maintenance.
- D. Product damages caused by using in unpermitted environment.
- E. Product damages caused by abnormal external force.
- F. Product damages caused by natural disasters or other force majeure.
- G. Privately tear off or damage disassembly tabs.
- H. Unable to provide effective purchase certificate.



Simple troubleshooting DTEN fails to work normally

Remote control failure	1.Check whether there are other objects between remote control and television remote control receiving window, thus leading to failure of remote control. 2.Check whether the battery electrode in the remote control is correct. 3.Check whether remote control needs to replace battery.
Machine automatically shut down	1.Whether set sleep or not. 2.Check whether there is sudden power outage. 3.Check whether there is no signal automatic shutdown.

PC mode

Signal out of range	1.Check whether display is set correctly. 2.Check whether resolution is the best resolution. 3.Adjust line and field synchronization in menu.
Background has vertical lines or streaks	1.Select automatic correction in menu. 2.Adjust clock and phase position in menu.
Image lack of color, color is incorrect	1.Check whether VGA is not well connected or has quality problem. 2.Adjust chromaticity and brightness or contrast in menu.
Display format that is not supported	1.Select automatic correction in menu. 2.Adjust clock and phase position in menu.

Touch Function

Touch function invalid	1.Check whether touch driver is installed and started. 2.Check whether the size of article touched is comparable with finger.
Touch positioning not correct	1.Check whether driver is properly installed and make correction. 2.Check whether touch pen is facing the screen.

Video function can't work normally

No picture and no sound	1.Check whether the machine is started state. 2.Check whether signal wire is well plugged, whether INPUT is corresponding to it. 3.If in internal computer mode, check whether internal computer is started.
With horizontal or vertical stripes or image dithering	1.Check whether signal wire is well connected. 2.Check whether other electronic equipment or power tools are placed around the machine.
No color, color is weak or image is weak	1.Adjust chromaticity and brightness or contrast in menu. 2.Check whether signal wire is well connected.

Audio function can't work normally

With image but without sound	1.Check whether mute button is pressed for mute. 2.Press VOL. + / - to adjust volume. 3.Check whether audio line is connected correctly.
Only one speaker has sound	1.Adjust sound balance in menu. 2.Check whether computer sound control panel only sets up one sound channel. 3.Check whether audio line is connected correctly.
VGA output without sound	1.Check whether connect external device with headphone cable.



Safety Warning

Placement

Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.

Do not expose the unit to direct sunlight and other sources of heat.

Do not put the unit near appliances that generate magnetic fields.

Do not handle liquids near or on the unit.

Never spill liquid of any kind into the unit

Do not put heavy objects on top of the unit.

Power Supply

Check that the unit's operating voltage is identical with the your local power supply

Please unplug power supply and aerial plug when the weather is thunder-storm or lightning.

Please unplug power supply, when there is nobody at home or don't use over a long period of time .

Please keep power cord from physical or mechanical damage.

Please use exclusive power cord, don't modify or lengthen it.

Please check and ensure AC source is connected with the ground.

LED Screen

Never use any other hard or sharp object to replace the written pen.

Unplug the power supply before cleaning.

Clean the screen with a soft , dustless and dry cloth.

Never use water or the spray type detergent to clean the unit.

For deep clean, contact an authorized service center.

Please don't display the high brightness image on the screen for a long time.

Sight Distance

The best distance between audience and screen is 5-7 times that of screen diagonal length.

The best watching angle between audience and screen as top and bottom, or so inside 176 degrees.

Temperature

Do not place the unit near or over a radiator or a heater register.

If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours to let that moisture may have formed inside the unit can dry completely.

Normal operating temperature is 0 ~ 40℃ .

Humidity

Do not expose the unit in rain, damp or place near water .

Ensure the indoor / inner environment drying and cool.Nomal operating humidity is 10~90%.

* Subject to change without notice