

INPUT CONNECTIONS



Simple Logger® II L101
 Isolated BNC connector accepts
 current probes with male BNC plugs.



Simple Logger® II L102
 Dual isolated BNC connectors accepts
 current probes with male BNC plugs.



Simple Logger® II L111
 Recessed 4mm banana jacks &
 fused input



Simple Logger® II L261
 Recessed safety 4mm banana jacks



Simple Logger® II L322 & L432
 4-pin removable terminal strip



Simple Logger® II L562
 Isolated BNC for current probe.
 Recessed 4mm banana jacks for
 voltage accepts current probes with
 male BNC plugs.



Simple Logger® II L642
 Dual miniature thermocouple connectors



All Simple Logger® II Models
 Mini USB 5-pin connector



Type A to 5-pin mini-B USB 2M
 Cat.. #2126.49