Power Quality Logger Models PQL 100 & PQL 120

Power Quality Analysis Made Simple!



The PQL 100 Series is a single phase Power Quality Logger designed to measure and log from a complete suite of electrical and power quality parameters. It is accompanied by an easy-to-use report compliant software package. We provide several report templates to facilitate your work.

The PQL 100 Series is designed for North American commercial, industrial and residential applications, and is plugged into a standard AC receptacle. In turn, any 120V load may be plugged into the Power Quality Logger: office equipment, data equipment, machinery, compressors, heaters, motors, etc.

In industrial, commercial and residential sites, power quality is critical and may induce many problems, the causes of which need to be identified. Outages reset clocks, timers and other sensitive devices; odd harmonics cause overheating in neutrals; harmonic energy causes motors and other devices to run improperly; spikes cause lighting to burn out prematurely; and surges and sags cause irritating flicker in lighting systems as well as inefficient machine operation.

The main advantage of the PQL 100 Series is its ability to perform a wide variety of recording tasks with high resolution and accuracy and easy, intuitive setup from a computer. The PQL 100 measures, records and stores selected parameters in its memory. Along with standard electrical parameters (V, A, W, Var, PF...), it also stores the Power Quality of the input waveforms (Harmonics, THD, Surge,

Sag, K-Factor...). The recorded information is retrieved from a computer via an RS-232 serial link using the report compliant DataView® software package, which provides graphs, data and pre-configured reports. With the DataView® edition, measurements and waveforms may be viewed in "real time" on a computer monitor and stored directly into the computer memory. Custom views and reports can then be created.

The Power Quality Logger is line powered from the voltage source that it is connected to, with an internal battery to protect data integrity during power outages for up to one year.



Features

- · Portable, compact unit plugs into standard US 120V outlets
- Simple operation: Plug in, Record, Download and Read
- Measures and stores electrical parameters: V, A, Hz and more
- Measures and stores power parameters: W, VA, VAR, Demand, Peak Demand and more
- · Measures and stores power quality parameters: Harmonics, THD (RMS and fundamental), K-Factor and more
- · Automatically captures worst-case Surge, Sag and THD waveforms

- High accuracy and resolution: 128 samples/cycle, 16 bit resolution
- LEDs indicate mode of operation
- Records up to 12 data channels
- Powered from voltage input channel
- Battery backup data integrity during power outages for up to one year (configuration in non-volatile memory)
- Optically isolated RS-232 output for direct connection to a PC
- IEC 1010, 150V Cat. III
- Includes DataView[®] software for data storage, analysis and report generation

Applications

- Monitor power quality in North American commercial, industrial and residential application
- · Monitor power quality at computer workstations
- Monitor power quality on laboratory equipment

PARAMETER	UNIT	RMS	MIN	MAX	VALUE	WAVEFORM	SPECTRUM	TEXT	COMMENTS
Voltage	V	~	~	~		~	~	~	Waveforms & Spectrum in real time using DataView°
Current	A	~	~	~		~	~	~	Waveforms & Spectrum in real time using DataView°
Frequency	Hz	~	~	~				V	
Even Voltage Harmonics	V	~	~	~				~	
Odd Voltage Harmonics	V	~	~	~				~	
Even Current Harmonics	A	~	~	~				~	
Odd Current Harmonics	A	~	~	~				~	
Real Power	W	~	~	~				V	
Reactive Power	Var	~	~	~				~	
Apparent Power	VA	~	~	~				~	
Total Harmonic Distortion		~	V	~		~	~	~	IEEE (THDrms) or IEC (THDfund); Five worst waveforms for Voltage & Current
Power Factor		~	~	~				~	
Displacement Power Factor		~	~	~				~	
K-Factor		~	~	~				~	
Demand	VA, W				~			~	10/15/30 minutes or user-definable in one min. increments
Peak Demand	VA, W				~			~	Peak within the Demand Interval
Sag	V				~	~	~	~	
Surge	V				~	~	V	~	Five worst in Hi-Resolution — up to 256 single cycle RMS values & worst-case THD waveforms per event; Table of 100 worst-case events containing severity & time; Even counter for all triggered values




Specifications

MODEL	PQL 100 (1MB)	PQL 120 (1MB)						
ELECTRICAL								
Measurements	True RMS measurement. 128 samples are simulta	neously taken for voltage and current channel.						
VOLTAGE								
Range	0 to 140V							
Resolution	0.1V							
Accuracy	±(0.3% of Reading + 0.3V)							
CURRENT	_(0000000000000000000000000000000000000							
Range	0 to 15A (70A peak maximum)							
Resolution	0.01A							
Accuracy	±(0.5% of Reading + 0.03A) @ 0.75A to 15A ±0.30A @ < 0.75A							
FREQUENCY (Hz)	_(0.0 % 0.1 1.0 dd.ll.g 1 0.0 0.1 % 0 0							
Range	45 to 6	5Hz						
Resolution	0.01Hz							
Accuracy	0.01Hz							
HARMONICS	0.11	16						
Range	Up to 50th for both	Voltage & Current						
Resolution	•							
POWER – WATT/VA/VAR	o. TV for Voltage a	o.m.ior current						
Range	0 to 2 100 Wat	t VA or Var						
Resolution	0 to 2,100 Watt, VA or Var 0.1W. 0.1VA. 0.1Var							
Accuracy	±(2.0% of Reading + 4x), where x is Watt or VA or Var							
POWER & POWER FACTOR	1(2.0 % of Hodding 1 1X), W	or a real or a r						
Resolution	0.0	1						
Accuracy	±0.03% @ PF/DPF = 1							
PROGRAMMABLE PARAMETERS	±0.00 / 0 ⊕ 1	17511 – 1						
111001111111111111111111111111111111111	V A Hz Odd & Even Harr	nonics (V & A) W VA						
	V, A, Hz, Odd & Even Harmonics (V & A), W, VA, Var, THD (V & A), PF, DF, K-Factor							
Demand	VA, W (10/15/30 minutes or user-definable)							
Peak Demand	Over demand period							
Voltage Sag	User-definable magnitude							
Voltage Surge	User-definable magnitude							
INPUT								
Input Channels	One Voltage/One Current							
Sample Rate	128 per cycle per channel							
RECORDING								
Storage Rate	125ms to	ms to 7 days						
Recording Session Length	15 minutes to 8 weeks	es to 8 weeks (user programmable)						
Total Memory	1MB	1MB						
Date and Time	MM/DD/YY hh/mm/ss.sss	MM/DD/YY hh/mm/ss.sss						
Surge and Sag and								
THD Waveform Storage	20 worst-case	20 worst-case						
ENVIRONMENTAL								
Operating Temperature	14° to 122°F (-							
Storage Temperature	-4 to 140°F (-20° to 60°C)							
Relative Humidity	0% to 85% @ 95°F (35°C), non-condensing							
MECHANICAL								
Material	UL94V-O ABS plastic							
Dimensions	5.91 x 3.15 x 2.36" (150 x 80 x 60mm)							
Weight	1 lb 7 oz (650g) including the batteries							
SAFETY								
Safety Rating	IEC 1010-1, 150V Cat. I	II, Pollution Degree 2						






Monitor power quality at computer workstations

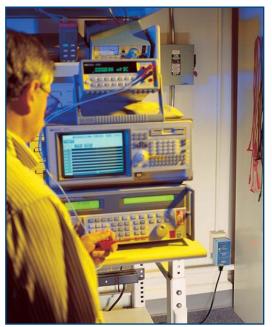

Monitor power quality on laboratory equipment

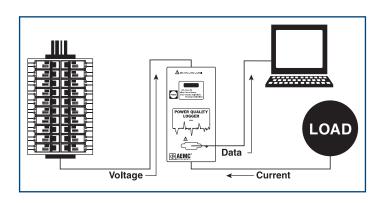



LED s indicate mode of operation



RS-232 interface for easy connection to a PC



Standard three-prong current input receptacle



Model PQL 100 has standard three-prong plug on back of unit (shown). Model PQL 120 also available with 6 ft power cable.

Construction



1. Control Button (Record Start/Stop)

Used to start or stop recording and erase recording memory

2. Three LED Indicators

• RED LED: Indicates the presence of AC line voltage. The logger turns ON when the input voltage > 75V

 YELLOW LED: Indicates the status of the memory.

LED OFF: No data in memory LED ON: Memory is partially filled LED Single Blink: Memory is full

GREEN LED: Indicates the status of the data logger (STANDBY or RECORDING)

LED Single Blink: PQ Logger is in Standby Mode (and

not recording) LED Double Blink: PQ Logger is in Record Mode NOTE: When the AC line power is turned off and the PQ Logger is not recording in a ride-through mode, the GREEN LED is OFF. If the GREEN LED remains continuously ON without blinking, or OFF even when the RED LED is ON, a fault condition has occurred

3. Reset Button

This button resets the CPU. The button is recessed and requires a small tool, such as a pen, to press it. Do not press the Reset Button under normal operation. If the Reset Button is pressed when the PQ Logger is recording, it will stop recording and data in the memory may be lost.

4. Female DB-9 Serial Connector




DataView[®] Software for Models PQL 100 & PQL 120

Features

- Display and analyze real-time data on your PC
- Configure all data logger functions and parameters from your PC including sample rate, recording length, channel configuration and more
- Customize views, templates and reports to your exact needs
- Create and store a complete library of configurations that can be uploaded to the logger as needed
- Zoom in and out and pan through sections of the graph to analyze the data
- Download, display and analyze recorded data
- Display real-time data on your PC and download previously recorded data
- Display waveforms, trend graphs, harmonic spectrums and text summaries
- Display surge and sag events in high-resolution waveforms and as tabular listings
- Print reports using standard or custom templates you design

Minimum System Requirements:


- Windows®98/2000/ME/XP
- 128MB of RAM (256MB recommended) Windows®98/2000/ME
 256MB of RAM for Windows®XP
- 35MB of Hard Disk Space (200MB recommended)
- · CD Rom drive

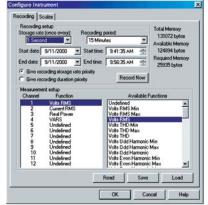


Configure your logger from your computer. Select record length, sample rate, channel information to be recorded and more.



DataView® is included with the Power Quality Logger.

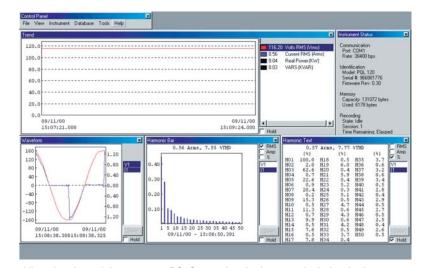

View data in real time on your PC. Customize the layout to include what's important to you.

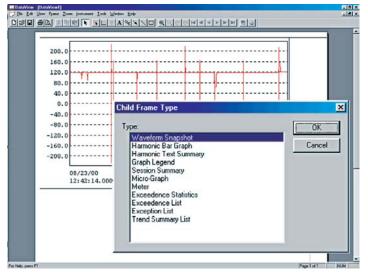


A comprehensive set of tools lets you customize templates and reports to your specific needs.



 Accessories











ORDERING INFORMATION	CATALOG NO.
Power Quality Logger Model PQL 100 (1MB)	Cat. #2125.03

All Power Quality Loggers are supplied with DataView® software (CD ROM), 6 ft DB-9 M/F serial PC cable, and a user manual.

Accessories (Optional)





Contact Us

United States & Canada:

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments 200 Foxborough Blvd. Foxborough, MA 02035 USA (508) 698-2115 • Fax (508) 698-2118 www.aemc.com

Customer Support – for placing an order, obtaining price & delivery:

customerservice@aemc.com

Sales Department – for general sales information:

sales@aemc.com

Repair and Calibration Service – for information on repair & calibration, obtaining a user manual:

repair@aemc.com

Technical and Product Application Support – for technical and application support:

techinfo@aemc.com

Webmaster – for information regarding www.aemc.com:

webmaster@aemc.com

South America, Central America, Mexico, Caribbean, Australia & New Zealand:

Chauvin Arnoux®, Inc. d.b.a. AEMC® Instruments 15 Faraday Drive Dover, NH 03820 USA (978) 526-7667 • Fax (978) 526-7605 export@aemc.com www.aemc.com

All other countries:

Chauvin Arnoux SCA 190, rue Championnet 75876 Paris Cedex 18. France 33 1 44 85 45 28 • Fax 33 1 46 27 73 89 info@chauvin-arnoux.com www.chauvin-arnoux.com

