






RPS800

Items Included

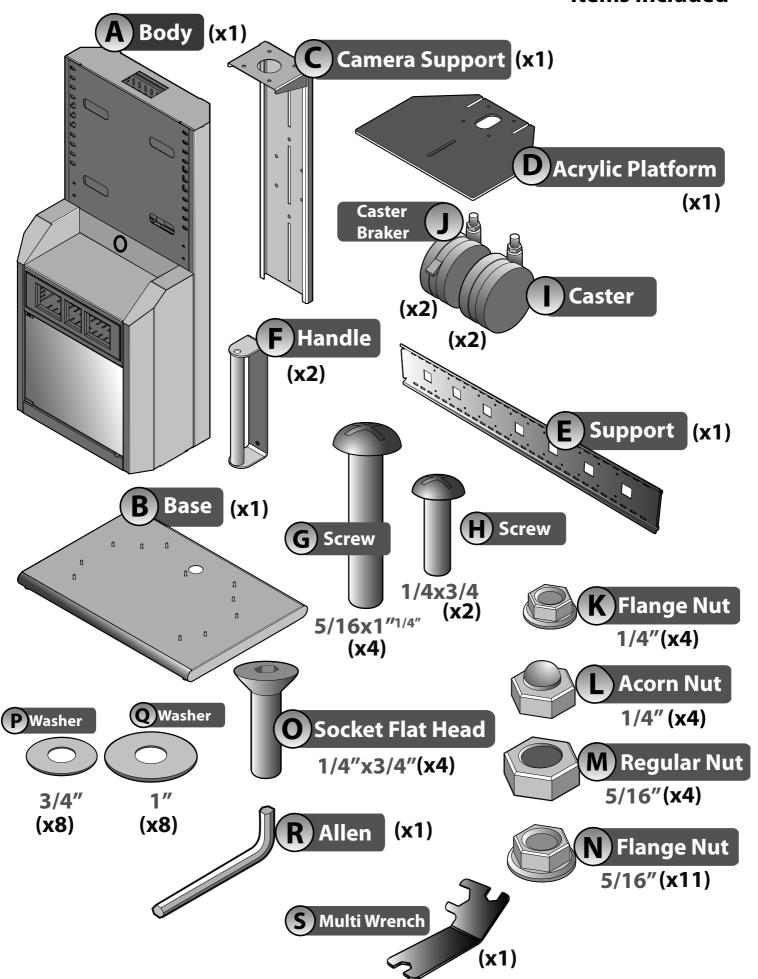

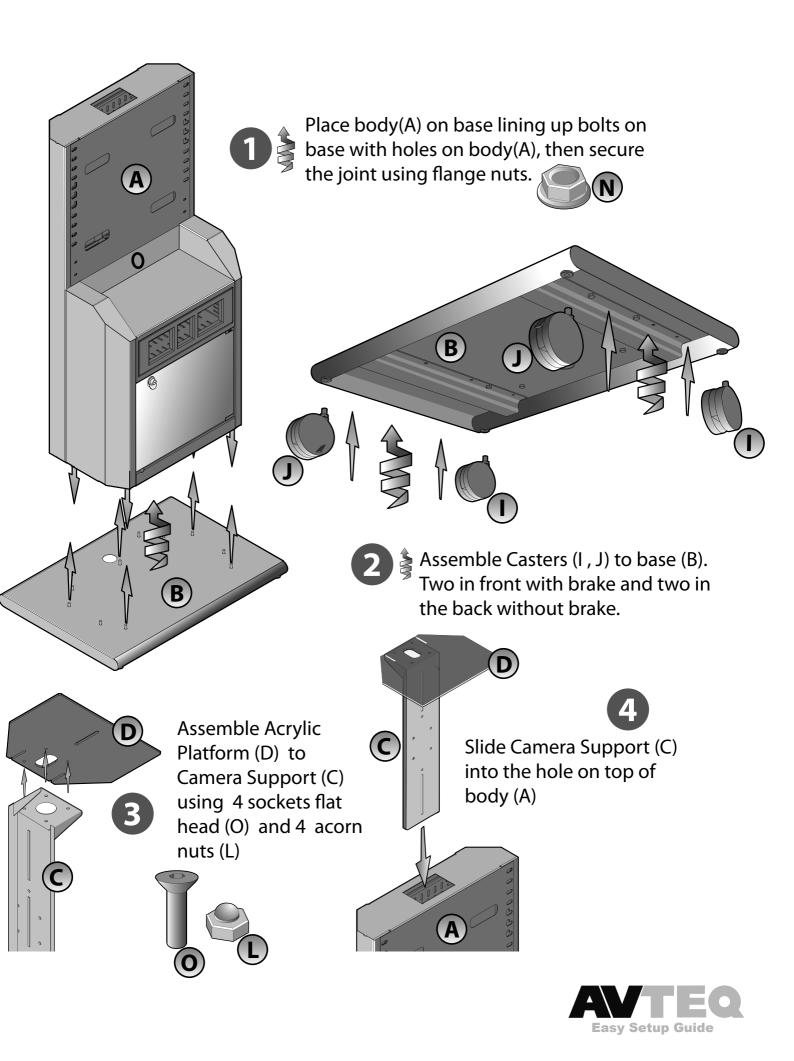

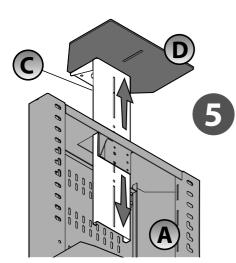


Adjust Camera Support (C) height according to the size of your TV and then secure the position using


two 1/4"x3/4" srews






 
Refer to wall mount intructions.

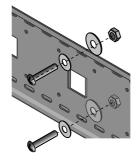




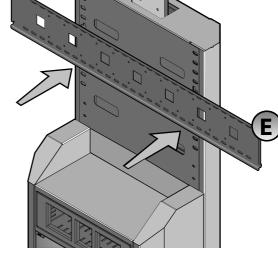


Hang the TV to the Support (E)

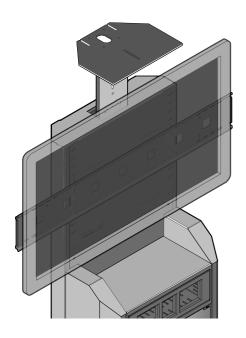


Assemble the handles (F) to the support (E) using the screws on the handle and 4 flang

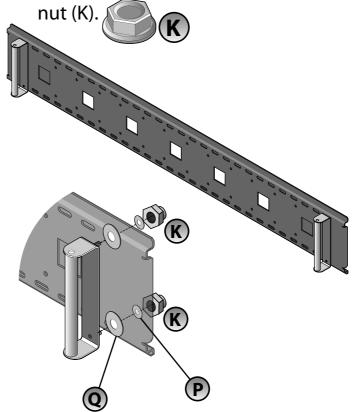


Lock Assembly

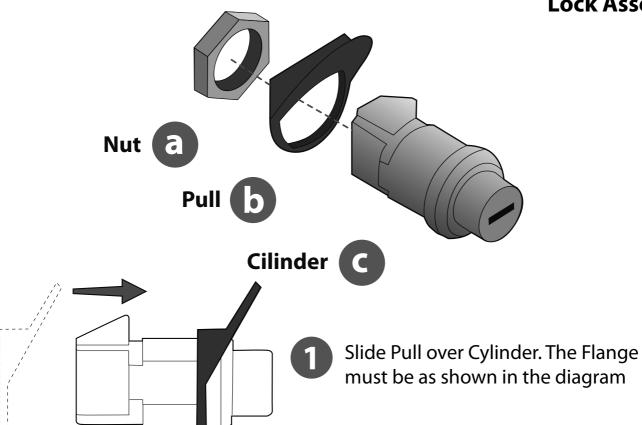

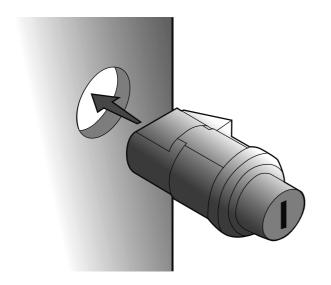

- Slide Cylinder through hole in glass as shown in diagram
- Twist Nut onto Cylinder as shown in diagram. Ensure that it's placed in the correct position as shown in diagram.

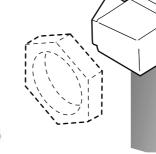



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com