



DM-II Plus
Power Quality Recorder

Users Manual



DM-II Plus

Power Quality Recorder

Limited Warranty and Limitation of Liability

Your Amprobe product will be free from defects in material and workmanship for 1 year from the date of purchase. This warranty does not cover fuses, disposable batteries or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Amprobe's behalf. To obtain service during the warranty period, return the product with proof of purchase to an authorized Amprobe Test Tools Service Center or to an Amprobe dealer or distributor. See Repair Section for details. THIS WARRANTY IS YOUR ONLY REMEDY. ALL OTHER WARRANTIES - WHETHER EXPRESS, IMPLIED OR STATUTORY - INCLUDING IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, ARE HEREBY DISCLAIMED. MANUFACTURER SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Repair

All test tools returned for warranty or non-warranty repair or for calibration should be accompanied by the following: your name, company's name, address, telephone number, and proof of purchase. Additionally, please include a brief description of the problem or the service requested and include the test leads with the meter. Non-warranty repair or replacement charges should be remitted in the form of a check, a money order, credit card with expiration date, or a purchase order made payable to Amprobe® Test Tools.

In-Warranty Repairs and Replacement – All Countries

Please read the warranty statement and check your battery before requesting repair. During the warranty period any defective test tool can be returned to your Amprobe® Test Tools distributor for an exchange for the same or like product. Please check the "Where to Buy" section on www.amprobe.com for a list of distributors near you. Additionally, in the United States and Canada In-Warranty repair and replacement units can also be sent to a Amprobe® Test Tools Service Center.

Non-Warranty Repairs and Replacement – US and Canada

Non-warranty repairs in the United States and Canada should be sent to a Amprobe® Test Tools Service Center. Call Amprobe® Test Tools or inquire at your point of purchase for current repair and replacement rates.

In USA In Canada

Amprobe Test Tools
Everett, WA 98203
Tel: 877-AMPROBE (267-7623)
Fax: 425-446-6390

Amprobe Test Tools
Mississauga, ON L4Z 1X9
Tel: 905-890-7600
Fax: 905-890-6866

Non-Warranty Repairs and Replacement – Europe

European non-warranty units can be replaced by your Amprobe® Test Tools distributor for a nominal charge. Please check the "Where to Buy" section on www.amprobe.com for a list of distributors near you.

European Correspondence Address*
Amprobe® Test Tools Europe
In den Engematten 14
79286 Glottertal, Germany
Tel.: +49 (0) 7684 8009 - 0

* (Correspondence only – no repair or replacement available from this address. European customers please contact your distributor.)

Contents:

1. PRECAUTIONS AND SAFETY MEASURES	3
1.1. GENERAL	3
1.2. PRELIMINARY INSTRUCTIONS	3
1.3. DURING USE	3
1.4. AFTER USE	3
2. GENERAL DESCRIPTION	4
2.1. INTRODUCTION	4
2.2. FUNCTIONS	4
2.3. INITIAL SCREEN	4
3. PREPARING THE INSTRUMENT	5
3.1. INITIAL CHECK	5
3.2. INSTRUMENT POWER SUPPLY	5
3.3. CALIBRATION	5
3.4. STORAGE	5
4. HOW TO OPERATE	6
4.1. INSTRUMENT: DESCRIPTION	6
4.2. KEYBOARD: DESCRIPTION	6
4.3. Display: Description	7
4.4. BACKLIGHT Function	7
5. MENU GENERAL	8
5.1. INITIAL SETTINGS	8
5.1.1. How to adjust the contrast	8
5.1.2. How to set date and time	8
5.1.3. How to set the language	8
5.2. Basic Setting: ANALYZER CONFIG	9
5.2.1. How to set the type of electrical system under test	9
5.2.2. How to set the fundamental frequency	9
5.2.3. How to set the current range	9
5.2.4. How to set the Clamp Type	9
5.2.5. How to set the value of the transformer voltage ratio (TV RATIO)	10
5.2.6. How to enable/disable the password	10
5.2.7. How to set the voltage reference	10
5.3. Basic Setting: RECORDER CONFIG	11
5.4. ANALYZER MEMORY	18
5.5. RESET	19
6. VOLTAGE, CURRENT, POWER, ENERGY	20
6.1. "VOLTAGE" Push Button	20
6.1.1. Symbols	20
6.1.2. "METER" mode	21
6.1.3. "HARM" mode	22
6.1.4. "WAVE" mode	23
6.2. "CURRENT" push button	24
6.2.1. Symbols	24
6.2.2. "METER" mode	25
6.2.3. "HARM" mode	26
6.2.4. "WAVE" mode	27
6.3. Position "POWER"	28
6.3.1. Symbols	28
6.3.2. "METER" mode	29

6.3.2.1. PEAK ENERGY DEMAND	30
6.3.3. "WAVE" mode	31
6.4. Position "ENERGY"	32
6.4.1. Symbols.....	32
6.4.2. "METER" mode.....	33
7. STARTING A RECORDING	34
8. DURING A RECORDING.....	36
9. STOPPING A RECORDING OR AN ENERGY MEASUREMENT.....	37
10. CONNECTING THE INSTRUMENT TO A PC.....	37
11. MEASURING PROCEDURES.....	38
11.1. Using the Instrument in a Single Phase System.....	38
11.2. Using the Instrument in a Three Phase 4 Wire System	39
11.3. Using the Instrument in a Three Phase 3 Wire System	40
12. MAINTENANCE	41
12.1. GENERAL	41
12.2. BATTERY REPLACEMENT	41
12.3. CLEANING	41
13. TECHNICAL SPECIFICATIONS	42
13.1. FEATURES	42
13.1.1. Voltage measurement (Autoranging).....	42
13.1.2. Voltage Anomalies Detection (Manual Selection of Range).....	42
13.1.3. Current measurement (DM-II Plus only).....	42
13.1.4. Current measurement (Using DM-CT-HTA)	42
13.1.5. Current measurement (Using ACF-3000 SR)	42
13.1.6. Power measurement ($\cos\phi$: 0.5c[positive] – 0.5i[negative])	43
13.1.7. $\cos\phi$ measurement.....	43
13.1.8. Measurement of Harmonics.....	43
13.1.9. Frequency Measurement.....	44
13.1.10. Temperature drift.....	44
13.1.11. Safety.....	44
13.1.12. General Characteristics.....	44
13.2. ENVIRONMENT.....	44
13.2.1. Operating conditions	44
13.2.2. EMC/EMI/ESD.....	45
13.3. Accessories.....	45
13.3.1. Standard accessories.....	45
14. APPENDIX 1 – MESSAGES DISPLAYED	46
15. APPENDIX 2 – RECORDABLE PARAMETERS: SYMBOLS.....	47
16. APPENDIX 3 – THEORETICAL OUTLINES	48
16.1. Voltage Anomalies (Voltage Sag and Surge)	48
16.2. Voltage and current Harmonics.....	48
16.2.1. Theory.....	48
16.2.2. Limit values for harmonics.....	50
16.2.3. Presence of harmonics: causes.....	50
16.2.4. Presence of harmonics: consequences	51
16.3. POWER AND POWER FACTOR: DEFINITIONS.....	51
16.3.1. Conventions on powers and power factors.....	53
16.3.2. 3 Phase 3 Wire System.....	54
16.4. MEASURING METHOD: outlines.....	55
16.4.1. Integration periods.....	55
16.4.2. Power factor calculations.....	55

1. PRECAUTIONS AND SAFETY MEASURES

1.1. GENERAL



This instrument has been designed in compliance with EN 61010-11:2002 directive.

For your own safety and to avoid damaging the instrument we suggest you follow the procedures hereby prescribed and to read carefully all the notes preceded by the symbol .

Before and during measurements please be very diligent in following instructions below:

- Do not measure voltage or current in wet or dusty places;
- Do not measure in presence of gas, explosive materials or combustibles;
- Do not touch the circuit under test if no measurement is being taken;
- Do not touch exposed metal parts, unused terminals, circuits and so on;
- Do not use the instrument if it seems to be malfunctioning (i.e. if you notice deformations, breaks, leakage of substances, absence of messages on the display and so on);
- Use only cables and accessories approved by Amprobe.

The following symbols are used in this manual:

	Caution: keep to what prescribed by the manual. An incorrect use could damage the instrument or its components
	High voltage: risk of electric shock

1.2. PRELIMINARY INSTRUCTIONS

- This instrument has been designed for use in places with pollution class 2.
- It can be used for voltage and current measurements in installations of excess voltage category III 635 V~ phase to phase / 370 V~ phase to earth up to (and no more than) 2000 meters altitude.
- Please keep to the usual safety standards aimed at:
 - Protecting against dangerous currents;
 - Protecting the instrument against incorrect operations.
- Only the accessories supplied with the instrument guarantee compliance with the safety standards. Accordingly, they must be in good conditions and, if necessary, they must be replaced with identical models.
- Do not take measurements on circuits exceeding the specified current and voltage limits.
- Before connecting cables, alligator clips and clamps to the circuit under test, make sure that the right function has been selected.

1.3. DURING USE

Please read carefully:



Should you fail to keep to the prescribed instructions you could damage the instrument and/or its components or endanger your safety.

- When the instrument is connected to the circuit under test, do not touch any unused terminal.
- When measuring current, other currents located near the leads may affect the measuring accuracy.
- When measuring current, always position the wire in the very middle of the jaws in order to obtain the highest accuracy.
- A measured value remains constant if the "HOLD" function is active. Should you notice that the measured value remains unchanged, disable the "HOLD" function.

1.4. AFTER USE

- After use, turn off the instrument by pressing ON/OFF for a few seconds.
- If you won't be using the instrument for long periods of time use the storage instructions described on paragraph 3.4.

2. GENERAL DESCRIPTION

2.1. INTRODUCTION

The DM-II Plus represents a new approach to the world of electrical measurement. Computer assisted instruments such as the DM-II Plus permit an easy and fast analysis of a huge quantity of data.

2.2. FUNCTIONS

The DM-II Plus is able to:


- display in real time the electrical parameters of a single phase and three-phase systems (with or without neutral wire) and the harmonic analysis of voltages and currents.
- conduct a direct Energy measurement (without memorizing).
- memorize (pressing SAVE key) the sampled values of the Parameters present at the instrument's input generates a "Smp" record inside the instrument's memory. It will be possible to analyze the memorized data ONLY by transferring it to a PC.
- record simultaneously (pressing the START key after a proper setting): RMS values of voltages, currents, corresponding harmonics, active, reactive and apparent powers, power factors and cos ϕ , active, reactive and apparent energies, voltage sag and surge with 8.3ms resolution. It will be possible to analyze the recorded data ONLY by transferring them to a PC.



Please note the difference between memorize and record. These terms will be used repeatedly in this manual. Please focus on their definitions and distinctions.

2.3. INITIAL SCREEN

When turning on the instrument by pressing ON/OFF, this screen will appear for a few seconds:

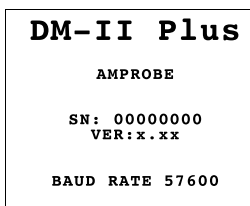

Here you can see:

- Serial number of the instrument (SN:.)
- Firmware software release (VER:.)
- Transmission speed through serial I/O (Baud Rate)

3. PREPARING THE INSTRUMENT

3.1. INITIAL CHECK

This instrument has been checked before shipment from an electrical and mechanical point of view. All possible precautions have been taken in order to deliver it in perfect condition. Notwithstanding, on receipt of the instrument we suggest that you check it summarily to make sure that no damage has occurred in transit. Should you find irregularities please contact the carrier immediately. Furthermore, please make sure that the parcel contains all the accessories and parts listed in paragraph 13.3. In case of discrepancies please contact your dealer. Should it be necessary to return the instrument to the supplier please keep to the instructions given at paragraph 17.

3.2. INSTRUMENT POWER SUPPLY

The instrument can be powered by:

- 6 batteries 1.5V D-Size located in the compartment on the top of the instrument
- An external power supply code (DMT-EXTPS) supplied with the instrument (standard accessory).



For recordings ALWAYS use the external power supply (even though the instrument allows the operator to perform a recording using internal batteries)

The instrument uses sophisticated algorithms to prolong the battery life. Particularly:

- The instrument switches OFF the backlight automatically after 5 seconds.
- If the instrument is displaying in real time (and the external power supply is not connected), after about 5 minutes from the last key pressure or switch rotation the instrument turns off automatically ("AUTOPOWER OFF" procedure).
- If the instrument is recording or is measuring energy (and the external power supply is not connected), after about 5 minutes from the last key pressure the instrument starts a special procedure to save the batteries ("ECONOMY MODE"): the instrument keeps recording but the display is turned off.

3.3. CALIBRATION


The instrument complies with the standards mentioned in this manual. Its performance is guaranteed for one year from the purchase date.

3.4. STORAGE

To guarantee accurate measurements, after a long storage period in severe environmental conditions wait until the instrument resumes its normal conditions (see environmental conditions listed in paragraph 13.2).

4. HOW TO OPERATE

4.1. INSTRUMENT: DESCRIPTION

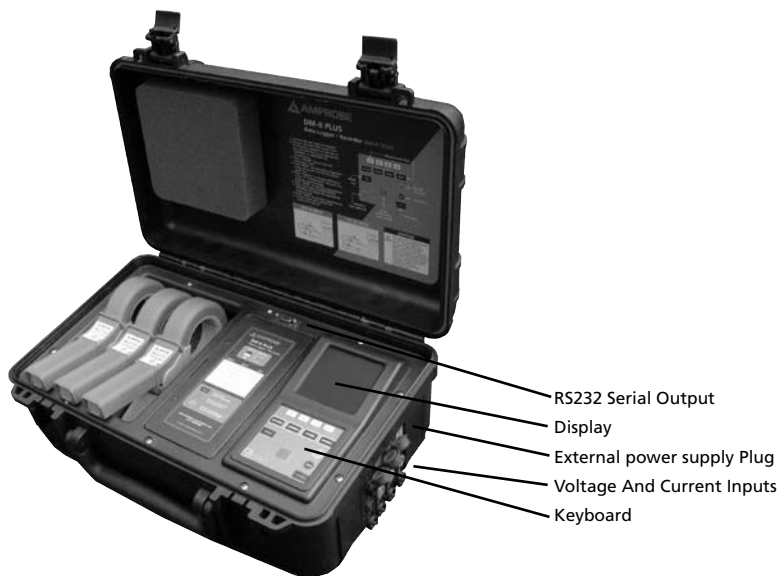

4.2. KEYBOARD: DESCRIPTION

The following keys are available.

- **ON/OFF:** Turning on – turning off / Backlight ON (automatic OFF after 5 sec.)
- **F1, F2, F3, F4:** Multifunction keys. The various functions are deductible from the symbols shown on the bottom of the display.
- **VOLTAGE, CURRENT, POWER, ENERGY** By pressing any of these 4 keys, it is possible to display their corresponding functions.
- **MENU:** By pressing **MENU** it's possible to check and modify the recording parameters.
- **CANCEL:** To leave a menu or a sub-menu. To return to a previous screen.
- **ENTER/HOLD:** Double function key:
 - ENTER:** To confirm the settings made
 - HOLD:** To block the value updating in real time in all the screens. This function is disabled when recording or measuring energy. When this function is enabled it's not possible to record or take an energy measurement.
- **SAVE:** To save in the instrument memory a Record of "Smp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **START/STOP:** to start/stop manually a recording (see chapter 7).


4.3. DISPLAY: DESCRIPTION


The display is a graphic module with a resolution of 128 x 128 pixels (16384 pixels overall).

Each pixel has a dimension of 0.5mm x 0.5mm, the visible area is a square of 73mm x 73mm.

The first line of the display shows date and time. If not correct, you can set the exact ones according to the procedure described on paragraph 5.1.2.

On the top right corner of the display you can always see the battery indicator and, if the external power supply is connected, the corresponding symbol.

27.09.00		17:35:12	
VOLTAGE			
V1	=	230.2 V	
V2	=	230.5 V	
V3	=	230.6 V	
V12	=	384.2 V	
V23	=	385.4 V	
V31	=	383.7 V	
freq	=	60.0 Hz	
Phseq	=	123	
HARM	WAVE		

 27.09.00		17:35:12	
VOLTAGE			
V1	=	230.2 V	
V2	=	230.5 V	
V3	=	230.6 V	
V12	=	384.2 V	
V23	=	385.4 V	
V31	=	383.7 V	
freq	=	60.0 Hz	
Phseq	=	123	
HARM	WAVE		

These symbols will be omitted in the following illustrations.

4.4. BACKLIGHT FUNCTION

When instrument is turned on, pressing briefly the ON button, the backlight will be enabled. The light will be automatically turned off after 5 seconds.

If the batteries are too low the instrument will disable automatically the backlight function.

5. MENU GENERAL

By pressing the **MENU** key the following screen will be displayed:

MENU GENERAL			
ANALYZER MEMORY RESET			
ANALYZER CONFIG RECORDER CONFIG			
CONTRAST DATE&TIME LANGUAGE			
↓	↑		

It's not possible to enter the **MENU** during a recording or a Real Time Energy measurement.

5.1. INITIAL SETTINGS

5.1.1. HOW TO ADJUST THE CONTRAST

By pressing the multifunction keys **F1** and **F2**, position the cursor on the **CONTRAST** item and confirm it by pressing the **ENTER** key.

By pressing the multifunction keys **F3** and **F4**, adjust the contrast (higher values correspond to a higher contrast while lower values correspond to a lower contrast) and press the **ENTER** key to **SAVE** the change or press **CANCEL** to quit the modification.

This setting will remain unchanged after turning off the instrument.

5.1.2. HOW TO SET DATE AND TIME

By pressing the multifunction keys **F1** and **F2**, position the cursor on the **DATE&TIME** item and confirm it by pressing the **ENTER** key.

By pressing the multifunction keys **F1** and **F2** position the cursor on the Date format (**FORMAT**) and pressing the **F3** or **F4** keys select one of the following Date format:

DD.MM.YY (2 digit for day, 2 digit for Month, 2 digit for Year)

or

MM.DD.YY (2 digit for Month, 2 digit for Day, 2 digit for Year)

Then using **F1** and **F2** multifunction keys position the cursor on the value to be modified and change the value using **F3** and **F4** keys.

The time is expressed as **hh:mm** (2 digit for hours, 2 digit for minutes) military time.

Press the **ENTER** key to **SAVE** the change or press **CANCEL** to quit the modification.

This setting will remain unchanged also after turning off the instrument.

5.1.3. HOW TO SET THE LANGUAGE

By pressing the multifunction keys **F1** and **F2**, position the cursor on the **LANGUAGE (EN)** or **LINGUA (IT)** item and confirm it by pressing the **ENTER** key.

By pressing the multifunction keys **F1** and **F2**, position the cursor on the desired language and press the **ENTER** key to **SAVE** the change or press **CANCEL** to quit the modification.

This setting will remain unchanged after turning off the instrument.

5.2. BASIC SETTING: ANALYZER CONFIG

Selecting the **ANALYZER CONFIG** item and pressing the **ENTER** Key, the following page will be displayed:

ANALYZER CONFIG			
SYSTEM : 3PH4W			
FREQUENCY : 60HZ			
CURRENT RANGE : 1000A			
CLAMP TYPE : STD			
TV RATIO : 0001			
PASSWORD : ON			
↓	↑	+	-

This page of settings can be confirmed by pressing the **ENTER** key or cancelled by pressing the **CANCEL** key.

5.2.1. HOW TO SET THE TYPE OF ELECTRICAL SYSTEM UNDER TEST

This parameter permits you to select the type of electrical system under test among the following configurations:

- **SINGLE: single phase system**
- **3PH3W: 3 wires system (three-phase system without neutral)** (see paragraph 16.3.2)
- **3PH4W: 4 wires system (three-phase system with neutral)**

The connections to the instrument inputs will have to be in keeping with the type of system selected.

Position the cursor on the corresponding word by pressing the multifunction keys **F1** and **F2** and set the desired value by pressing the multifunction keys **F3** and **F4**.

5.2.2. HOW TO SET THE FUNDAMENTAL FREQUENCY

Position the cursor on the corresponding word by pressing the multifunction keys **F1** and **F2** and select the network frequency between the possible values 50Hz and 60Hz by pressing the multifunction keys **F3** and **F4**. This parameter is important **ONLY** if the input voltage is not sufficient to recognize the value of the frequency (for example, only the clamps for the current measurement are connected). In this case the instrument generates an internal synchronism equal to the value of the set frequency.

5.2.3. HOW TO SET THE CURRENT RANGE

The value of this parameter **must be always equal to the full scale of the current clamps** used to take the measurement. In case multi-scale clamps are used, the value of this parameter must be equal to the scale selected on the clamps. Set the desired value by pressing the multifunction keys **F3** and **F4**.

5.2.4. HOW TO SET THE CLAMP TYPE

The value of this parameter **must always be equal to the clamp type you are using**. Three types of clamps are available:

- **STD:** Standard clamps or Current Transformers (DM-CT-HTA 1000A)
- **FlexEXT:** Flexible clamps with External power supply.(ACF-3000 SR)
- **FlexINT:** Flexible clamps AM-Flex33 (coils directly connected to the instrument inputs).

These clamps allow 1000A and 3000A range.

Set the desired value by pressing the multifunction keys **F3** and **F4**.

5.2.5. HOW TO SET THE VALUE OF THE TRANSFORMER VOLTAGE RATIO (TV RATIO)

The instrument can also be interfaced with step-down transformers in the equipment under test: it can display the value of the voltages present on the primary winding of these transformers. To do this it will be necessary to set the value of the transformers' windings ratio from 2:1 to 3000:1. The default is set at 1:1 for measurements of non-transformer systems.

Select "TV RATIO" in the ANALYZER CONFIG menu. Set the desired value by pressing the multifunction keys **F3** and **F4**.

5.2.6. HOW TO ENABLE/DISABLE THE PASSWORD

The instrument is provided with a protective routine to avoid the risk of being disturbed or interrupted during a recording or an energy measurement. Once a recording or a direct energy measurement has been started (with the option "PASSWORD" enabled), after about 3 minutes from the last key pressure or switch rotation it won't be possible to press START/STOP to stop the recording, "PASSWORD" will be displayed and it will be necessary to insert the password. In order to insert the password (which is not changeable), press the multifunction keys in the following sequence (within 10 seconds):

F1, F4, F3, F2

If you wait more than about 10 seconds the display will return to the meter mode and the instrument will continue recording. If you insert a wrong password the message "Password error" will be displayed under "PASSWORD". After a few seconds the display will return to meter mode and the instrument will continue recording. In order to enable/disable this option the correct password will have to be entered. The display will return to meter mode and START/STOP will have to be pressed again to stop the recording. You will then need to reenter the "ANALYZER CONFIG" menu and scroll up or down to the item "PASSWORD: ON" using the multifunction keys **F1** and **F2**. Then turn the password off by pressing the multifunction keys **F3** and **F4**.

5.2.7. HOW TO SET THE VOLTAGE REFERENCE

If Vref is not set properly, **Error Vref** will be flagged. Refer to page 16 to set Vref according to the system configuration.

If HARM REC and ANOM REC are OFF, It is not necessary to set Vref.


Press **MENU**, use **F1** and **F2** to select **HARM REC** and **ANOM REC**, then use +/- to turn them ON or OFF.

5.3. BASIC SETTING: RECORDER CONFIG

This option allows you to check and eventually modify the recording parameters and the selected parameters (up to a maximum of 64). If the number of selected values exceeds 64 the message “**too many param**” will be displayed. The MENU mode is divided into 4 separate subpages:

- 1st page: This page allows you to set the **START/ STOP** mode (AUTO or MANUAL), the START and STOP time if AUTO mode is selected, the Integration Period value, the Enabling/Disabling of voltage Sag and Surge detection, the Enabling/Disabling of Harmonics detection. Press **ENTER** to confirm the settings and pass to the following page.
Press **CANCEL** to leave the Menu without modifying the existing parameters.
- 2nd page: This page is devoted to the settings relevant to the **VOLTAGE** recording.
Press **ENTER** to confirm the settings and pass to the following page.
Press **CANCEL** to leave this page without modifying the existing parameters.
From this page you can enter the sub-page “Harmonics” which permits you to select the voltage harmonics to be recorded.
Press **ENTER** to confirm the settings and leave the “Menu Harmonics”.
Press **CANCEL** to leave the “Menu Harmonics” without modifying the existing parameters.
- 3rd page: This page is devoted to the settings relevant to the **CURRENT** recording.
Press **ENTER** to confirm the settings and pass to the following page.
Press **CANCEL** to leave this page without modifying the existing parameters.
From this page you can enter the sub-page “Harmonics” which permits you to select the current harmonics to be recorded.
Press **ENTER** to confirm the settings and leave the “Menu Harmonics”.
Press **CANCEL** to leave the “Menu Harmonics” without modifying the existing parameters.
- 4th page: Menu composed of two sub-pages devoted to the selection of the **POWERS** and **ENERGIES** to be recorded. From this page you can enter the sub-page “POWER” and “ENERGY” which permits you to select the parameters to be recorded.
Selecting the active powers for the recording, the corresponding active energies will be automatically selected.
Selecting the reactive powers for the recording, the corresponding reactive energies will be selected.
Press **ENTER** to leave this page confirming the modifications made.
Press **CANCEL** to leave the “Menu” without modifying the existing parameters.

The various pages of the "RECORDER CONFIG" can be schematized as follows:

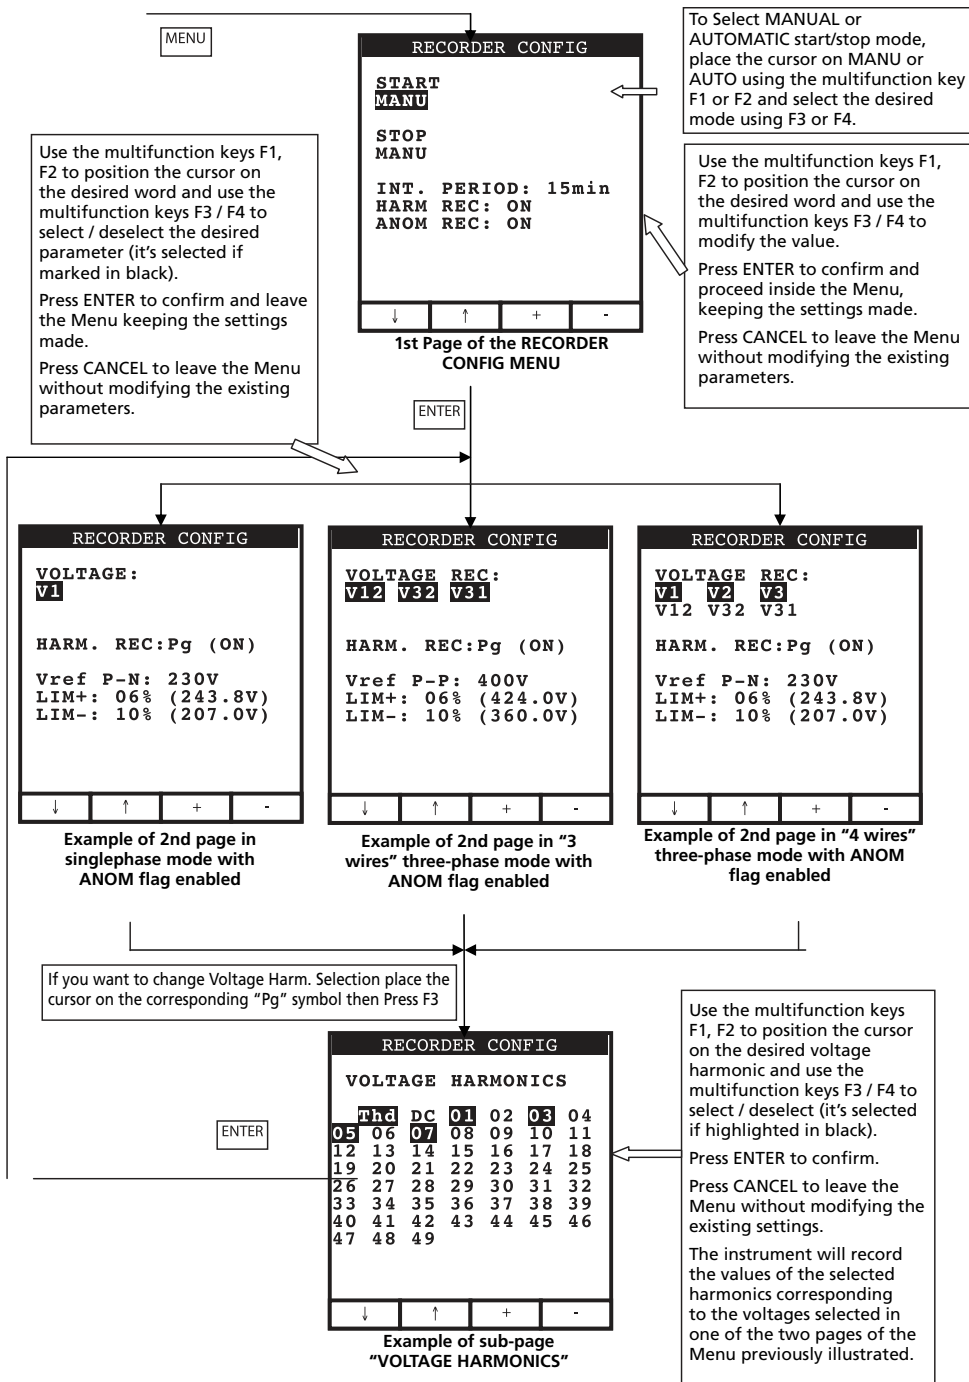

From 2nd page
of RECORDER CONFIG MENU

ENTER

Use the multifunction keys F1, F2 to position the cursor on the desired word and use the multifunction keys F3 / F4 to modify the value or select / deselect the desired parameter (it's selected if marked in black).
Press ENTER to confirm.
Press CANCEL to leave the Menu without modifying the existing settings.

RECORDER CONFIG

CURRENT REC:
i1

HARM. REC: Pg (ON)

↓ ↑ + -

Example of 3rd page in singlephase mode

RECORDER CONFIG

CURRENT REC:
i1 i2 i3

HARM. REC: Pg (ON)

↓ ↑ + -

Example of 3rd page in "3 wires" three-phase mode

RECORDER CONFIG

CURRENT REC:
i1 i2 i3 IN

HARM. REC: Pg (ON)

↓ ↑ + -

Example of 3rd page in "4 wires" three-phase mode

If you want to change Current Harm. Selection place
Cursor on the corresponding "Pg" symbol then Press F3

ENTER

RECORDER CONFIG

CURRENT HARMONICS

thd	DC	01	02	03	04
05	06	07	08	09	10
11	12	13	14	15	16
17	18	19	20	21	22
23	24	25	26	27	28
29	30	31	32	33	34
35	36	37	38	39	40
41	42	43	44	45	46
47	48	49			

↓ ↑ + -

Example of sub-page "CURRENT HARMONICS"

Use the multifunction keys F1, F2 to position the cursor on the desired current harmonic and use the multifunction keys F3 / F4 to select / deselect (it's selected if marked in black).
Press ENTER to confirm.
Press CANCEL to leave the Menu without modifying the existing settings.
The instrument will record the values of the selected harmonics corresponding to the currents selected in one of the two pages of the Menu previously illustrated.

From 3rd page
of RECORDER CONFIG MENU

ENTER

```
RECORDER CONFIG
CO-GENERATION : ON
POWER : Pg
ENERGY : Pg
```

Example of 4th page

In order to select the POWER to be recorded use the multifunction keys F1, F2 to position the cursor on the corresponding "Pg" Symbol and then press F3

ENTER

```
RECORDER CONFIG
P1  Q1i  Q1c  S1
Pf1 dPf1
```

Example of POWER sub-page in single-phase mode

```
RECORDER CONFIG
Pt  P12  P32
Qt1 Q12i Q32i
Qt2 Q12c Q32c
St  S12  S32
Pft dPft
```

Example of POWER sub-page in "3 wires" three-phase mode

```
RECORDER CONFIG
Pt  P1  P2  P3
Qt1 Q1i Q2i Q3i
Qt2 Q1c Q2c Q3c
St  S1  S2  S3
Pfi Pf1 Pf2 Pf3
dPfi dPf1 dPf2 dPf3
```

Example of POWER sub-page in "4 wires" three-phase mode

Selecting the active powers for the recording, the corresponding active energies will be automatically selected.
Selecting the reactive powers for the recording, the corresponding reactive energies will be selected.

From 3rd page
of RECORDER CONFIG MENU

ENTER

```
RECORDER CONFIG
CO-GENERATION : ON
POWER : Pg
ENERGY : Pg
↓ ↑ + -
```

Example of 4th page

In order to select the ENERGIES to be recorded use the multifunction keys F1, F2 to position the cursor on the corresponding "Pg" Symbol and then press F3

ENTER

```
RECORDER CONFIG
Ea1  Er1l  Erc1  Es1
↓ ↑ + -
```

Example of ENERGY sub-page
in single-phase mode

```
RECORDER CONFIG
Ea1  Erit  Erc1  Est
↓ ↑ + -
```

Example of ENERGY sub-page
in "3 wires" three-phase mode

```
RECORDER CONFIG
Ea1  Ea2  Ea3
Erit  Eri1  Eri2  Eri3
Erc1  Erc2  Erc3
Est  Es1  Es2  Es3
↓ ↑ + -
```

Example of ENERGY sub-page
in "4 wires" three-phase mode

Selecting/deselecting the active energies for the recording, the corresponding active powers will be automatically selected/deselected.

Selecting/deselecting the reactive energies for the recording, the corresponding reactive powers will be selected/deselected.

Symbols	Description	Advised settings
START: MAN	The recording of all the selected parameters will start at 00 seconds after pressing START/STOP (see chapter 7).	
STOP: MAN	The recording of all the selected parameters will be interrupted manually by pressing START/STOP (see chapter 9).	
START: AUTO STOP: AUTO	The recording of all the selected values will be started / interrupted at the set dates and times. In order to start the recording the user will have to press START/STOP to set the instrument in Stand-by mode until the start date and time previously set (see chapter 7).	
INT. PERIOD	The value of this parameter determines how many seconds the values of all the selected parameters will be memorized (see chapter 16.4.1). Available choices: 5sec, 10sec, 30sec, 1min, 2min 5min, 10min, 15min, 60min.	15min
HARM REC.	<p>ON = the instrument will record the values of the selected voltage and current harmonics corresponding to the voltages and currents selected in the corresponding pages "Voltage" and "Current".</p> <p>Example: If the following Parameters are selected:</p> <p>a) Phase Voltage 1 and 2, Thd, Harmonics 1,3,5.</p> <p>b) Phase Current 2 and 3, Thd, Harmonics 3,5,7.</p> <p>The instrument will record:</p> <p>a) The Phase Voltage 1 and 2, Thd and Harmonics 1,3,5 of the Phase Voltage 1 and 2 while it will not record anything about Phase Voltage 3</p> <p>b) The Phase Current 2 and 3, Thd and Harmonics 3,5,7 of the Phase Current 2 and 3 while it will not record nothing about Phase Current 1</p> <p>OFF = the instrument will not record any voltage or current harmonic selected</p>	
ANOM REC.	<p>ON = the Instrument will record Voltage Sag and Surge (see page____)</p> <p>OFF = the instrument will not record any voltage Sag and Surge</p>	
V1, V2, V3 V12, V23 or V32, V31	RMS value of the voltage of phase 1, phase 2, phase 3 respectively, values of the phase-to-phase voltages 1-2, 2-3 or 3-2 and 3-1.	Single phase: V1 3 wires: V₁₂ V₃₂ V₃₁ 4 wires: V_{1r} V_{2r} V₃
Thd, DC, 01...49	Voltage Total Harmonic Distortion, DC Component, 01..49 Harmonics respectively	Thd,01,03,05,07
Vref (only if ANOM. REC flag has been set ON)	RMS reference value for Voltage used in Voltage Anomalies detection (Voltage Sag and Surge). The Reference is: a) Voltage Phase to Neutral for Single Phase and 4 wires three phase system b) Voltage Phase to Phase for 3 wires three phase system	Single phase: 230V 3 wires: 400V 4 wires: 230V
LIM+, LIM- (only if ANOM. REC flag has been set ON)	High and Low Voltage Percent threshold used in Voltage Anomalies detection (Voltage Sag and Surge). Example: Three Phase System 4 wires. Vref = 120, LIM+= 6%, LIM-=10% => High Lim = 127.2V, Low Lim = 108.0V The Instrument will detect a voltage Anomalies if the RMS Voltage Values (calculated every 8.3ms) beyond the above calculated thresholds (see paragraph 16.1).	Single phase: 120V 3 wires: 480V 4 wires: 277V
I1, I2, I3, IN	RMS value of the current of phase 1, phase 2, phase 3 and of the neutral respectively.	Single phase: I1 3 wires: I1, I2, I3 4 wires: I1, I2, I3, IN
Thd, DC, 01..49	Current Total Harmonic Distortion, DC Component, 01..49 Harmonics respectively	Thd,01,03,05,07

CO-GENERATION	ON = the instrument is able to face situations of CO-GENERATION of electrical equipment (that is, the equipment under test is able to generate energy besides absorbing it). Accordingly, the instrument will record the powers and energies both absorbed and generated (see paragraph 16.3.1). If this flag is enabled the maximum number of parameters which can be selected decrease to 38.	
	OFF = the instrument will record ONLY the powers and energies absorbed.	
Pt, P1, P2, P3, P12, P32	Values of the active power (total, of phase 1, phase 2 and phase 3) (only for 3 wires measurement) value of the power measured by the Wattmeter 1-2 and 3-2 respectively	Single phase: P1 3 wires: Pt 4 wires Pt, P1, P2, P3
Qti, Q1i, Q2i, Q3i, Q12i, Q32i	Values of the inductive reactive power (total, of phase 1, phase 2, phase 3) (only for 3 wires measurement) value of the reactive inductive power measured by the VAR meters 1-2 and 3-2 respectively	Single phase: Q1i Q1c 3 wires: Qti Qtc 4 wires Qti Q1i Q2i, Q3i Qtc Q1c Q2c, Q3c
Qtc, Q1c, Q2c, Q3c, Q12c, Q32c	Values of the capacitive reactive power (total, of phase 1, phase 2, phase 3) (only for 3 wires measurement) value of the reactive capacitive power measured by the VA meters 1-2 and 3-2 respectively	
St, S1, S2, S3, S12, S32	Values of the apparent power (total, of phase 1, phase 2, phase 3) (only for 3 wires measurement) value of the power measured by the VA meters 1-2 and 3-2 respectively	Single phase: S1 3 wires: St 4 wires St, S1, S2, S3
Pft, Pf1, Pf2, Pf3	Values of the power factors (total, of phase 1, phase 2 and phase 3 respectively)	Single phase: Pf1 dPf1 3 wires: Pft dPft 4 wires Pft Pf1 Pf2 Pf3 dPft dPf1 dPf2 dPf3
dpft, dpf1, dpf2, dpf3	Values of the cos ϕ (total, of phase 1, phase 2 and phase 3 respectively)	
Eat, Ea1, Ea2, Ea3	Values of the active energy (total, of phase 1, phase 2, phase 3)	Single phase: Ea1 3 wires: Eat 4 wires Eat Ea1 Ea2 Ea3
Erit, Eri1, Eri2, Eri3	Values of the inductive reactive energy (total, of phase 1, phase 2 and phase 3)	Single phase: Eri1 Erc1 3 wires: Erit Erc1 4 wires Erit Eri1 Eri2 Eri3 Erc1 Erc1 Erc2 Erc3
Erc1, Erc1, Erc2, Erc3	Values of the capacitive reactive energy (total, of phase 1, phase 2, phase 3)	
Est, Es1, Es2, Es3	Values of the Apparent Energy (total, of phase 1, phase 2, phase 3)	Single phase: Es1 3 wires: Est 4 wires Est Es1 Es2 Es3

The value of the network frequency is automatically selected if at least one phase voltage (for the single-phase mode or the 4 wires three phase mode) or at least one phase-to-phase voltage (for the 3 wires three phase mode) is selected.

The symbols "i" and "c" stand for reactive powers (Q), power factors (Pf) and cos ϕ (dpf) inductive and capacitive respectively.

Selecting a power factor (Pf) or a cos ϕ (dPf) for the recording automatically their inductive value and their capacitive value will be recorded separately.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

5.4. ANALYZER MEMORY

This option permits you to display:

- The present content of the instrument memory
- The size of the memorized data
- The residual space available for future recordings (expressed in days and hours)

All the stored data can be displayed only if downloaded to a PC with the operating software.

After selecting "ANALYZER MEMORY" from the Main Menu the screen below will be displayed

ANALYZER MEMORY			
01	Smp	02.01	01:23
02	Rec	02.01-02.01	
03	R&a	02.01-02.01	
04	Rec	02.01-02.01	
05	R&a	02.01-02.01	
06	Rec	04.01-05.01	
DATA SIZE: 0.11Mb			
REC TIME: 0d.06h			
↑	↓	LAST	ALL

- Rec: **recordings** effected with respective Start and Stop dates expressed in the format "day.month" (start) – "day.month" (stop) **without** Voltage Sag and Surge detection.
- R&a: **recordings** effected with respective Start and Stop dates expressed in the format "day.month" (start) – "day.month" (stop) **with** Voltage Sag and Surge detection.
- Smp: values of the **samples** of voltage and current stored by pressing SAVE.
- DATA SIZE: dimensions of the data saved in the instrument memory.
- REC TIME: amount of memory available, calculated on the basis of the parameters selected for recording, therefore the most complete one (expressed in the format "days.hours") to make recordings.

The maximum quantity of Rec + R&a + Smp which can be contained by the instrument is 35.

Following keys are enabled:

- F1, F2:** (only if the quantity of Rec+R&a+Smp is higher than 7) to run over all the recordings stored in the instrument memory.
- F3:** to cancel the last recording effected.
- F4:** to cancel all the recordings effected.

5.5. RESET

This option re-establishes the default settings of the instrument.

The default settings of the instrument consist of:

• ANALYZER CONFIG:

Frequency:	60Hz
Full scale of the clamps:	1000A
Transforming ratio of voltmetric transformers:	1
Type of electrical equipment:	4 wires
Password:	enabled

• RECORDER CONFIG:

Start:	Manual (the recording is started at 00 sec mark on clock after pressing the START/STOP key)
Stop:	Manual
Integration period:	15min
Recording of harmonics:	ON
Recording of Sag and Surge:	ON
Voltage Reference for Sag and Surge detection:	230V
Upper Limit for Sag and Surge detection:	6%
Lower Limit for Sag and Surge detection:	10%
Selected voltages:	V1, V2, V3
Selected voltage harmonics:	Thd, 01, 03, 05, 07
Selected currents:	I1, I2, I3, IN
Selected current harmonics:	Thd, 01, 03, 05, 07
CO-GENERATION:	OFF
Powers, Pf and cosj selected:	Pt, P1, P2, P3 Qti, Q1i, Q2i, Q3i Qtc, Q1c, Q2c, Q3c St, S1, S2, S3 Pft, Pf1, Pf2, Pf3 dpft, dpf1, dpf2, dpf3
Energies:	Eat, Ea1, Ea2, Ea3 Erit, Eri1, Eri2, Eri3 Erct, Erc1, Erc2, Erc3 Est, Es1, Es2, Es3

The RESET command will not erase the instrument's memory.

6. VOLTAGE, CURRENT, POWER, ENERGY

For a simple usage, the main functions of the instrument can be selected by just pressing one of the desired pushbuttons.

- Push **"VOLTAGE"**: to display voltage and corresponding harmonics (see paragraph 6.1)
- Push **"CURRENT"**: to display current and corresponding harmonics (see paragraph 6.2)
- Push **"POWER"**: to display all the parameters measurable by the instrument: voltage, current, active, reactive and apparent power, power factor, $\cos\varphi$ and energy (see paragraph 6.3)
- Push **"ENERGY"**: to display active, reactive and apparent power, power factor, $\cos\varphi$ and energy (see paragraph 6.4)

More practically, we may schematize the right procedure of use as follows:

1. Check and eventually modify the basic settings of the instrument
2. By rotating the switch, select the type of measurement to be taken
3. Connect the instrument to the electrical system to be tested
4. Evaluate the values of the parameters under test
5. If you want to record:
 - a) Decide what to record
 - b) Press **MENU** and check if the existing parameters meet your requirements
6. Connect the External Power Supply
7. Start the recording by pressing **START/STOP**.

6.1. "VOLTAGE" PUSH BUTTON

This function permits you to display in real time the RMS value of AC/DC voltage, the peak and Thd value of the 3 phase voltages (see paragraph 16.2), the waveform and the harmonic spectrum of the 3 phase voltages.

6.1.1. Symbols

The VOLTAGE position has three working modes:

- METER
- WAVE
- HARM

These modes will be described in detail in the next paragraphs.

The symbols used are described below:

Symbol	Description
V1, V2, V3	RMS value of the voltage of phase 1, phase 2, phase 3 respectively
V12, V23 or V32, V31	RMS Value of the phase to phase voltages
Vpk1, Vpk2, Vpk3, Vpk12, Vpk32	Peak value of the voltage of phase 1, phase 2, phase 3 and of the phase to phase voltage 12 and 32 respectively
h01 to h49	Harmonic 01 to Harmonic 49.
ThdV	Factor of total harmonic distortion of the voltage (see paragraph 16.2).
freq	Network frequency
Phseq	Phase sequence indicator "123" → correct "132" → inverted "023" → null voltage on the black wire "103" → null voltage on the red wire "120" → null voltage on the blue wire "100" → null voltages on the red and blue wires "020" → null voltages on the black and blue wires "003" → null voltages on the black and red wires

Tab. 1: Symbols used in the position **VOLTAGE**

6.1.2. "METER" mode

Upon pressing VOLTAGE function key, the instrument selects automatically the METER mode corresponding to one of the below screens according to the settings made as per paragraph 5.2.

27.09.00		17:35:12	
SINGLE PHASE VOLTAGE			
V1	=	230.2	V
Vpk1	=	325.5	V
ThdV	=	0.0	%
freq	=	60.0	Hz
HARM.	WAVE		

Example of screen in singlephase mode

27.09.00		17:35:12	
VOLTAGE			
V12	=	384.2	V
V32	=	385.4	V
V31	=	383.7	V
freq	=	60.0	Hz
HARM.	WAVE		

Example of screen in "3 wires" three-phase mode

27.09.00		17:35:12	
VOLTAGE			
V1	=	230.2	V
V2	=	230.5	V
V3	=	230.6	V
V12	=	384.2	V
V23	=	385.4	V
V31	=	383.7	V
freq	=	60.0	Hz
Phseq	=	123	
HARM.	WAVE		

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 1.


For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:


- **F1:** to pass to "HARMONIC" mode (see paragraph 6.1.3).
- **F2:** to pass to "WAVE" mode (see paragraph 6.1.4).
- **SAVE:** to save in the instrument memory a record of "5mp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the MENU mode and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record selected parameters according to the instrument's settings (see chapter 7).

6.1.3. "HARM" mode


Selecting the HARM mode one of the below screens will be displayed according to the settings made as per paragraph 5.22. The screens show the harmonics (see paragraph 16.2) of the phase or phase-to-phase voltage.

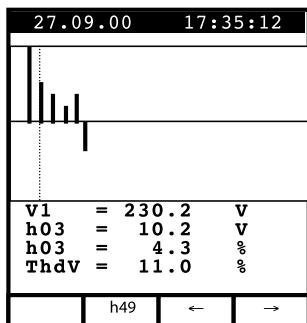

Example of screen in singlephase mode

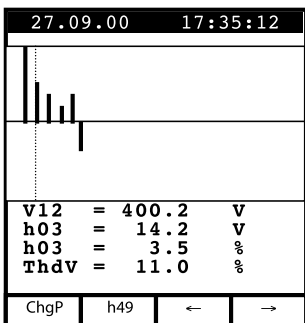

Example of screen in "3 wires" three-phase mode

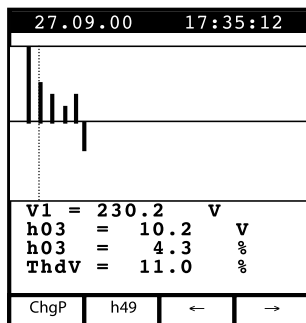

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 1.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.


The displayed histograms represent the harmonic content of the voltage under test. The value of the first harmonic h01 (fundamental at 60Hz) is not represented in scale along with the other harmonics in order to maximize the display of the latter. In case both voltage and current are connected to the instrument inputs, eventual negative values of the harmonics (therefore represented under the horizontal axis), indicate that such voltage harmonics are "generated" by the load.

Following keys are enabled:


- **F3, F4:** to move the cursor of the selected harmonic leftwards and rightwards respectively. At the same time the values relevant to the order no. of the selected harmonic and to the corresponding absolute and relative values (calculated on the basis of the fundamental) are updated.
- **F1** (only for three-phase mode): to display the values of the harmonics of the other voltages available. The voltage displayed is indicated above the F3 key.
- **F2:** to display the page of the harmonics h01 to h24 (symbol h24) or that of the harmonics h25 to h49 (symbol h49).
- **CANCEL:** to return back to **METER mode** (see paragraph 6.1.2).
- **SAVE:** to save in the instrument memory a record of "Smp" type (see paragraph 5.4) and the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain however available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the MENU mode and change the instrument settings (see paragraph 5.2 and 5.3. It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record selected parameters according to the instrument's settings (see chapter 7).

6.1.4. "WAVE" mode


Selecting the WAVE mode one of the below screens will be displayed according to the settings made as per paragraph 5.2. The screens show the waveform of the phase or phase-to-phase voltage.

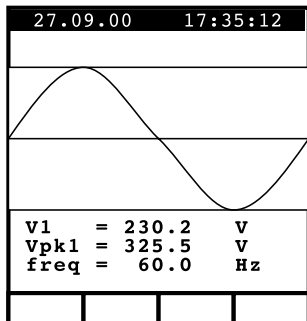

Example of screen in singlephase mode

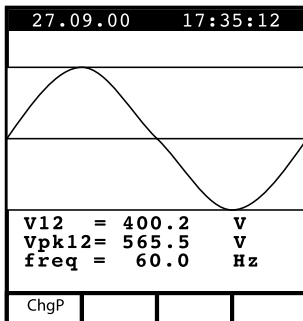

Example of screen in "3 wires" three-phase mode

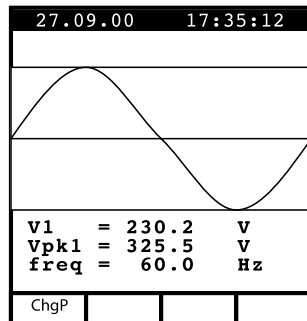

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 1.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:

- **F1:** (only for three-phase mode): to display the values corresponding to the following phase.
- **CANCEL:** to return back to **METER mode** (see paragraph 6.1.2).
- **SAVE:** to save in the instrument memory a record of "5mp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3. It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record **selected parameters** according to the instrument's settings (see chapter 7).

6.2 "CURRENT" PUSH BUTTON

This function permits you to display in real time the RMS value of AC/DC currents, the peak and Thdl value (see paragraph 16.2) of the 3 phase currents, the waveform and the harmonic spectrum of the 3 phase currents.

6.2.1. Symbols

The CURRENT position has three working modes:

- METER
- WAVE
- HARM

These modes will be described in detail in the next paragraphs.

The symbols used are described below:

Symbol	Description
I1, I2, I3	RMS value of the current of phase 1, phase 2, phase 3 respectively
IN	RMS value of the current on the neutral
Ipk1, Ipk2, Ipk3	Peak value of the current of phase 1, phase 2, phase 3 respectively
h01 to h49	Harmonic 01 to harmonic 49.
Thdl	Total harmonic distortion factor of the current (see paragraph 16.2).
freq	Network frequency

Tab. 2: Symbols used in the position **CURRENT**

6.2.2. "METER" mode

Upon pressing the CURRENT function key, the instrument selects automatically the **METER mode** corresponding to one of the screens below according to the settings made as per paragraph 5.2 .

27.09.00	17:35:12		
SINGLE PHASE CURRENT			
I1	= 30.21 A		
Ipk1	= 49.53 A		
ThdI	= 23.06 %		
freq	= 00.0 Hz		
HARM.	WAVE		

Example of screen in singlephase mode

27.09.00	17:35:12		
CURRENT			
I1	= 30.21 A		
I2	= 23.53 A		
I3	= 23.06 A		
freq	= 00.0 Hz		
HARM.	WAVE		

Example of screen in "3 wires" three-phase mode

27.09.00	17:35:12		
CURRENT			
I1	= 30.21 A		
I2	= 23.53 A		
I3	= 23.06 A		
IN	= 8.4 A		
freq	= 00.0 Hz		
HARM.	WAVE		

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 2.


For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:


- **F1:** to pass to "**HARMONIC**" mode (see paragraph 6.2.3).
- **F2:** to pass to "**WAVE**" mode (see paragraph 6.2.4).
- **SAVE:** to save in the instrument memory a record of "Smp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain however available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record **selected parameters** according to the instrument's settings (see chapter 7).

6.2.3. "HARM" mode

Selecting the HARM mode one of the screens below will be displayed according to the settings made as per paragraph 5.2. The screens show the harmonics (see paragraph 16.2) of the phase currents.

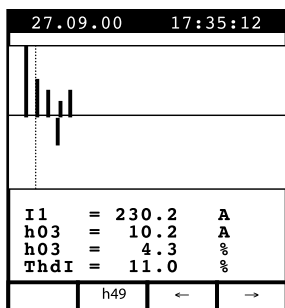

Example of screen in singlephase mode

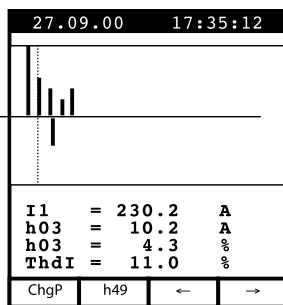

Example of screen in "3 wires" three-phase mode

The symbols used are described in Tab. 2.


For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

The displayed histograms represent the harmonic content of the current under test. The value of the first harmonic h01 (primary at 60Hz) is not represented in scale along with the other harmonics in order to maximize the display of the latter. In case both voltage and current are connected to the instrument inputs, eventual negative values (therefore represented under the horizontal axis) indicate that such current harmonics are "generated" by the load. Following keys are enabled:


- **F3, F4:** to move the cursor of the selected harmonic leftwards and rightwards respectively. At the same time the values relevant to the order no. of the selected harmonic and to the corresponding absolute and relative values (calculated on the basis of the fundamental) are updated.
- **F1** (only for three-phase mode): to display the values of the harmonics of the other voltages available. The voltage displayed is indicated above the F3 key.
- **F2:** to display the page of the harmonics h01 to h24 (**h24** symbol) or that of the harmonics h25 to h49 (**h49** symbol).
- **CANCEL:** to return back to **METER mode** (see paragraph 6.2.2)
- **SAVE:** to store in the instrument memory a record of "Smp" type (see paragraph 5.4) and the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record **selected parameters** according to the instrument's settings (see chapter 7).

6.2.4. "WAVE" mode

Selecting the WAVE mode one of the below screens will be displayed according to the settings made as per page ____ . The screens show the waveform of the phase currents.

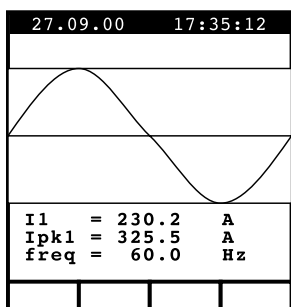

Example of screen in singlephase mode

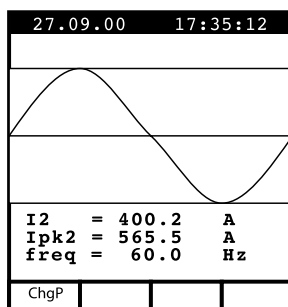

Example of screen in "3 wires" three-phase mode

The symbols used are described in Tab. 2.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:

- **F1:** (only for three-phase mode): to display the values relevant to the following phase.
- **CANCEL:** to return back to METER mode (see paragraph 6.2.2).
- **SAVE:** to save in the instrument memory a record of "Smp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record **selected parameters** according to the instrument's settings (see chapter 7).

6.3. POSITION "POWER"

This function permits you to display in real time the RMS value of AC/DC voltage, the peak and ThdV value of the 3 phase voltages, the waveform of the 3 phase voltages, the RMS value of AC/DC currents, the peak and ThdI of the 3 phase currents, the waveform of the 3 phase currents. Furthermore, the instrument calculates and displays the value of the phase and total active powers, the value of the phase and total reactive and capacitive powers, the value of the phase and total power factors and $\cos\phi$.

6.3.1. Symbols

The position POWER has two working modes:

- METER
- WAVE

For voltage and current harmonics see paragraphs 6.1.3 and 6.2.3 respectively.

These modes will be described in detail in the next paragraphs.

The symbols used are described below:

Symbol	Description
V1, V2, V3	RMS value of the voltage of phase 1, phase 2, phase 3 respectively
V12, V23, V32, V31	RMS Value of the phase to phase voltages
freq	Network frequency
Phseq	Phase sequence indicator "123" → correct "132" → inverted "023" → null voltage on the black wire "103" → null voltage on the red wire "120" → null voltage on the blue wire "100" → null voltages on the red and blue wires "020" → null voltages on the black and blue wires "003" → null voltages on the black and red wires
I1, I2, I3	RMS value of the current of phase 1, phase 2, phase 3 respectively
IN	RMS value of the current of the neutral
Pt, P1, P2, P3	Values of the active power (total, of phase 1, phase 2, phase 3 respectively)
P12, P32	(only for 3 wires measurement) Value of the power measured by the Wattmeter 1-2 and 3-2 respectively (see paragraph 16.3.2).
Qt, Q1, Q2, Q3	Values of the reactive power (total, of phase 1, phase 2, phase 3 respectively)
Q12, Q32	(only for 3 wires measurement) Value of the power measured by the VAR meter Va1-2 and 3-2 respectively (see paragraph 16.3.2).
St, S1, S2, S3	Values of the apparent power (total, of phase 1, phase 2, phase 3 respectively)
S12, S32	(only for 3 wires measurement) Value of the power measured by the VA meter Va1-2 and 3-2 respectively (see paragraph 16.3.2).
Pft, pf1, pf2, pf3	Values of the power factors (total, of phase 1, phase 2, phase 3 respectively)
dPft, dpf1, dpf2, dpf3	Value of the $\cos\phi$ (total, of phase 1, phase 2, phase 3 respectively)
Ead, Pd	Values of the Total Active Energy and Active Power On demand respectively
Esd, Sd	Values of the Total Apparent Energy and Apparent Power On demand respectively

Tab. 3: Symbols used in the position **POWER**

The symbols "i" and "c" stand for reactive powers (Q), power factors (Pf) and $\cos\phi$ (dpf) respectively inductive and capacitive.

6.3.2. "METER" mode

Upon pressing the POWER function key, the instrument selects automatically the **METER mode** corresponding to one of the below screens according to the settings made as per paragraph 5.2.

27.09.00		17:35:12	
SINGLE PHASE POWER			
V1	=	230.0	V
I1	=	145.3	A
P1	=	32.91	kW
Q1	=	5.767	kVAR
S1	=	33.41	kVA
pf1	=	0.99	i
dpf1	=	0.99	i
WAVE			

Example of screen in singlephase mode

27.09.00		17:35:12	
POWER THREE WIRE			
Pt	=	64.19	kW
Qt	=	10.99	kVAR
St	=	65.12	kVA
pft	=	0.99	i
dpft	=	1.00	i
ChgP		WAVE	

Example of screen in "3 wires" three-phase mode

27.09.00		17:35:12	
POWER THREE PHASE			
Pt	=	135.8	kW
Qt	=	24.59	kVAR
St	=	138.0	kVA
pft	=	0.98	i
dpft	=	1.00	i
Phseq	=	123	
ChgP		WAVE	

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 3.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:

- **F2:** to pass to "WAVE" mode (see paragraph 6.3.3).
- **F1:** (only for three-phase measurement) to display the previous or the following screen. On the basis of the settings made as per paragraph 5.2 following screens are displayed cyclically:
 - **Three-phase 3 wires:** total three-phase values, Wattmeter phases 1-2 and 2-3 values, Peak Demand
 - **Three-phase 4 wires:** total three-phase values, phase1, phase2 and phase3 values, Peak Demand
- **SAVE:** to save in the instrument memory a record of "Smp" type (see paragraph 5.4) and the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain however available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record **selected parameters** according to the instrument's settings (see chapter 7).

6.3.2.1. PEAK ENERGY DEMAND

In three-phase system selecting the POWER Position and pressing F1 key 3 times you can reach the "Peak Demand" mode.

The "Peak Demand" screen shows the Max Average value of Active Power (and the corresponding Energy) or Max Average value of Apparent Power (and the corresponding Energy) measured during the last (or running) recording. The Average value is evaluated in the integration Period set for the recording. This screen also shows the corresponding Active Energy and the corresponding Peak Date and Time.

27.09.00		17:35:12	
PEAK DEMAND THREE PHASE			
Ead	=	98.36 kWh	
Pd	=	24.59 kW	
Peak Date			
25.09.00 17:00			
Int Period: 15min			
Rec n: 06			
ChgP		Wh	VAh


27.09.00		17:35:12	
PEAK DEMAND THREE PHASE			
Esd	=	120.84 kVAh	
Sd	=	30.21 kVA	
Peak Date			
25.09.00 18:15			
Int Period: 15min			
Rec n: 06			
ChgP		Wh	VAh

Example of "PEAK ENERGY DEMAND" screen


- **F1:** to display the previous or the following screen. On the basis of the settings made as per paragraph 5.2 following screens are displayed cyclically:
 - **Three-phase 3 wires:** total three-phase values, Wattmeter phases 1-2 and 2-3 values, Peak Demand
 - **Three-phase 4 wires:** total three-phase values, phase1, phase2 and phase3 values, Peak Demand
- **F3:** to show Active Power and Active Energy values
- **F4:** to show Apparent Power and Apparent Energy values
- **SAVE:** to save in the instrument memory a record of "Smp" type (see paragraph 5.4) and the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain however available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the MENU mode and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record selected parameters according to the instrument's settings (see chapter 7).

6.3.3. "WAVE" mode


Selecting the **WAVE mode** one of the below screens will be displayed according to the settings made as per paragraph 5.2. The screens show the waveform of the phase currents and the phase (or phase-to-phase) voltage.

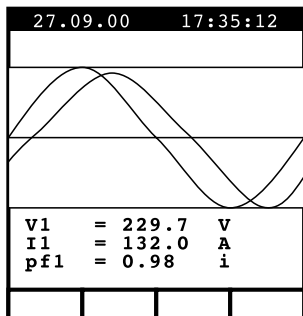

Example of screen in singlephase mode

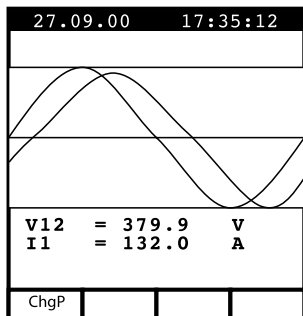

Example of screen in "3 wires" three-phase mode

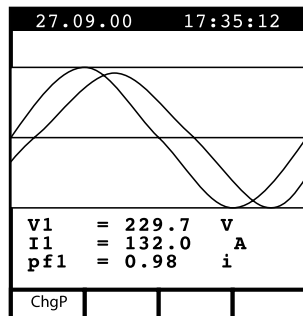

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 3.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:

- **F1:** (only for three-phase mode): to display the values relevant to the following phase. On the basis of the settings made as per paragraph 5.2 following screens are displayed cyclically:
 - **3 wires three-phase:** values of the Wattmeter 1-2, values of the wattmeter 2-3
 - **4 wires three-phase:** values of phase 1, phase 2 and phase 3
- **CANCEL:** to return back to METER mode (see paragraph 6.3.2).
- **SAVE:** to save in the instrument memory a record of "Smp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- **ENTER/HOLD:** to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain however available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- **MENU:** to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- **START/STOP:** to record **selected parameters** according to the instrument's settings (see chapter 7).

6.4. POSITION "ENERGY"

This function permits to display the values of the phase and total active powers, the value of the phase and total capacitive and inductive reactive powers, the values of the power factors and phase and total $\cos\phi$. Furthermore, the instrument is able to measure directly (see paragraph 6.4.2) the values of the phase and total active energies and the values of the phase and total capacitive and inductive reactive energies.

6.4.1. Symbols

The position ENERGY has only one working mode:

- METER

This mode will be described in detail in the next paragraphs.

The symbols used are described below:

Symbol	Description
Pt, P1, P2, P3	Values of the total active power, of phase 1, phase 2, phase 3 respectively
P12, P32	(only for 3 wires measurement) Value of the power measured by the Wattmeter 1-2 and 3-2 respectively (see paragraph 16.3.2)
Qt, Q1, Q2, Q3	Values of the total reactive power, of phase 1, phase 2, phase 3 respectively
Q12, Q32	(only for 3 wires measurement) Value of the power measured by the VARmeter 1-2 and 3-2 respectively (see paragraph 16.3.2)
St, S1, S2, S3	Values of the total apparent power, of phase 1, phase 2, phase 3 respectively
S12, S32	(only for 3 wires measurement) Value of the power measured by the VAmeter 1-2 and 3-2 respectively (see paragraph 16.3.2)
Eat, Ea1, Ea2, Ea3	Values of the total active energy, of phase 1, phase 2, phase 3 respectively
Erit, Eri1, Eri2, Eri3	Values of the total inductive reactive Energy, of phase 1, phase 2, phase 3 respectively
Erct, Erc1, Erc2, Erc3	Values of the total capacitive reactive Energy, of phase 1, phase 2, phase 3 respectively
Est, Es1, Es2, Es3	Values of the total Apparent Energy, of phase 1, phase 2, phase 3 respectively

Tab. 4: Symbols used in the position **ENERGY**

The symbols "i" and "c" stand for reactive powers (Q) and energies (Er) inductive and capacitive respectively.

6.4.2. "METER" mode

Upon pressing the ENERGY function key, the instrument selects automatically the METER mode corresponding to one of the below screens according to the settings made as per paragraph 5.2.

27.09.00	17:35:12
ENERGY SINGLE PHASE	
Ea1	= 0.000 kWh
Erc1	= 0.000 kVARh
Eri1	= 0.000 kVARh
Es1	= 0.000 kVAh
P1	= 36.38 kW
Q1	= 6.375 kVAR
S1	= 36.94 kVA
Meas Time:	00:00:00
Meas	

Example of screen in singlephase mode

27.09.00	17:35:12
ENERGY THREE PHASE	
Eat	= 0.000 kWh
Erct	= 0.000 kVARh
Erit	= 0.000 kVARh
Est	= 0.000 kVAh
Pt	= 36.38 kW
Qt	= 6.375 kVAR
St	= 36.94 kVA
Meas Time:	00:00:00
Meas	

Example of screen in "3 wires" three-phase mode

27.09.00	17:35:12
ENERGY THREE PHASE	
Eat	= 0.000 kWh
Erct	= 0.000 kVARh
Erit	= 0.000 kVARh
Est	= 0.000 kVAh
Pt	= 167.7 kW
Qt	= 30.47 kVAR
St	= 170.4 kVA
Meas Time:	00:00:00
ChgP	Meas

Example of screen in "4 wires" three-phase mode

The symbols used are described in Tab. 4.

For eventual messages displayed see appendix 1 – MESSAGES DISPLAYED.

Following keys are enabled:

- F2: to start / stop immediately a direct energy measurement. The energy counters will start increasing proportionally to the active power absorbed by the load.
The results obtained cannot be memorized.
If the active power is negative the counters will not increase.
- F1: (only for 4 wires measurement) to display the following screen. On the basis of the settings made as per paragraph 5.2 following screens are displayed cyclicly:
Overall three-phase values, values of phase 1, phase 2 and phase 3
- SAVE: to save in the instrument memory a record of "Smp" type (see paragraph 5.4) containing the instantaneous values of voltage and current present on the instrument inputs. This function is disabled during a recording.
- ENTER/HOLD: to enable/disable the HOLD function (updating interruption) of the displayed data. All the previous functions remain however available. When the HOLD function is enabled, the word **HOLD** is displayed. When this function is enabled it's not possible to record or take an energy measurement. This function is disabled during a recording or an energy measurement.
- MENU: to enter in the **MENU mode** and change the instrument settings (see paragraph 5.2 and 5.3). It's not possible to enter the configuration MENU during a recording or an energy measurement.
- START/STOP: to record **selected parameters** according to the instrument's settings (see chapter 7).

7. STARTING A RECORDING

As you can read in the paragraph 5.3 a recording can be started manually or automatically. Therefore, after setting all the parameters **and leaving the Menu**, the instrument will start to record:

- **MANUALLY:** the recording will start when Instrument's time reaches the "00" seconds value after pressing START/STOP.
- **AUTOMATICALLY:** **If the operator has pressed START/STOP** the instrument will remain in stand-by until the date and time previously set, then the recording will start. **While if the operator doesn't press START/STOP the recording will never start.**

CAUTION

For recordings **ALWAYS use the external power supply** even the instrument allows the operator to perform a recording using internal batteries.

If you press Start a recording without the external power supply the instrument will display a warning message **"No ext supply"**. Press **START** key again to run the recording or press **CANCEL** to quit.

If during a recording the external power supply is de-energized, the instrument will continue the recording using the internal battery power until the batteries are exhausted (the data stored until the definitive turning off won't get lost). For this we recommend you **ALWAYS insert a new set of batteries before a long recording**.

The instrument uses sophisticated algorithms to prolong the battery life. Particularly:

- The instrument switches OFF the backlight automatically after 5 seconds.
- If the instrument is just displaying in real time (and the external power supply is not connected), after about 5 minutes from the last key pressure the instrument turns off automatically ("AUTOPOWER OFF" function).
- If the instrument is recording or is measuring energy (and the external power supply is not connected), after about 5 minutes from the last key pressure the instrument starts a special procedure to save the batteries ("ECONOMY MODE"): the instrument keeps recording but the display is turned off.

Before starting a recording the operator should first evaluate the state of the equipment, decide what to record and set the instrument accordingly.

In order to facilitate this task we have decided to supply the instrument pre-set with a general configuration which should fit most cases.

The chosen configuration is the following

- ANALYZER CONFIG:

Frequency:	60Hz
Full scale of the clamps:	1000A
Transforming ratio of voltmetric transformers:	1
Type of electrical equipment:	4 wires
Password:	enabled

- RECORDER CONFIG:

Start:	Manual (the recording is started 1 minute after pressing the START/STOP key)
Stop:	Manual
Integration period:	15min
Recording of harmonics:	ON
Recording of Sag and Surge:	ON
Voltage Reference for Sag and Surge detection:	230V
Upper Limit for Sag and Surge detection:	6%
Lower Limit for Sag and Surge detection:	10%
Selected voltages:	V1, V2, V3
Selected voltage harmonics:	Thd, 01, 03, 05, 07
Selected currents:	I1, I2, I3, IN
Selected current harmonics:	Thd, 01, 03, 05, 07
CO-GENERATION:	OFF
Powers, Pf and $\cos\varphi$ selected:	Pt, P1, P2, P3 Qti, Q1i, Q2i, Q3i Qtc, Q1c, Q2c, Q3c St, S1, S2, S3 Pft, Pf1, Pf2, Pf3 dpft, dpf1, dpf2, dpf3 Eat, Ea1, Ea2, Ea3 Erit, Eri1, Eri2, Eri3 Erct, Erc1, Erc2, Erc3 Est, Es1, Es2, Es3

If the user changed the instrument's settings can quickly resume the above configuration using the RESET option (see paragraph 5.5).

By pressing **START/STOP** the recording of the selected parameters is started according to the settings made in the MENU (see paragraphs 5.2 and 5.3). The rotary switch position doesn't affect the recording setting.

As the default value of the integration periods is set at 15 minutes the instrument will store data in the temporary memory for 15 minutes. Afterwards the instrument will elaborate the results saved in the temporary memory and will save the first series of values in the definitive memory. Therefore, if an integration period of 15 minutes has been set, the recording will continue for about 15 minutes before producing a series of recorded values. If the recording is interrupted before the selected integration period has completely elapsed the data stored in the temporary memory will not be elaborated and the corresponding series of values won't be transferred to the definitive memory.

8. DURING A RECORDING

If during a recording the external power supply is de-energized, the instrument will continue the recording using the internal battery power until the batteries are exhausted (the data stored up to the point the instrument shuts down won't get lost). For this we recommend you **ALWAYS** insert a new set of batteries before a long recording.

The instrument uses sophisticated algorithms to prolong the battery life. Particularly if the instrument is recording or is measuring energy (and the external power supply is not connected), after about 5 minutes from the last key pressure the instrument starts a special procedure to save the batteries ("ECONOMY MODE"): the instrument keeps recording but the display is turned off.

During a recording the following are disabled:

- **AUTOPOWER OFF** function
- **ON/OFF** key
- **HOLD** key
- **SAVE** key

Press the **MENU** key and the following screen will appear:

```
INFO REC n XX
START
09.18.01 11:35
INT PERIOD: 15min
REC PERIODS:00004
REC TIME:139d.02h
HARM REC: (ON)
ANOM REC: (ON)
N ANOMALIES: 00000

Recording
```

This page includes:

1. START Date and Time
2. Integration Period
3. Actual Number of Elapsed Integration Periods
4. Actual Recording Time
5. Status of Harmonic Flag
6. Status of Voltage Anomalies Flag
7. Number of Voltage anomalies occurred during the recording

9. STOPPING A RECORDING OR AN ENERGY MEASUREMENT

The instrument uses a protective routine to avoid the risk of being disturbed or interrupted during a recording or an energy measurement. Once a recording or a direct energy measurement (see paragraph 6.4.2) has been started (with the option PASSWORD enabled), after about 3 minutes from the last key pressure or switch rotation it won't be sufficient to press START/STOP (if a recording is running) or F2 (if an energy measuring is running) to stop the recording, it will be necessary to insert the password.

In order to insert the password (which is not changeable), press the multifunction keys in the following sequence (within 10 seconds):

F1, F4, F3, F2

In order to enable/disable this option see paragraph 5.2.

If a wrong password is inserted, the instrument will display an error message and will repeat the request.

If no key is pressed after about 10 seconds the instrument returns back to the original screen.

10. CONNECTING THE INSTRUMENT TO A PC

In order to connect the instrument to a PC you must connect the serial cable shipped with the instrument to the serial output.

The DM-II Plus serial cable has the following inner connections:

The available transmission speeds are the following:

4800, 9600, 19200, 57600 (default value)

The value of the transmission speed (Baud Rate) is displayed on the initial screen (immediately after turning on the instrument) (see paragraph 2.3). The value of this parameter can be modified only with the management software.

For download instructions please refer to Download Suite help file.

In order to transfer the memorized data from the instrument to the PC the following procedure must be followed:


1. **Switch ON the instrument and wait until the Initial screen disappears.**
2. **Connect the serial output of the instrument to the serial output of the PC through the serial cable**
3. **Install the Download Suite software and start it – Close the introduction window**
4. **Refer to Download Suite help file for further instructions.**

11. MEASURING PROCEDURES

11.1. USING THE INSTRUMENT IN A SINGLE PHASE SYSTEM

CAUTION

The maximum voltage between L1 and COM inputs is 370V~ phase – earth.
Do not measure voltages exceeding the limits prescribed by this manual. Should you exceed the voltage limits you could damage the instrument and/or its components or endanger your safety.

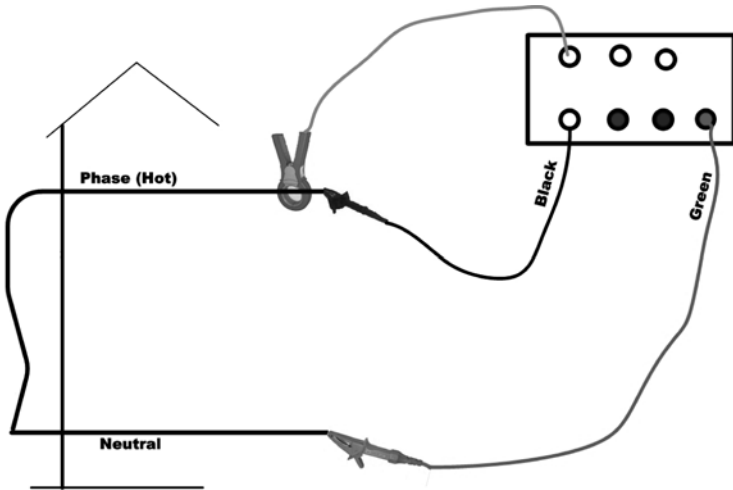

Instrument connection in a single-phase system

CAUTION

If possible, before connecting the instrument to the electrical equipment to be tested take the power supply off the electrical equipment.

1. Check, and if needed modify, the basic settings of the instrument (see paragraphs 5.2 and 5.3). Particularly, the **single-phase mode** must be set.
2. Rotate the switch to the position corresponding to the type of analysis desired. In case of doubts select the position **POWER** (see paragraph 6.3).
3. Connect the phase and neutral voltage wires respecting the connections shown in the picture.
4. If you want to measure current and power, connect the clamp meter to the phase conductor respecting the specifications shown on the clamp and the connections shown in the picture. In case of doubt, select the position **POWER** and check if the active power P is positive. If it's negative, remove current transducer from the wire and reconnect it so the transducer label faces the opposite direction.
5. Apply voltage to the electrical equipment under test (if previously shut off for the instrument connection).
6. The values of the available electrical parameters will be displayed on the display of the instrument. For further details see the paragraph relevant to the position of the switch.
7. You can press **HOLD** to interrupt the updating in real time of the displayed values.
8. If you want to record:
 - a) Check, and if needed modify, the values of the basic parameters (see paragraphs 5.2 and 5.3).
 - b) Check, and if needed modify, the recording parameters by pressing **MENU** (see the paragraph corresponding to the position of the rotary switch selected).
 - c) To start the recording press **START** (see chapter 6).


11.2 USING THE INSTRUMENT IN A THREE PHASE 4 WIRE SYSTEM

CAUTION

The maximum voltage between V1, V2, V3 & COM inputs is CAT III 635 V~ phase – phase 370 V~ phase to earth.

Do not measure voltages exceeding the limits prescribed by this manual.

Should you exceed the voltage limits you could damage the instrument and/or its components or endanger your safety.

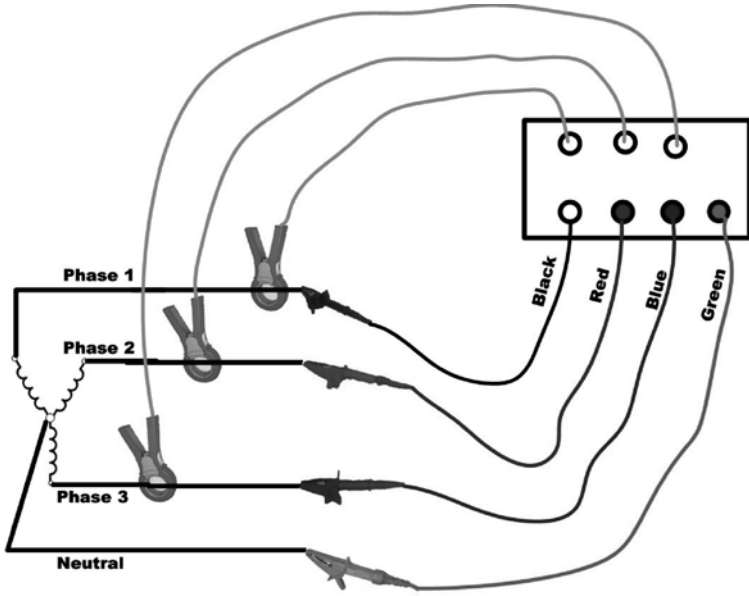

Instrument connection in a three-phase 4 wire system

CAUTION


If possible, before connecting the instrument to the electrical equipment to be tested take the power supply off the electrical equipment.

1. Check, and if needed modify, the basic settings of the instrument (see paragraphs 5.2 and 5.3). Particularly, the 3PH4W mode must be set.
2. Rotate the switch to the position corresponding to the type of analysis desired. In case of doubts select the position POWER (see paragraph 6.3).
3. Connect the phase and neutral voltage wires respecting the connections shown in the picture.
4. If you want to measure current and power, connect the clamp meter to the phase conductor respecting the specifications shown on the clamp and the connections shown in the picture. In case of doubts select the position POWER and, connecting one clamp at a time, check if
 - a) the phase sequence is correct (see paragraph 6.1.2).
 - b) the active power P of each phase is positive. If it's negative, remove current transducer from the wire and reconnect it so the transducer label faces the opposite direction.
 - c) the value of the Pf of each phase is not excessively low (typically it's not lower than 0.4). In case the Pf is lower than 0.4, check if the phase voltage is associated to the right clamp meter (for example the voltage of phase 1 must be associated to the clamp meter no. 1).
5. Apply voltage to the electrical equipment under test (if previously shut off for the instrument connection).
6. The values of the available electrical parameters will be displayed. For further details see the paragraph relevant to the position of the switch.
7. You can eventually press HOLD to interrupt the updating in real time of the displayed values.
8. If you want to record:
 - a) Check and, if needed, modify the values of the basic parameters (see paragraphs 5.2 and 5.3).
 - b) Check and, if needed, modify the recording parameters by pressing MENU (see the paragraph corresponding to the position of the rotary switch selected).
 - c) To start the recording press START (see chapter 6).

11.3 USING THE INSTRUMENT IN A THREE PHASE 3 WIRE SYSTEM

CAUTION

The maximum voltage between V1, V2, V3 and COM (V2) inputs is CATIII 635V~ phase-phase.
Do not measure voltages exceeding the limits prescribed by this manual. Should you exceed the voltage limits you could damage the instrument and/or its components or endanger your safety.

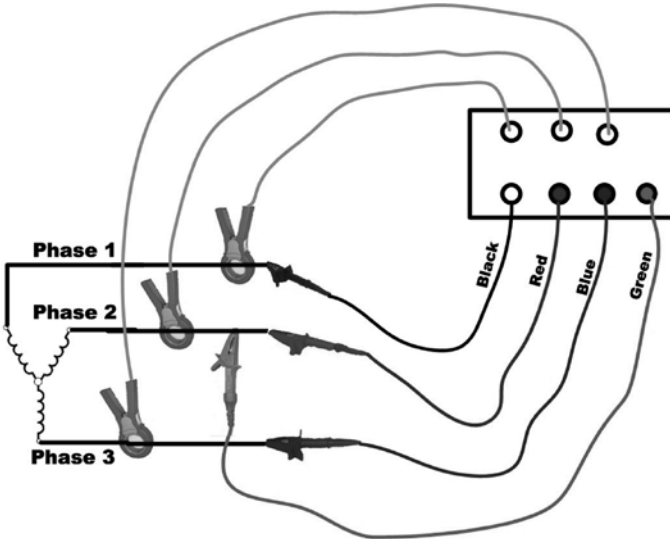

Instrument connection in a 3 wires three-phase system

CAUTION

Please note that in this case the yellow cable (neutral) is connected with the red cable on phase 2.

If possible, before connecting the instrument to the electrical equipment to be tested take the power supply off the electrical equipment.

1. Check, and if needed modify, the basic settings of the instrument (see paragraphs 5.2 and 5.3). Particularly, the **3 wires mode** must be set.
2. Rotate the switch to the position corresponding to the type of analysis desired. In case of doubts select the position **POWER** (see paragraph 6.3).
3. Connect the phase and neutral voltage wires respecting the connections shown in the picture.
4. If you want to measure current and power, connect the clamp meter to the phase conductor respecting the specifications shown on the clamp and the connections shown in the picture. In case of doubts set temporarily the **3PH3W** mode, then select the **POWER** position, connect the yellow wire of the instrument to earth and, connecting one clamp at a time, check if:
 - a) The phase sequence is correct (see paragraph 6.1.2).
 - b) The active power P of each phase is positive. If negative, turn the clamp of the phase in question.
 - c) The value of the Pf of each phase is not excessively low (typically it's not lower than 0.4). In case the Pf is lower than 0.4, check if the phase voltage is associated to the right clamp meter (for example the voltage of phase 1 must be associated to the clamp meter no. 1).
 - d) After checking, and if needed modifying, the connection of the instrument to the equipment re-set the **3 wires mode** and the connections shown in the picture (yellow and red wire together).
5. Apply voltage to the electrical equipment under test (if previously shut off for the instrument connection).
6. The values of the available electrical parameters will be displayed of the instrument. For further details see the paragraph relevant to the position of the switch.
7. You can press **HOLD** to interrupt the updating in real time of the displayed values.
8. If you want to record:
 - a) Check and eventually modify the values of the basic parameters (see paragraphs 5.2 and 5.3).
 - b) Check and eventually modify the recording parameters by pressing **MENU** (see the paragraph corresponding to the position of the rotary switch selected).
 - c) To start the recording press **START** (see chapter 6).

12. MAINTENANCE

12.1. GENERAL

The DM-II Plus is a precision instrument. For its' use and storage, follow the recommendations and instructions contained in this manual in order to avoid possible damages or dangers.

Never use the instrument in environments with a high humidity or temperature.

Do not expose the instrument to direct sunlight.

Always turn off the instrument after use.

12.2. BATTERY REPLACEMENT

When the battery indicator on the display appears almost empty () the batteries must be replaced.



CAUTION

Only qualified technicians should operate the instrument.

Before replacing the batteries disconnect the test leads from circuit under voltage in order to avoid electrical shocks.

1. Disconnect cables and clamps from the circuit under test.
2. Turn the instrument off by pressing ON/OFF.
3. Remove the cables from the input terminals.
4. Unscrew the screw of the battery cover and remove the cover.
5. Replace the batteries with 6 new 1.5 V – D-size.
6. Reposition the cover and fasten it with the proper screw.

12.3. CLEANING

Use a soft dry cloth to clean the instrument. Do not use wet clothes, solvents, water and so on.

13. TECHNICAL SPECIFICATIONS

13.1. FEATURES

The accuracy is stated as [% of the reading \pm number of digits]. It refers to the following atmospheric conditions: temperature 73°F \pm 2°F (23°C \pm 1°C) with relative humidity < 75%.

13.1.1. Voltage measurement (Autoranging)

Range	Accuracy	Resolution	Input impedance
15-370V	$\pm(0.5\%+2\text{digit})$	0.2V	300k Ω (phase-neutral)
310-635V		0.4V	600k Ω (phase-phase)

13.1.2. Voltage Anomalies Detection (Manual Selection of Range)

Voltage

Range	Accuracy	Resolution	Input impedance
15-370V	$\pm(0.5\%+2\text{digit})$	0.2V	300k Ω (phase-neutral)
30-635V		0.4V	600k Ω (phase-phase)

Time

Accuracy (ref. to 60Hz)	Resolution
$\pm 8.33\text{ms}$ ($\frac{1}{2}$ period of fundamental)	8.33ms ($\frac{1}{2}$ period of fundamental)

13.1.3. Current measurement (DM-II Plus only)

Range	Accuracy	Resolution	Input impedance	Protection against overloads
0.005-0.26V	$\pm(0.5\%+2\text{digit})$	0.0001V	100k Ω	5V
0.26-1V		0.0004V		

13.1.4. Current measurement (Using DM-CT-HTA)

Range	Accuracy	Resolution	Protection against overloads
5 to 1000 A	$\pm(1.5\% \text{ of range})$	0.1 A	600 V

Minimal Current measurable is equal to 1.5% of Clamp Full Scale

13.1.5. Current measurement (Using ACF-3000 SR)

Range	Accuracy	Resolution	Protection against overloads
15 to 3000 A	$\pm(1.5\% \text{ of range})$	0.1 A	600 V

Minimal Current measurable is equal to 1.5% of Clamp Full Scale

13.1.6. Power measurement (cosφ: 0.5[positive] – 0.5i[negative])

Value	Ranges	Accuracy	Resolution
Active power	0 – 999.9W	±(1.5%+2digit)	0.1W
	1kW – 999.9kW		0.1kW
	1MW – 999.9MW		0.1MW
Reactive power	0 – 999.9VAR		0.1VAR
	1kVAR – 999.9kVAR		0.1kVAR
	1MVAR – 999.9MVAR		0.1MVAR
Apparent power	0 – 999.9VA	0.1VA	
	1kVA – 999.9kVA	0.1kVA	
	1MVA – 999.9MVA	0.1MVA	
Active energy	0 – 999.9Wh	0.1Wh	
	1kWh – 999.9kWh	0.1kWh	
	1MWh – 999.9MWh	0.1MWh	
Reactive energy	0 – 999.9VARh	0.1VARh	
	1kVARh – 999.9kVARh	0.1kVARh	
	1MVARh – 999.9MVARh	0.1MVARh	

13.1.7. Cosφ measurement

Cosφ	Resolution	Accuracy (expressed in degrees)
0 to 0.20	0.01	0.6
0.21 to 0.50		0.7
0.51 to 0.80		1

13.1.8. Measurement of Harmonics

Voltage

Range	Accuracy	Resolution
DC – 25h	±(5.0%+2digit)	0.1V
26h – 33h	±(10.0%+2digit)	
34h – 49h	±(15.0%+2digit)	

The voltage harmonics will be null under the following threshold:

- DC: if <1V or <2% of 1st harmonic
- 1st harmonic: if <2V
- 2nd to 49th: if <1V or <2% 1st harmonic

Current

Range	Accuracy	Resolution
DC – 25h	±(5.0%+2digit)	0.1A
26h – 33h	±(10.0%+2digit)	
34h – 49h	±(15.0%+2digit)	

The current harmonics will be null under the following threshold:

- DC: if <2% of 1st harmonic or < 0,2% of clamp full scale
 - 1st harmonic: if < 0,2% of clamp full scale
 - 2nd to 49th: if <2% 1st harmonic or < 0,2% of clamp full scale
- Setting the FLEX option the DC component will be ignored.

13.1.9. Frequency Measurement

Instrument set to 50Hz

Range	Resolution	Accuracy
47 to 53	0.1Hz	$\pm(1.0\% + 1\text{digit})$

Instrument set to 60Hz

Range	Resolution	Accuracy
57 to 63.6	0.1Hz	$\pm(1.0\% + 1\text{digit})$

13.1.10. Temperature drift

Temperature drift: $0.1 \times \text{accuracy}/^{\circ}\text{K}$

13.1.11. Safety

The instrument complies to the standards:	EN 61010-1 :2002
Insulation:	Class 2
Pollution:	2
Over-voltage category:	CAT III 370V~ (Phase-Earth) CAT III 635V~ (Phase-Phase)
Clamps:	IEC 61010-2-032 Ed. 2.0
Phase Sequence Detection:	EN 61557-7:2003

13.1.12. General Characteristics

Mechanical Features

Dimensions:	444.5(L) x 273.05(La) x 190.5(H) mm 17.50"(L) x 10.75" (La) x 7.50" (H)
Weight:	11.5 Lb (5.2kg)
Internal power supply:	6 batteries 1.5V D size NEDA 13A, IEC L20R
Battery Life:	22 hours
External power supply	Use only Amprobe power supply Adapter code DMTEXTPS.
Display:	dot matrix with backlight
resolution	128 x 128 dots (16384 dots)
dot size	0.5mm x 0.5mm
visible area	73mm x 73mm (2.9" x 2.9")
No. of samples per period	128
Clamp:	
Opening:	53 mm (2.15")
Maximum diameter of the cable:	50 mm (2.00")

13.2. ENVIRONMENT

13.2.1. Operating conditions

Reference temperature:	23°C \pm 1°C (73°F \pm 2°F)
Operating temperature:	0°C to 50 °C (32°F to 122°F)
Relative humidity:	<70%
Storage temperature:	-10°C to 60 °C (14°F to 140°F)
Storage humidity:	<80%
Location:	Indoor operation, < 2000 m

13.2.2. EMC/EMI/ESD

This instrument has been designed in compliance with the EMS standards in force and its compatibility has been tested for EN61326-1:2006

This instrument complies with the prescriptions of the European directive on low voltage 73/23/CEE (LVD) and EMC directive 89/336/EEC, amended by 93/68/EEC.

13.3. ACCESSORIES

13.3.1. Standard accessories

The package contains:

Description	Model name
Instrument	DM-II Plus
External power supply 12VDC	DMT-EXTPS
3 clamp meters 1000A/1V	DM-CT-HT (code 1 pcs)
4 cables and alligators for voltage measurement	KITENERGY3
1 Software CD	DS2.2
Serial Cable	C232NG1

14. APPENDIX 1 – MESSAGES DISPLAYED

Message	Description	Advices
AUTONOM:	Available memory autonomy for the recording which is being effected	
CLEAR ALL? (Enter)	The operator is trying to cancel all the recordings effected	Press CANCEL in order not to cancel the whole memory, press ENTER to confirm
CLEAR LAST? (Enter)	The operator is trying to cancel the last recording effected	Press CANCEL in order not to cancel the last recording, press ENTER to confirm
Data saved	The data have been saved	
DATA SIZE:	Dimensions of the stored data	
HOLD	By pressing the proper key, the HOLD function has been activated	Press HOLD again to disable this function
Password:	A recording has been started and at least 5 minutes have passed from the last activity of the instrument (see paragraph 7).	Insert the password: F1, F4, F3, F2
Invalid date	The inserted date is not correct	Check the inserted date
Energy Measuring	The instrument is taking an energy measurement	Press F1 to stop it
Memory Full	The memory of the instrument is full	Cancel some recordings after transferring them to a PC
No ext supply!	A recording has been started without connecting the external power supply	Verify it you really want to start the recording without the external power supply. In that case press START again.
No parameter sel	A recording has been started without selecting any value to be recorded	Press START/STOP and select at least a value entering the MENU
No Phase selected	Voltage and/or current harmonics have been selected and the corresponding flag has been enabled (HARMONICS ON) but no phase voltage or current has been selected	Select at least one phase voltage and/or current
PASSWORD ERROR	The inserted password is wrong (see paragraph 7).	Check the password
PASSWORD OK	The inserted password is correct	
Please wait	The instrument is waiting for the recording to be started (see paragraph 6)	
Recording	The instrument is recording (see paragraph 6)	
Too many param	More than 63 parameters have been selected (harmonics included) or More than 38 parameters with COGENERATION Flag enabled	Deselect some values
Too many record	The quantity of recorded data + Smp exceeds the maximum allowed (35)	Cancel some recordings after transferring them to a PC
ERR: SEQ	The Phase Sequence isn't correct.	Check the Phase Sequence connection.
ERR: P-	The active powers shown on the right side of the message are negative	If there isn't a situation of co-generation check if the clamps are properly connected
ERR: SEQ & P-	The active powers shown on the right side of the message are negative and the Phase Sequence isn't correct.	If there isn't a situation of co-generation check if the clamps are properly connected / check the Phase Sequence connection.
ERR: CONNECTION	The instrument has detected a wrong connection to Voltage inputs	Check the Voltage connections (see paragraph 11)
Error Vref	The user set a Voltage reference not compatible with voltage at instrument's input.	Check Voltage Reference set in "CONFIG RECORDER"
Error1 to Error 5	The instrument memory is damaged.	Contact Amprobe assistance

APPENDIX 2 – RECORDABLE PARAMETERS: SYMBOLS

Symbol	Description
V1, V2, V3	RMS value of the voltage of phase 1, phase 2, phase 3 respectively
V12, V23 V31	Value of phase to phase voltages
I1, I2, I3	RMS value of the current of phase 1, phase 2, phase 3 respectively
IN	RMS value of the current of the neutral
DC	Continuous component of voltage or current
h01 to h49	Harmonic 01 to Harmonic 49 of voltage or current
ThdV	Factor of total harmonic distortion of the voltage (see paragraph 16.2)
ThdI	Factor of total harmonic distortion of the current (see paragraph 16.2)

Pt, P1, P2, P3	Values of the total active power, of phase 1, phase 2, phase 3 respectively
P12, P32	(only for 3 wires measurement) Value of the power measured by the Wattmeter 1-2 and 3-2 respectively (see paragraph 16.3.2).
Qt, Q1, Q2, Q3	Values of the total reactive power, of phase 1, phase 2, phase 3 respectively
Q12, Q32	(only for 3 wires measurement) Value of the power measured by the VARmeter 1-2 and 3-2 respectively (see paragraph 16.3.2).
St, S1, S2, S3	Values of the total apparent power, of phase 1, phase 2, phase 3 respectively
S12, S32	(only for 3 wires measurement) Value of the power measured by the VAmeter 1-2 and 3-2 respectively (see paragraph 16.3.2).
Pft, pf1, pf2, pf3	Value of the total power factors, power factors of phase 1, phase 2, phase 3 respectively
dPft, dpf1, dpf2, dpf3	Values of the total $\cos\varphi$, of phase 1, phase 2, phase 3 respectively

Eat, Ea1, Ea2, Ea3	Values of the total active energy, of phase 1, phase 2, phase 3 respectively
Erit, Eri1, Eri2, Eri3	Values of the total inductive reactive Energy, of phase 1, phase 2, phase 3 respectively
Erc2, Erc1, Erc2, Erc3	Values of the total capacitive reactive Energy, of phase 1, phase 2, phase 3 respectively
Est, Es1, Es2, Es3	Values of the total Apparent Energy, of phase 1, phase 2, phase 3 respectively

16. APPENDIX 3 – THEORETICAL OUTLINES

16.1 VOLTAGE ANOMALIES (VOLTAGE SAG AND SURGE)

The DM-II Plus records as voltage anomalies all those rms values, calculated every 8.3ms, beyond the percent thresholds of Voltage Reference (Vref) set during the programming from $\pm 1\%$ to $\pm 30\%$ (with steps of 1%). The maximum upper limit percent is reduced as Vref approaches 600V.

The Reference must be set to:

Nominal Voltage Phase to Neutral: for Single Phase and 4 wires three phase system
Nominal Voltage Phase to Phase: for 3 wires three phase system

Example1: Three Phase System 3 wires.

Vref = 480V, LIM+= 6%, LIM-=10% =>

High Lim = $480 \times (1+6/100) = 508.8V$

Low Lim = $480 \times (1-10/100) = 528$

Example2: Three Phase System 4 wires.

Vref = 230V, LIM+= 6%, LIM-=10% =>

High Lim = $230 \times (1+6/100) = 243,08V$

Low Lim = $230 \times (1-10/100) = 207,0V$

The Instrument will detect Voltage Anomalies if the RMS Voltage Values (calculated every 8.3ms) beyond the above calculated thresholds. These limits remain unchanged throughout the recording period.

When a Voltage anomaly occurs the instrument records:

- The number corresponding to the phase where the anomaly occurred.
- The "direction" of the anomaly: "UP" and "DN" identify respectively voltage drops (sag) and peaks (Surge).
- The date and time of the beginning of the event in the form day, month, year, hour, minutes, seconds, hundredths of second.
- The duration of the event, in seconds with a resolution of 8.3ms.
- The minimum (or maximum) value of voltage during the event.

16.2. VOLTAGE AND CURRENT HARMONICS

16.2.1. Theory

Any periodical non-sine wave can be represented as a sum of sinusoidal waves having each a frequency that corresponds to an entire multiple of the fundamental, according to the relation:

$$v(t) = V_0 + \sum_{k=1}^{\infty} V_k \sin(\omega_k t + \varphi_k)$$


(1)

where:

V_0 = Average value of $v(t)$

V_1 = Amplitude of the fundamental of $v(t)$

V_k = Amplitude of the k^{th} harmonic of $v(t)$

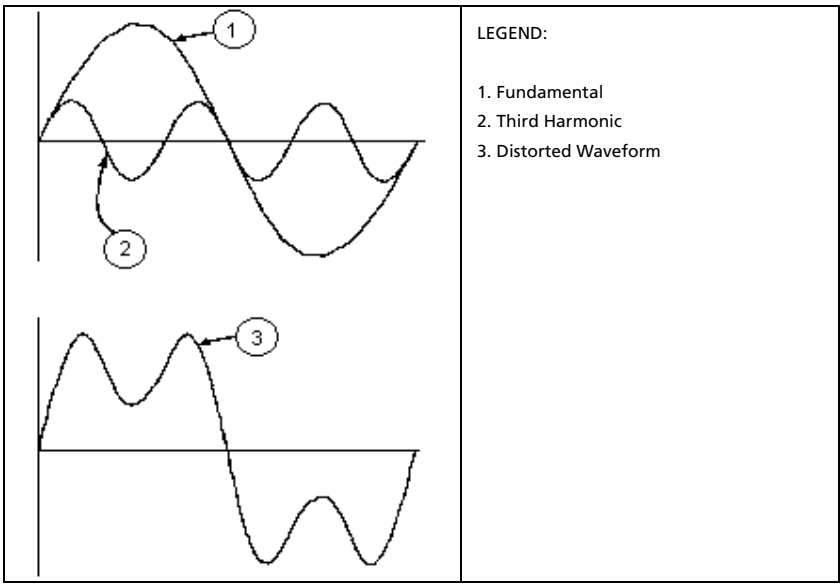

Effect of the sum of 2 multiple frequencies.

In the mains voltage, the fundamental has a frequency of 60 Hz, the second harmonic has a frequency of 120 Hz, the third harmonic has a frequency of 180 Hz and so on. Harmonic distortion is a constant problem and should not be confused with short events such as sags, surges or fluctuations.

A fundamental element to detect the presence of harmonics is THD_v defined as:

$$THD_v = \frac{\sqrt{\sum_{h=2}^{40} V_h^2}}{V_1}$$

This index takes all the harmonics into account. The higher it is, the more distorted the waveform gets.

16.2.2. Limit values for harmonics

EN-50160 fixes the limits for the harmonic voltages, which can be introduced into the network by the power supplier. In normal conditions, during whatever period of a week, 95% if the RMS value of each harmonic voltage, mediated on 10 minutes, will have to be less than or equal to the values stated in the following table.

The total harmonic distortion (Thd) of the supply voltage (including all the harmonics up to 40th order) must be less than or equal to 8%.

Odd harmonics				Even harmonics	
Not multiple of 3		Multiple of 3		Order h	Relative voltage % Max
Order h	Relative voltage % Max	Order h	Relative voltage %Max		
5	6	3	5	2	2
7	5	9	1.5	4	1
11	3.5	15	0.5	6..24	0.5
13	3	21	0.5		
17	2				
19	1.5				
23	1.5				
25	1.5				

These limits, theoretically are applicable only for the supplier of electric energy, provide however a series of reference values within which the harmonics introduced into the network by the users must be contained.

16.2.3. Presence of harmonics: causes

Any apparatus that alters the sine wave or uses only a part of such a wave causes distortions to the sine wave and therefore harmonics.

All current signals are in some way distorted. The most common situation is the harmonic distortion caused by non-linear loads such as household appliances, personal computers or speed control units for motors. Harmonic distortion causes significant currents at frequencies that are odd multiples of the fundamental frequency. Harmonic currents affect considerably the neutral wire of electric installations.

In most countries, the mains power is three-phase 50/60Hz with a delta primary and star secondary transformers. The secondary generally provides 230V AC from phase to neutral and 400V AC from phase to phase. Balancing the loads on each phase has always represented a headache for electric systems designers.

Until some ten years ago, in a well-balanced system, the vectorial sum of the currents in the neutral was zero or quite low (given the difficulty of obtaining a perfect balance). The devices were incandescent lights, small motors and other devices that presented linear loads. The result was an essentially sinusoidal current in each phase and a low current on the neutral at a frequency of 50/60Hz.

“Modern” devices such as TV sets, fluorescent lights, video machines and microwave ovens normally draw current for only a fraction of each cycle thus causing non-linear loads and subsequent non-linear currents. All this generates odd harmonics of the 50/60Hz line frequency. For this reason, the current in the transformers of the distribution boxes contains only a 50Hz (or 60Hz) component but also a 150Hz (or 180Hz) component, a 300Hz (or 360Hz) component and other significant components of harmonic up to 750Hz (or 900Hz) and higher. The vectorial sum of the currents in a well-balanced system that feeds non-linear loads may still be quite low. However, the sum does not eliminate all current harmonics. The odd multiples of the third harmonic (called “TRIPLENS”) are added together in the neutral and can cause overheating even with balanced loads.

16.2.4. Presence of harmonics: consequences

In general, even harmonics, i.e. the 2nd, 4th etc., do not cause problems. Triple harmonics, odd multiples of three, are added on the neutral (instead of canceling each other) thus creating a condition of overheating of the wire which is extremely dangerous.

Designers should take into consideration the three issues given below when designing a power distribution system that will contain harmonic current:

- The neutral wire must be of sufficient gauge.
- The distribution transformer must have an additional cooling system to continue operating at its rated capacity when not suited to the harmonics. This is necessary because the harmonic current in the neutral wire of the secondary circuit circulates in the delta-connected primary circuit. This circulating harmonic current heats up the transformer.
- Phase harmonic currents are reflected on the primary circuit and continue back to the power source. This can cause distortion of the voltage wave so that any power factor correction capacitors on the line can be easily overloaded.

The 5th and the 11th harmonics oppose the current flow through the motors making its' operation harder and shortens their average life.

In general, the higher the ordinal harmonic number, the smaller its energy is and therefore the impact it will have on the devices (except for transformers).

16.3. POWER AND POWER FACTOR: DEFINITIONS

In a standard electric installation powered by three sine voltages the following is defined:

Phase Active Power: (n=1,2,3)	$P_n = V_n \cdot I_n \cdot \cos(\varphi_n)$
Phase Apparent Power: (n=1,2,3)	$S_n = V_n \cdot I_n$
Phase Reactive Power: (n=1,2,3)	$Q_n = \sqrt{S_n^2 - P_n^2}$
Phase Power Factor: (n=1,2,3)	$P_{F_n} = \frac{P_n}{S_n}$
Total Active Power:	$P_{TOT} = P_1 + P_2 + P_3$
Total Reactive Power:	$Q_{TOT} = Q_1 + Q_2 + Q_3$
Total Apparent Power:	$S_{TOT} = \sqrt{P_{TOT}^2 + Q_{TOT}^2}$
Total Power Factor:	$P_{FTOT} = \frac{P_{TOT}}{S_{TOT}}$

where:

V_n = RMS value of voltage between phase n and Neutral.

I_n = RMS value of n phase current.

φ_n = Phase displacement angle between voltage and current of n phase.

In presence of distorted voltages and currents the previous relations vary as follows:

Phase Active Power: (n=1,2,3)	$P_n = \sum_{k=0}^{\infty} V_{kn} I_{kn} \cos(\varphi_{kn})$
Phase Apparent Power: (n=1,2,3)	$S_n = V_{nN} \cdot I_n$
Phase Reactive Power: (n=1,2,3)	$Q_n = \sqrt{S_n^2 - P_n^2}$
Phase Power Factor: (n=1,2,3)	$P_{F_n} = \frac{P_n}{S_n}$
Distorted Power Factor (n=1,2,3)	dPF _n =cosφ _{1n} = phase displacement between the fundamentals of voltage and current of n phase
Total Active Power:	$P_{TOT} = P_1 + P_2 + P_3$
Total Reactive Power:	$Q_{TOT} = Q_1 + Q_2 + Q_3$
Total Apparent Power:	$S_{TOT} = \sqrt{P_{TOT}^2 + Q_{TOT}^2}$
Total Power Factor:	$P_{F_{TOT}} = \frac{P_{TOT}}{S_{TOT}}$

where:

V_{kn} = RMS value of kth voltage harmonic between n phase and Neutral.

I_{kn} = RMS value of kth current harmonic of n phase.

φ_{kn} = Phase displacement angle between kth voltage harmonic and kth current harmonic of n phase.

Note:

It is to be noted that the expression of the phase Reactive Power with non sine waveforms, would be wrong. To understand this, it may be useful to consider that both the presence of harmonics and the presence of reactive power produce, among other effects, an increase of line power losses due to the increased current RMS value. With the above given relation the increasing of power losses due to harmonics is added to that introduced by the presence of reactive power. In effect, even if the two phenomena together contribute to the increase of power losses in line, it is not true in general that these causes of the power losses are in phase between each other and therefore can be added one to the other mathematically.

The above given relation is justified by the relative simplicity of calculation of the same and by the relative discrepancy between the value obtained using this relation and the true value.

It is to be noted moreover, how in case of an electric installation with harmonics, another parameter called distorted Power Factor (dPF) is defined. In practice, this parameter represents the theoretical limit value that can be reached for Power Factor if all the harmonics could be eliminated from the electric installation.

16.3.1 Conventions on powers and power factors

As for the recognition of the type of reactive power, of the type of power factor and of the direction of the active power, the below conventions must be applied. The stated angles are those of phase-displacement of the current compared to the voltage (for example, in the first panel the current is in advance from 0° to 90° compared to the voltage):

Equipment under test = Inductive Generator ←	90°	Equipment under test = Capacitive Load →
$P_+ = 0$ $P_{fc+} = -1$ $P_{fi+} = -1$ $Q_{c+} = 0$ $Q_{i+} = 0$		$P_- = P$ $P_{fc-} = -1$ $P_{fi-} = Pf$ $Q_{c-} = 0$ $Q_{i-} = Q$
180°		0°
Equipment under test = Capacitive Generator ←	270°	Equipment under test = Inductive Load →
$P_+ = 0$ $P_{fc+} = -1$ $P_{fi+} = -1$ $Q_{c+} = 0$ $Q_{i+} = 0$		$P_- = P$ $P_{fc-} = Pf$ $P_{fi-} = -1$ $Q_{c-} = 0$ $Q_{i-} = Q$


where:

Symbol	Significance	Remarks
P+	Value of the active power +	Positive parameter (user)
Pfc+	Capacitive power factor +	
Pfi+	Inductive power factor +	
Qc+	Value of the capacitive reactive power +	
Qi+	Value of the inductive reactive power +	
P-	Value of the active power -	Negative parameter (generator)
Pfc-	Capacitive power factor -	
Pfi-	Inductive power factor -	
Qc-	Value of the capacitive reactive power -	
Qi-	Value of the inductive reactive power -	

Value	Significance
P	The active power (positive or negative) is defined in the panel and therefore acquires the value of the active power in that moment.
Q	The reactive power (inductive or capacitive, positive or negative) is defined in the panel and therefore acquires the value of the reactive power in that moment.
Pf	The power factor (inductive or capacitive, positive or negative) is defined in the panel and therefore acquires the value of the power factor in that moment.
0	The active power (positive or negative) or the reactive power (inductive or capacitive, positive or negative) is NOT defined in the panel and therefore acquires a null value.
-1	The power factor (inductive or capacitive, positive or negative) is NOT defined in the panel.

16.3.2. 3 Phase 3 Wire System

In the electrical systems distributed without neutral, the phase voltages and the power factors and phase $\cos \varphi$ lose importance. Only the phase to phase voltages, the phase currents and the total powers remain defined.

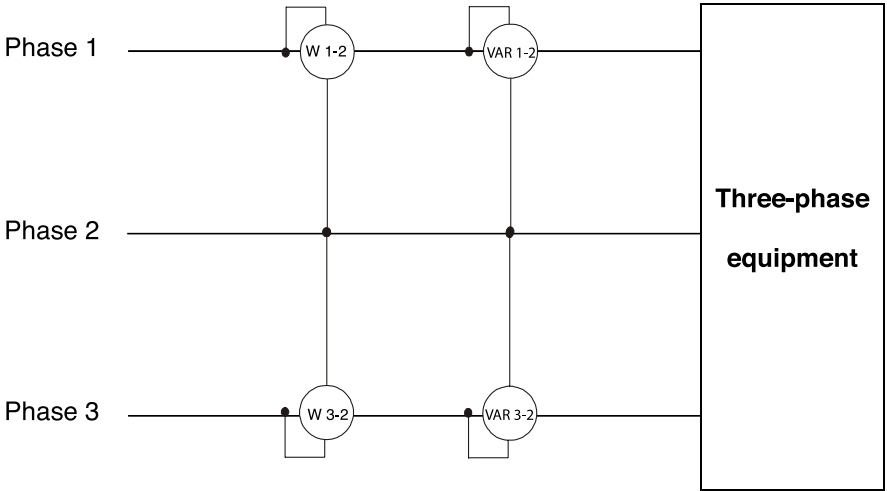

In this case the potential of one of the three phases (for example, phase 2) is taken on as reference potential. The total values of the active, reactive and apparent power are expressed as sum of the indications of the couples of Wattmeters, VARmeters and VAmeters.

$$P_{TOT} = W_{1-2} + W_{3-2}$$

$$Q_{TOT} = VAR_{1-2} + VAR_{3-2}$$

$$S_{TOT} = \sqrt{(W_{1-2} + W_{3-2})^2 + (VAR_{1-2} + VAR_{3-2})^2}$$

16.4. MEASURING METHOD: OUTLINES

The instrument is able to measure: voltages, currents, active powers, inductive and capacitive reactive powers, apparent powers, inductive and capacitive power factors, analog or impulse parameters. All these parameters are analyzed in a digital way: for each phase (voltage and current), 6 x 128 samples are acquired on a module of 16 x 20ms, repeated for the three phases.

16.4.1. Integration periods

The storage of all the data would require a huge amount of memory.

Therefore, we've tried to find out a storage method that compresses the information to be memorized, while still providing a significant amount of data.

The chosen method is that of integration. After a certain period called the "integration period", which can be set from 5 seconds to 60 minutes, the instrument extracts from the sampled values the following:

- Minimum value of the parameter during the integration period (harmonics excluded)
- Medium value of the parameter (intended as arithmetic average of all the values registered during the integration period)
- Maximum value of the parameter during the integration period (harmonics excluded)

Only this information (repeated for each parameter to be memorized) is saved in the memory along with starting time and date of the integration period.

Once these data are memorized, the instrument restarts to take measurements for a new period.

16.4.2. Power factor calculations

According to the standards in force, the medium power factor can't be calculated as average of the instantaneous power factors. It must be obtained from the medium values of active and reactive power.

Each single medium power factor (of phase or total) is therefore calculated, at the end of each integration period, on the medium value of the corresponding powers independently on the fact that they must be registered or not.

Besides, for a better analysis of the type of load present on the line and in order to have terms of comparison when studying the invoicing of the low $\cos\phi$, the values of inductive and capacitive $\cos\phi$ are treated as independent parameters.

Visit www.Amprobe.com for

- Catalog
- Application notes
- Product specifications
- User manuals



Please Recycle