

Dish Network Set-Ups

Stored in Super Buddy Meter

Select Service	Select System	Select LNB	Meter Automatically Selects Switch	LNB Soft Keys			
				LNB 1	LNB 2	LNB 3	LNB 4
Dish Network	Dish 1000	Dish 1000	DP Plus or DP 34	119	110	129	-----
		Dish 1000 / 61.5	DP Plus or DP 44	119	110	129	61.5
		Dish 1000 / 148	DP Plus or DP 44	119	110	129	148
Dish Pro Plus	Dish Pro Plus	DP Plus / Twin	DPP Twin	119	110	-----	-----
		DP Plus / 61.5	Dp Plus	119	110	61.5	-----
		DP Plus / 105	Dp Plus	119	110	105	-----
		DP Plus / 121	Dp Plus	119	110	121	-----
		DP Plus / 129	Dp Plus	119	110	129	-----
		DP Plus / 148	Dp Plus	119	110	148	-----
Dish Pro	Dish Pro	Dp Twin	DP Twin	119	110	-----	-----
		Dish 500 / 61.5	DP 34	119	110	61.5	-----
		Dish 500 / 129	DP 34	119	110	129	-----
		Dish 500 / 148	DP 34	119	110	148	-----
Dish 500+	Dish 500+	DP 34	119	110	118.7	-----	
Dish 1000+	Dish 1000+	DPP 44	119	110	129	118.7	
Dish 1000.2	Dish 1000.2	Dish 1000.2	1000.2 LNB	119	110	129	-----
		Dish 1000.2 / 61.5	1000.2 LNB	119	110	129	61.5
		Dish 1000.2 / 105	1000.2 LNB	119	110	129	105
		Dish 1000.2 / 121	1000.2 LNB	119	110	129	121
		Dish 1000.2 / 148	1000.2 LNB	119	110	129	148
Dish 500 Legacy	Dish 500 Legacy	Twin Legacy	Twin Legacy	119	110	-----	-----
		Legacy / sw21	sw21	119	110	-----	-----
		Legacy / sw42	sw42	119	110	-----	-----
		Leg / sw64 61.5	sw64	119	110	61.5	-----
		Leg / sw64 148	sw64	119	110	148	-----
Super Dish	Super Dish	Super 105	Dp 34	119	110	105	-----
		Super 105 / 61.5	DPP 44	119	110	61.5	105
		Super 105 / 129	DPP 44	119	110	129	105
		Super 105 / 148	DPP 44	119	110	148	105
		Super 121	Dp 34	119	110	121	-----
		Super 121 / 61.5	DPP 44	119	110	61.5	121
		Super 121 / 129	DPP 44	119	110	129	121
		Super 121 / 148	DPP 44	119	110	148	121
		2-Dish 121 / 105	DPP 44	119	110	121	105
DP Single	DP Single	Orbital 61.5	none	61.5	-----	-----	-----
		Orbital 110	none	110	-----	-----	-----
		Orbital 119	none	119	-----	-----	-----
		Orbital 129	none	129	-----	-----	-----
		Orbital 148	none	148	-----	-----	-----
FSS Single	FSS Single	FSS 105	none	105	-----	-----	-----
		FSS 118.7	none	118.7	-----	-----	-----
		FSS 121	none	121	-----	-----	-----
Legacy Single	Legacy Single	Orbital 61.5	none	61.5	-----	-----	-----
		Orbital 110	none	110	-----	-----	-----
		Orbital 119	none	119	-----	-----	-----
		Orbital 129	none	129	-----	-----	-----
		Orbital 148	none	148	-----	-----	-----

After powering up the Super Buddy and pressing the SYST soft key, the selections shown above are available. Select the appropriate service, system, and LNB for your application. To make selections, arrow up or down to the item to change and press Enter, then arrow up or down to the desired option and press Enter. Press EXIT or DONE to return to the RUN mode. The switch type is automatically entered based on your SYSTEM and LNB selection. After choosing the System and LNB type, connect the Super Buddy to your LNB. Press the LNB soft key to power the LNBs. For multi-sat/LNB systems, use the LNB soft key to power and toggle between the different sats/LNBs. The satellite associated with each LNB selection is shown in the upper left corner of the Super Buddy's LCD screen. For single-sat/LNB systems, use the left/right arrow buttons to select different satellites.