

Astronaut CL

Quick Start Guide

System No.:
ASTRO-CLW001
ASTRO-CLD001
ASTRO-CLR001



Cetacea Sound

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Technical Audio for the 21st Century Classroom

Astronaut CL Speaker

- TWIST**
Twist right to install /
left to uninstall
- ON / OFF LED**
Green when on
- A – LINE INPUT**
Stereo/mono, 3.5 mm mini-jack
- B – LINE INPUT**
Stereo/mono, 3.5 mm mini-jack
- C – LINE INPUT**
Stereo/mono, 3.5 mm mini-jack
- DC POWER**
External power supply connector




READ BEFORE INSTALLING


For in-depth safety, installation, and operational procedures, read or download the Astronaut CL Owner's

ASTRONAUT™ CL SYSTEM CONTENTS


Astronaut CL Speaker

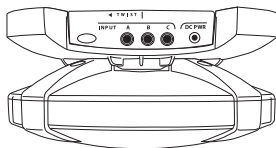

Ceiling Mount Kit

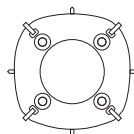


Mounting Bracket

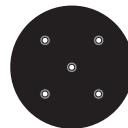

Ceiling Plate




 Eye Bolt



Aluminum Bolts (4)

Power Supply

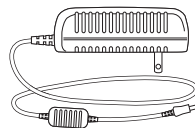

NOTE

Power supply style will vary depending on the system number you ordered.

INSTALL CEILING BRACKET

Recommended Tools



- Phillips head screwdriver
- Hand drill with ¼" and ½" bits
- Measuring tape

FOR INSTALLATION TO FALSE CEILINGS

1. Remove a ceiling tile and set it on a firm surface.
2. Use the ceiling plate as a guide to mark 5 holes **A** & **B**.
3. Drill or tap ¼" holes for the 4 aluminium bolts **A**. Drill the ½" center hole **B** for the security eye bolt (optional).
4. If cable will be routed above the ceiling, cut a 1" hole about 6" away from the front of the speaker (optional).
5. Fasten the ceiling plate **C** to the top and ceiling bracket **D** to the bottom of the tile using the provided 4 aluminium bolts.

NOTE: FOR HARD SURFACE CEILINGS


Ceiling plate **C** is not required for solid ceiling installations. Modification to the bracket **D** is required. Refer to the Owner's

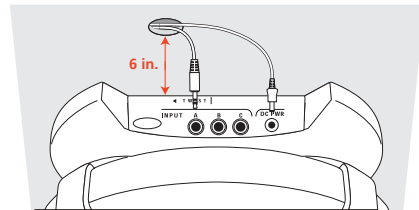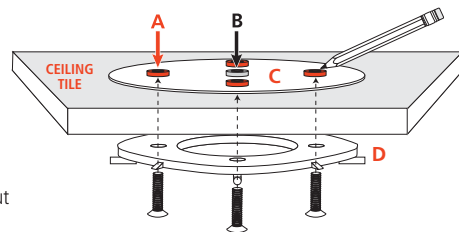


MOUNT THE ASTRONAUT SPEAKER

Speaker Location

The Astronaut is very forgiving and does not need to be in the center of the room for the best sound quality. Typically, installers choose a location near the projector in order to share the same power source in the ceiling.

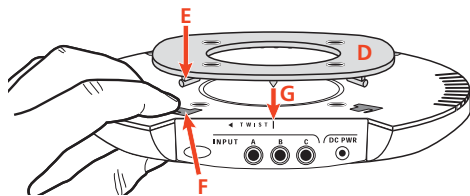

1. Mount the Astronaut speaker to the ceiling bracket **D**. Use a finger to locate the first peg **E**. Align this peg with one of the four holes **F** on the speaker base. All other pegs will fall into place accordingly. Speaker will be flush to the ceiling.
2. Twist the speaker slightly to the right until you hear it lock. Once locked, the ceiling bracket pointer **G** will line up with the line-guide on the speaker lens.

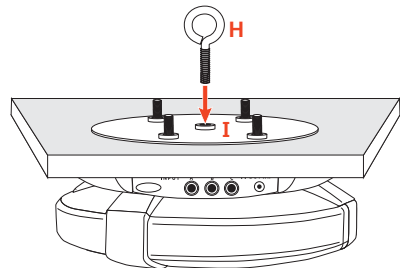

3. Once the speaker is attached to the ceiling bracket, screw the eyebolt **H** through the top of the ceiling plate **I** and into the Astronaut base.

CONNECT POWER & AUDIO SOURCES

Volume Control

When using a variable output source like a projector, control the volume level at the source. When using a fixed audio output, adjust the volume with an in-line volume control or mixer (sold separately).

FIRST—CONNECT A/V EQUIPMENT


The Astronaut has a built-in 3-channel mixer that accepts up to 3 simultaneous devices (A, B, C).

Common Sources

Projector	Microphone	DVD / VHS
CD / iPod® / iPad®	Interactive Whiteboard	Computer

SECOND—CONNECT POWER

Connect the power supply, low-power barrel connector **J** into the speaker. Plugging / unplugging this connector will turn the speaker on and off.

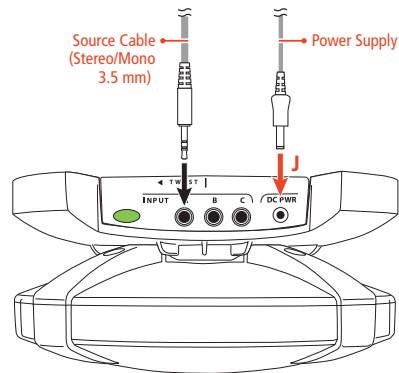

CAUTION Do not connect speaker to power until ceiling installation is completed and at least one source cable is connected.