


# ThermaCAM™ QuickView

Program version 2.0

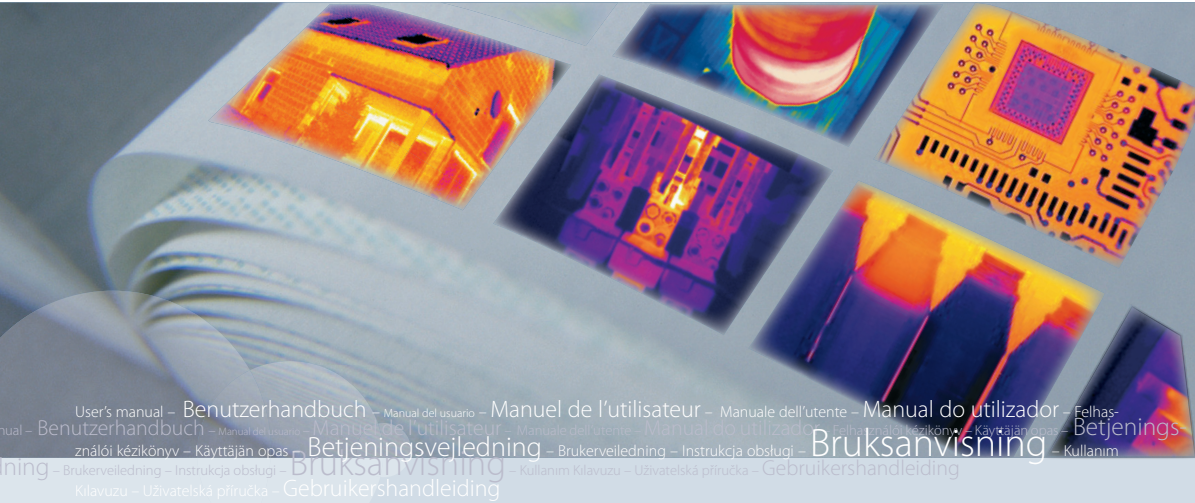

User's manual – Benutzerhandbuch – Manual del usuario – Manuel de l'utilisateur – Manuale dell'utente – Manual do utilizador – Felhasználói kézikönyv – Käyttöäjan opas – Betjeningsvejledning – Brukerveiledning – Instrukcja obsługi – Bruksanvisning – Kullanim Kilavuzu – Uživatelská příručka – Gebruikershandleiding

## User's manual

Publ. No.	1558344
Revision	a139
Language	English (EN)
Issue date	January 25, 2006



<b>Notice to user</b>	<b>1</b>
<b>Installation</b>	<b>2</b>
<b>Supported file formats</b>	<b>3</b>
<b>Workflow</b>	<b>4</b>
<b>Window elements &amp; toolbar buttons</b>	<b>5</b>
<b>Connecting the camera</b>	<b>6</b>
<b>Viewing images</b>	<b>7</b>
<b>Handling files</b>	<b>8</b>
<b>Analyzing images</b>	<b>9</b>
<b>Adding &amp; editing image descriptions</b>	<b>10</b>
<b>Creating reports</b>	<b>11</b>
<b>Troubleshooting</b>	<b>12</b>
<b>About FLIR Systems</b>	<b>13</b>



---

# ThermaCAM™

## QuickView

*User's manual*



**205 Westwood Ave  
Long Branch, NJ 07740  
1-877-742-TEST (8378)  
Fax: (732) 222-7088  
salesteam@Tequipment.NET**



---

### **Legal disclaimer**

All products manufactured by FLIR Systems are warranted against defective materials and workmanship for a period of one (1) year from the delivery date of the original purchase, provided such products have been under normal storage, use and service, and in accordance with FLIR Systems instruction.

All products not manufactured by FLIR Systems included in systems delivered by FLIR Systems to the original purchaser carry the warranty, if any, of the particular supplier only and FLIR Systems has no responsibility whatsoever for such products.

The warranty extends only to the original purchaser and is not transferable. It is not applicable to any product which has been subjected to misuse, neglect, accident or abnormal conditions of operation. Expendable parts are excluded from the warranty.

In the case of a defect in a product covered by this warranty the product must not be further used in order to prevent additional damage. The purchaser shall promptly report any defect to FLIR Systems or this warranty will not apply.

FLIR Systems will, at its option, repair or replace any such defective product free of charge if, upon inspection, it proves to be defective in material or workmanship and provided that it is returned to FLIR Systems within the said one-year period.

FLIR Systems has no other obligation or liability for defects than those set forth above.

No other warranty is expressed or implied. FLIR Systems specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

FLIR Systems shall not be liable for any direct, indirect, special, incidental or consequential loss or damage, whether based on contract, tort or any other legal theory.

### **Copyright**

© FLIR Systems, 2006. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

This manual must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

### **Quality assurance**

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore we reserve the right to make changes and improvements on any of the products described in this manual without prior notice.

### **Patents**

This product is protected by patents, design patents, patents pending, or design patents pending.

---

# Table of contents

<b>1</b>	<b>Notice to user</b> .....	1
<b>2</b>	<b>Installation</b> .....	3
2.1	Software requirements .....	3
2.2	Installation of ThermaCAM™ QuickView .....	4
2.3	Installation of USB & FireWire drivers .....	5
<b>3</b>	<b>Supported file formats</b> .....	7
<b>4</b>	<b>Workflow</b> .....	8
<b>5</b>	<b>Window elements &amp; toolbar buttons</b> .....	11
5.1	Window elements .....	11
5.2	Main toolbar buttons .....	12
5.3	Image toolbar buttons .....	13
<b>6</b>	<b>Connecting the camera</b> .....	15
6.1	Connecting the camera: InfraCAM & BCAM cameras .....	15
6.2	Connecting the camera: E & B series cameras .....	16
6.3	Connecting the camera: P & S series cameras .....	17
<b>7</b>	<b>Viewing images</b> .....	19
7.1	Changing view settings .....	19
7.2	Changing zoom factor .....	20
7.3	Rotating images .....	21
7.4	Changing palette .....	22
<b>8</b>	<b>Handling files</b> .....	23
8.1	Moving images .....	23
8.1.1	Moving images from your camera to your computer .....	23
8.1.2	Moving images on your computer .....	24
8.2	Copying images .....	25
8.3	Saving images to a different file destination .....	26
8.4	Cutting & pasting images .....	27
8.5	Deleting images .....	28
8.6	Renaming images .....	29
8.7	Sorting images .....	30
8.8	Printing images .....	31
8.9	Sending images by e-mail .....	32
8.10	Sending images to ThermaCAM™ Reporter .....	33
<b>9</b>	<b>Analyzing images</b> .....	35
9.1	Using the Flying Spot tool .....	36
9.2	Creating a spot .....	37
9.3	Creating an area .....	38
9.4	Creating an isotherm .....	39
9.5	Changing isotherm levels .....	40
9.6	Moving a spot or an area .....	41
9.7	Deleting a spot or an area .....	42
9.8	Deleting an isotherm .....	43
9.9	Changing temperature levels .....	44

---

9.10	Changing object parameters .....	45
9.11	Auto-adjusting an image .....	46
<b>10</b>	<b>Adding &amp; editing image descriptions .....</b>	<b>47</b>
<b>11</b>	<b>Creating reports .....</b>	<b>49</b>
<b>12</b>	<b>Troubleshooting .....</b>	<b>51</b>
12.1	Making sure that the camera has the correct software version .....	52
12.2	Restarting the camera .....	53
12.3	Troubleshooting connection problems .....	54
12.4	Giving a user Local Administrator Rights .....	55
12.5	Giving a user rights to install and uninstall device drivers .....	56
12.6	Troubleshooting password-protected screensaver problems .....	57
12.7	Showing camera information .....	58
<b>13</b>	<b>About FLIR Systems .....</b>	<b>59</b>
13.1	More than just an infrared camera .....	60
13.2	Sharing our knowledge .....	60
13.3	Supporting our customers .....	60
13.4	A few images from our facilities .....	61
	<b>Index .....</b>	<b>63</b>





























































































































































