

# TS<sup>®</sup>42DLX Test Set Users Card

## Talk Mode

If talk battery is present, the test set goes off-hook.

## Line Voltage Test

In Monitor mode, press **TEST**.

### Low Voltage

0 Vdc - 2 Vdc: LO LED lights for 5 seconds.

2 Vdc - 42 Vdc: LO LED flashes for 5 seconds.

### Normal Voltage

42 Vdc - 53 Vdc: LO and HI LEDs flash once.

### High Voltage

53 Vdc - 140 Vdc: HI LED flashes for 5 seconds.

>140 Vdc - HI LED lights for 5 seconds.

## Dial Stored Number

While off-hook, press **RCL** then the number key (0-9) where number is stored.

## Loop Current Test

Go off hook and press **TEST**. One of the LO mA LEDs flashes for 5 seconds if the loop current is below 23 mA. The LED lights solid if the loop current is above 23 mA.

# TS<sup>®</sup>42DLX Test Set Users Card

## Program Speed Dial Numbers

In Monitor mode, press **RCL**. Enter the number to be stored. Press **STORE/PROG** then press the number of the memory location (0-9). The confirmation tone sounds.

## Two-Way Speakerphone

While off-hook, press **SPKR** to activate. Press **SPKR** again to deactivate. In an extremely noisy environment press **MUTE** to put in amplified speaker mode. This will help avoid intermittent interruption of the person speaking at the other end of the line. Press **MUTE** again to unmute.

## Receive-Only Mode

To enable/disable:

- 1 Put the test set in Monitor mode.
- 2 Press **STORE/PROG**.
- 3 Press **MUTE**. The test set chimes to confirm the selection.



205 Westwood Ave  
Long Branch, NJ 07740  
1-877-742-TEST (8378)  
Fax: (732) 222-7088  
salesteam@Tequipment.NET