

80 Series V Multimeter Quick Reference Guide



⚠ See Users Manual for "Safety Information" and complete operating information.

Fuse Test


Test Lead Alert

🎵 + LEAD = 🔌 OK


🎵 + LEAD = ⚠

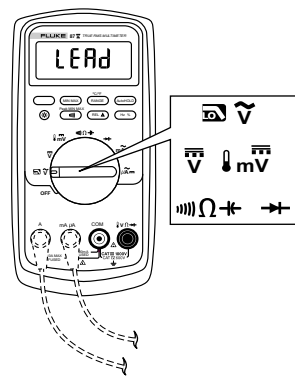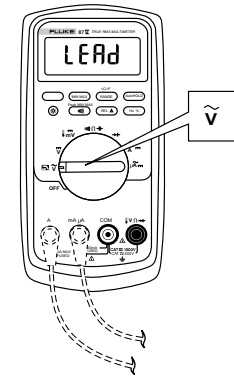


Voltage $\tilde{V}$ $\bar{V}$ mV

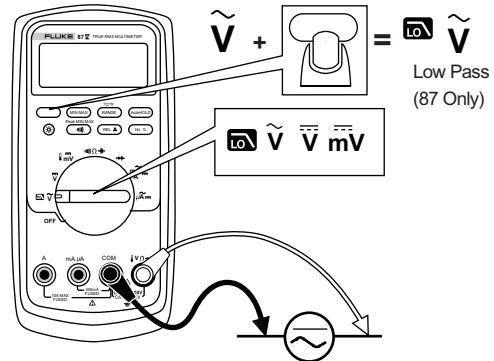


Temperature (87 Only) $\downarrow$

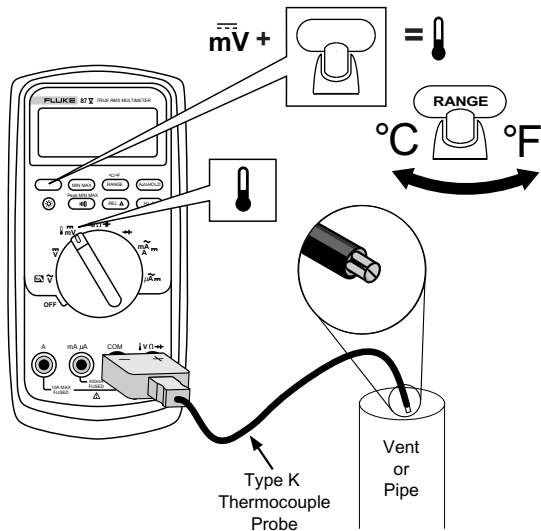


Resistance Ω

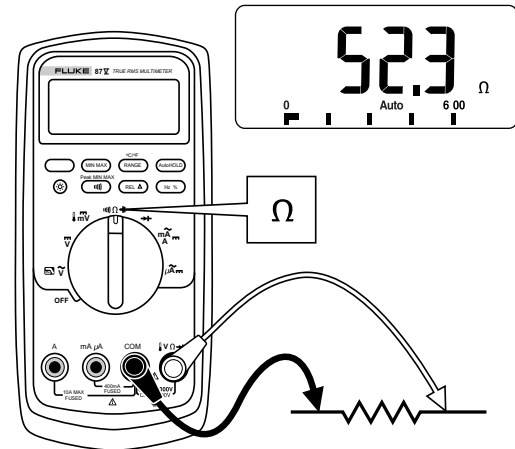


Conductance nS

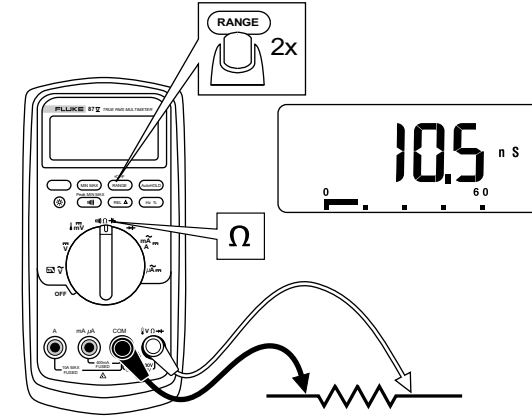


Continuity $\mathcal{M}$

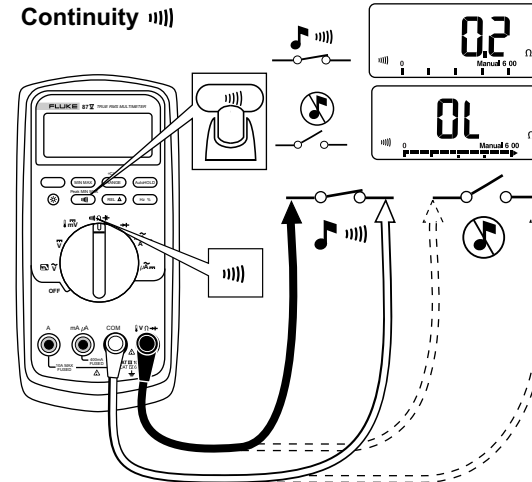





Capacitance $\text{--}\text{--}\text{--}$

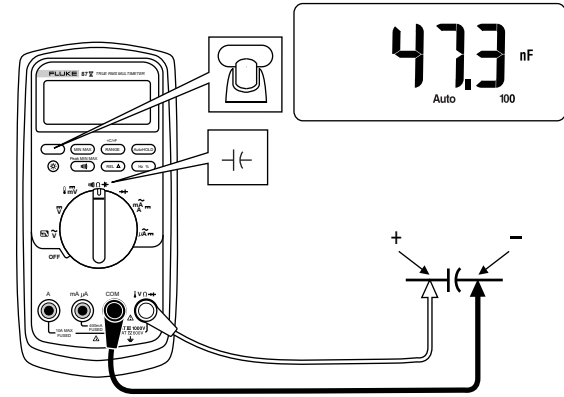


Current $\tilde{A}$, $\bar{A}$, $\mu\tilde{A}$, mA, A, μA

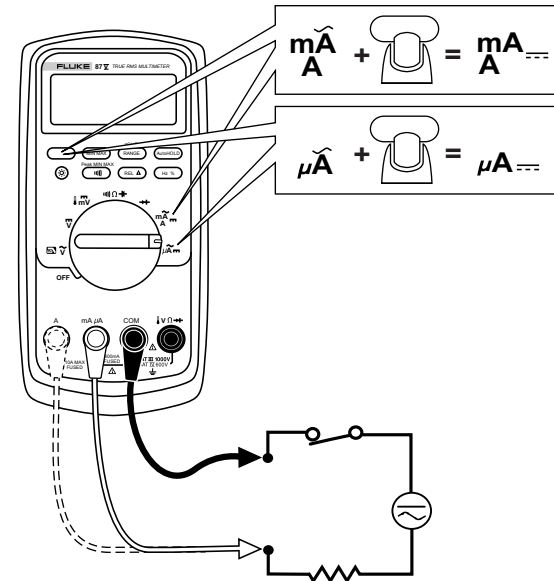


Diode Test →

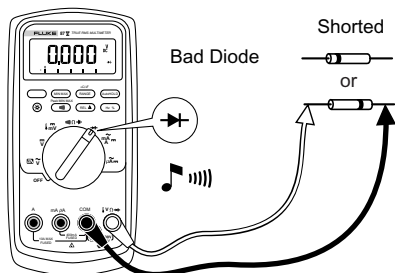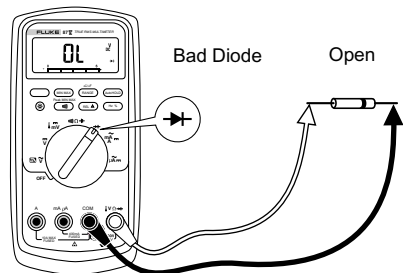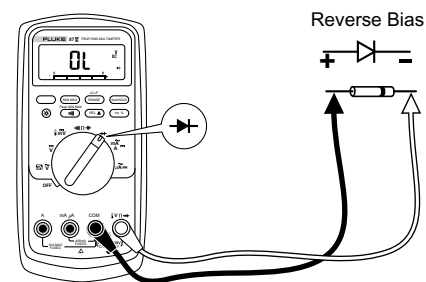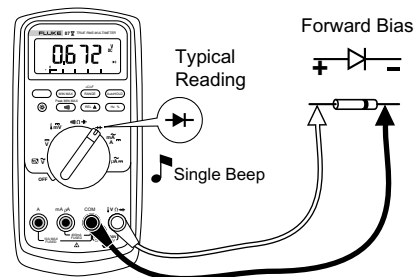


Frequency Hz

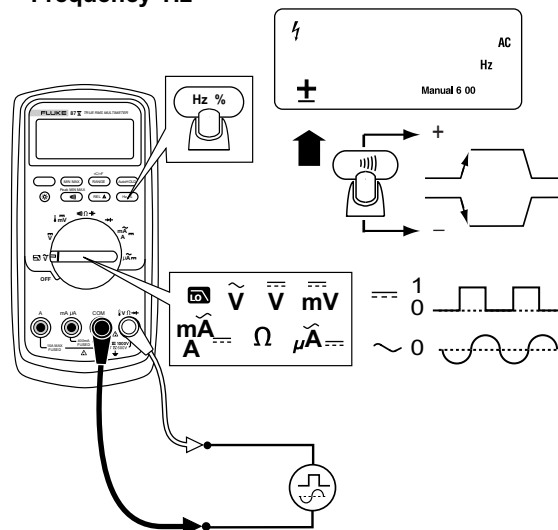


Duty Cycle %

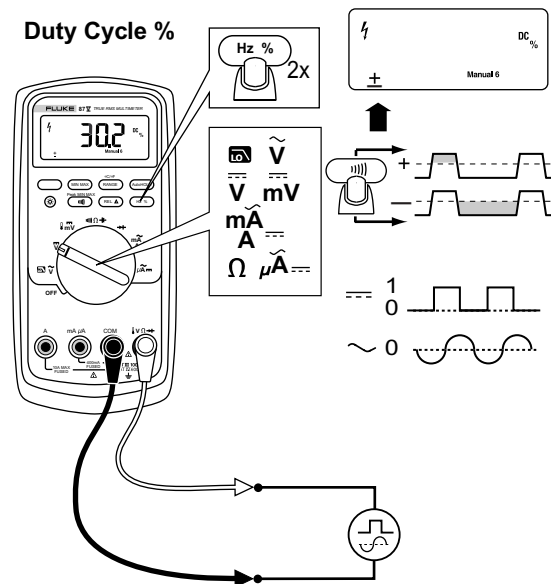


Min, Max, Average MIN MAX

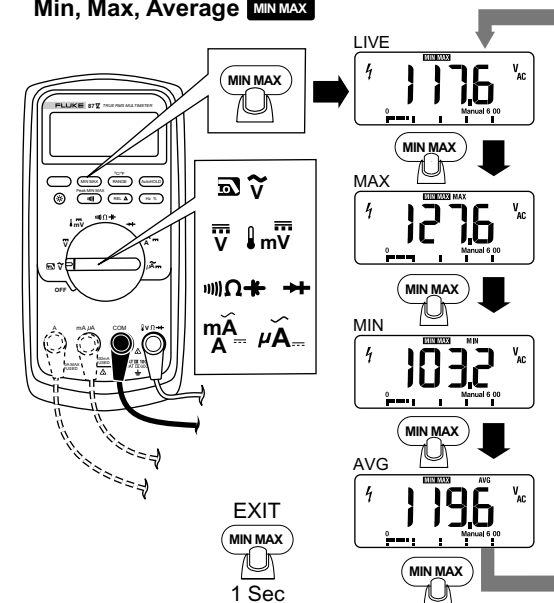


Relative Δ

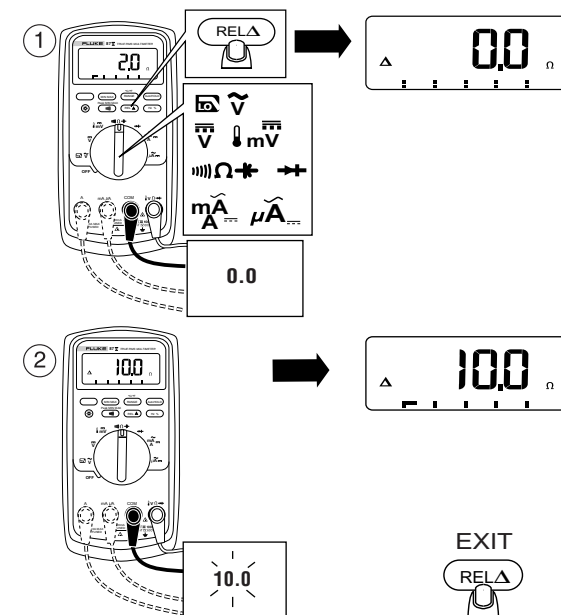

AutoHOLD $\overline{\text{HOLD}}$

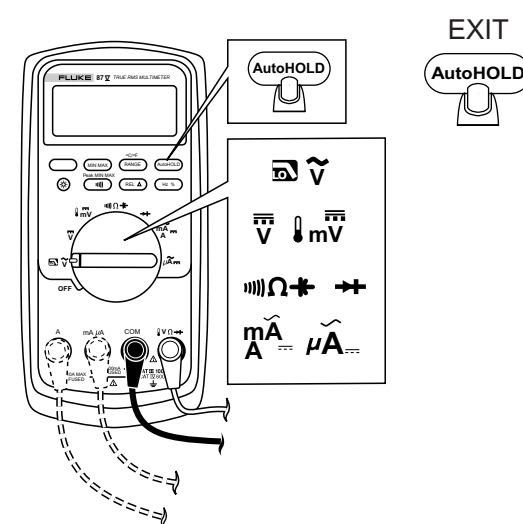

Hi Res Mode (87 Only)

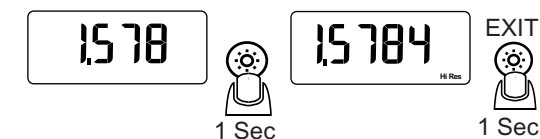

ToolPak

