

80 Series V Multimeter Quick Reference Guide



⚠ See Users Manual for "Safety Information" and complete operating information.

Fuse Test


Test Lead Alert

🎵 + LEAD = 🔌 OK


🎵 + LEAD = ⚠

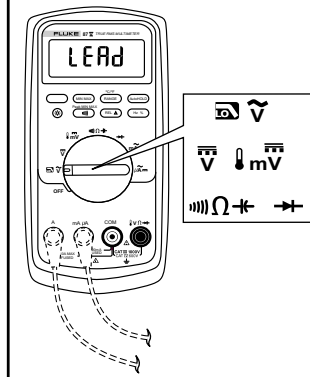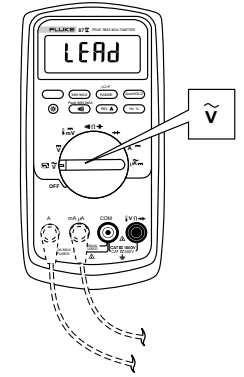


Voltage \tilde{V} \bar{V} mV

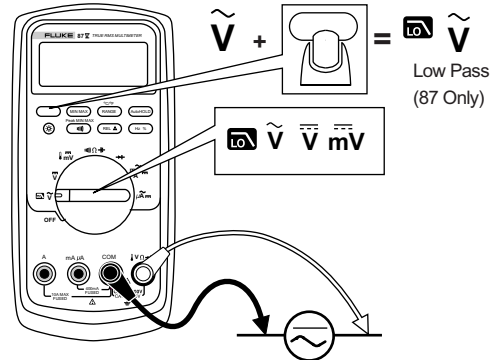


Temperature (87 Only) ↓

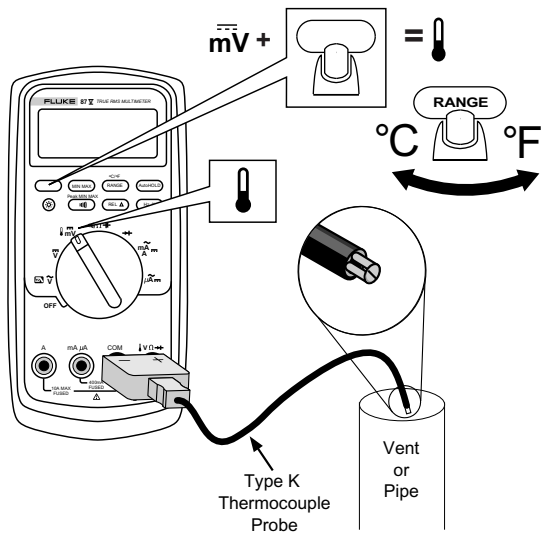


Resistance Ω

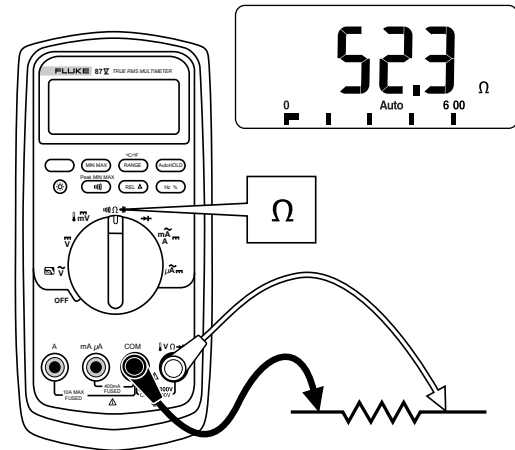


Conductance nS

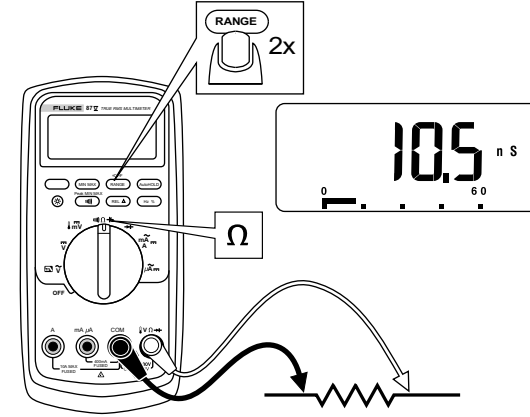


Continuity 🎵

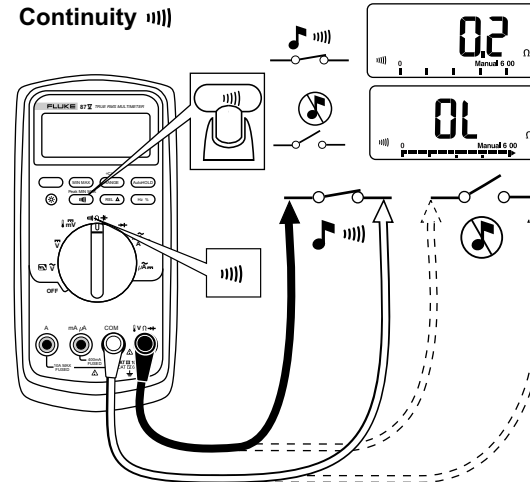

Capacitance \bar{C}

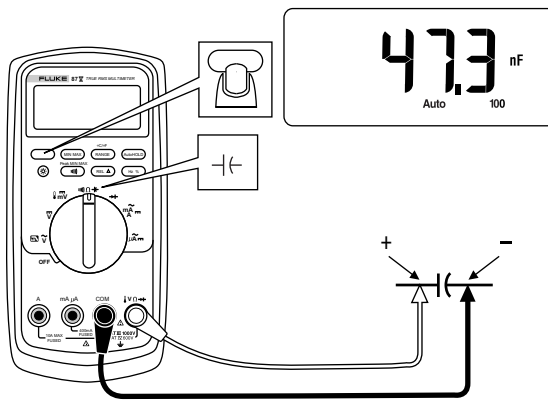





Current \tilde{A} , \bar{A} , $\mu\tilde{A}$, mA, $\mu\bar{A}$

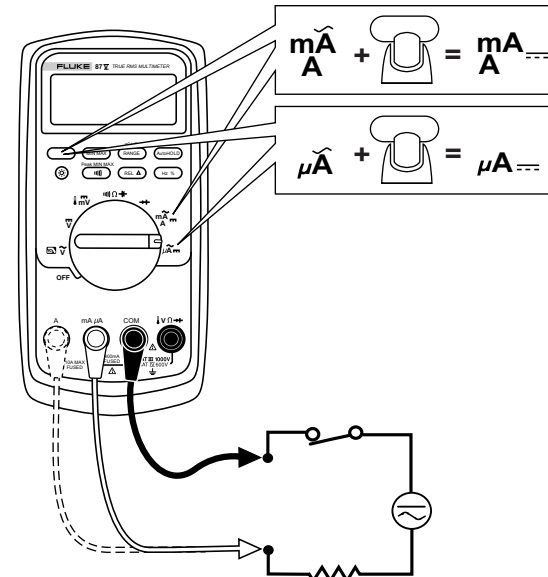




**205 Westwood Ave
Long Branch, NJ 07740
1-877-742-TEST (8378)
Fax: (732) 222-7088
salesteam@Equipment.NET**


Diode Test →

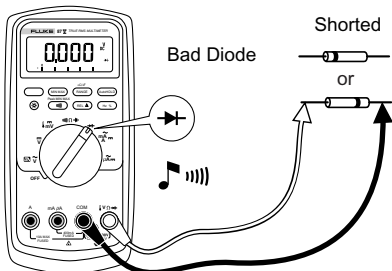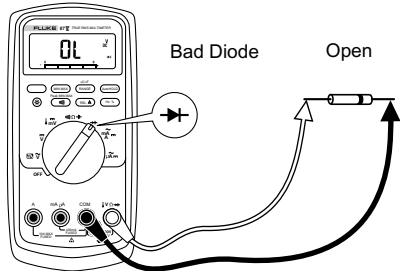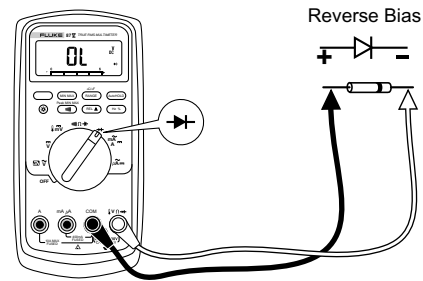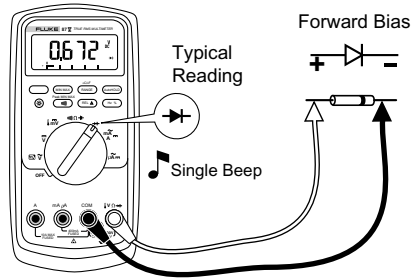


Frequency Hz

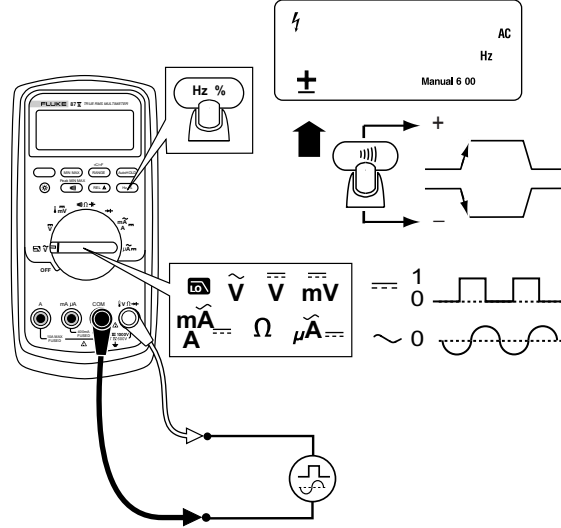


Duty Cycle %

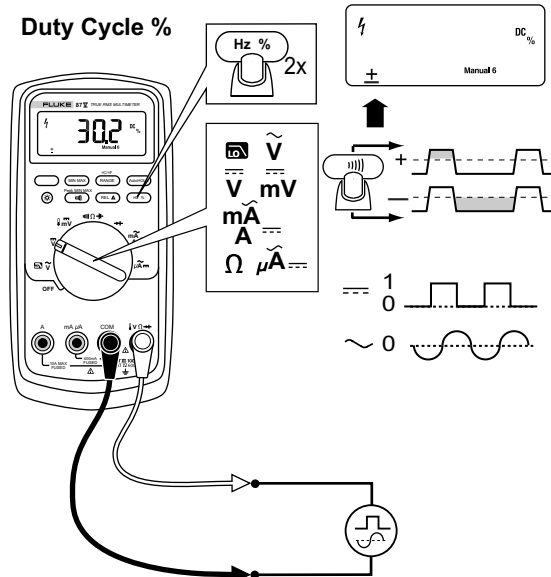


Min, Max, Average MIN MAX

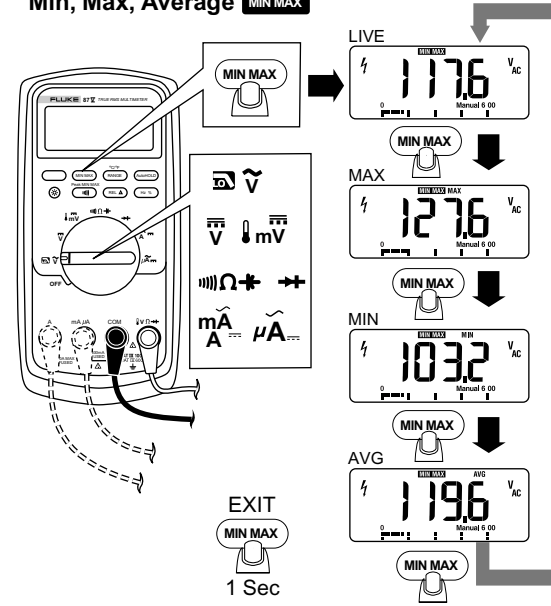


AutoHOLD HOLD

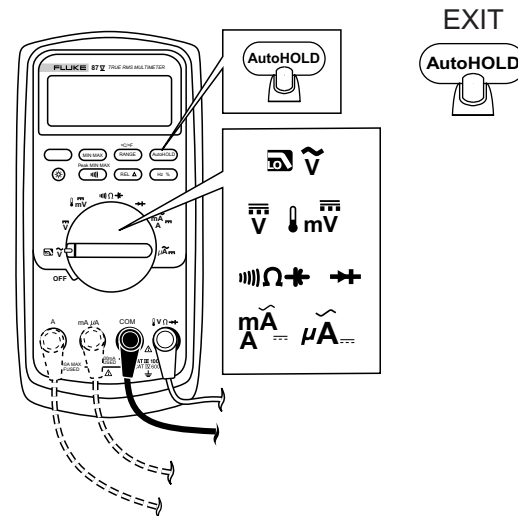

Relative Δ

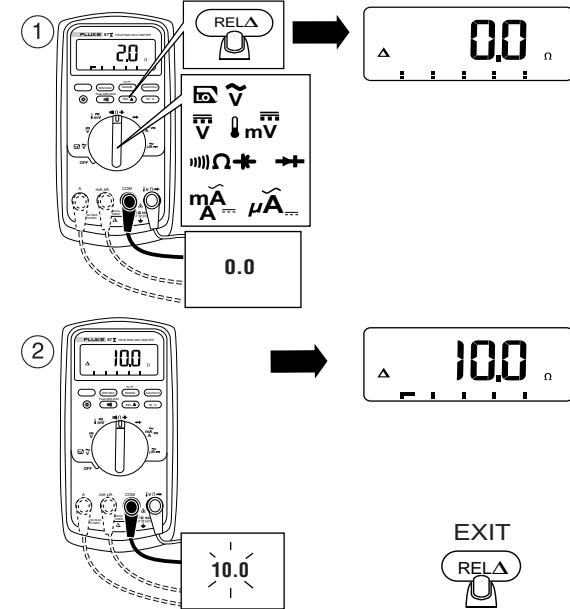

Hi Res Mode (87 Only)

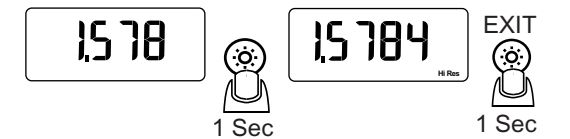

ToolPak

