

VR1710 Voltage Quality Recorder

The CD-ROM, provided with the VR1710 Voltage Quality Recorder, contains the necessary documentation for proper use and operation of the product. If the CD-ROM does not start automatically when inserted into your CD drive, double-click launch.exe on the CD-ROM. If the CD-ROM is damaged or you are unable, for any reason, to access product documentation from the CD-ROM, contact Fluke. Contact information is listed on page 4.

PN 3038796 September 2007 © 2007 Fluke Corporation. All rights reserved. Printed in USA. All product names are trademarks of their respective companies.

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This Fluke product will be free from defects in material and workmanship for one year from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

> Fluke Corporation P.O. Box 9090 Everett, WA 98206-9090 U.S.A.

Fluke Europe B.V. P.O. Box 1186 5602 BD Eindhoven The Netherlands

Visit Fluke's web site at <u>www.fluke.com</u>. Register your Meter at <u>register.fluke.com</u>.

11/99

Safety Information

<u>∧</u> ∧ Warning

To avoid electrical shock or personal injury when using the Recorder, follow these guidelines:

- Read this manual before
 use and follow all safety
 instructions.
- Use the Recorder only as described in this User Manual or the safety features provided by the Recorder may be impaired.
- Before each use, inspect the Recorder for damage. Look for cracks or missing portions of it and the cables. Do not used if damaged.

- The Recorder is a directplug in unit and must be plugged only in applicable and standard sockets.
 Distribution circuits must be fused.
- If there is reason to believe that safe operation is no longer possible, the instrument should be disconnected and secured from unintentional reconnection.
- The Recorder must be opened only by qualified personnel.
- Remove any input signals before cleaning.

≜Caution

To avoid damaging the Recorder, do not use aromatic hydrocarbons or chlorinated solvents for cleaning. These solutions will react with the plastics used in the Recorder.

Contacting Fluke

USA: 1-888-99-FLUKE (1-888-993-5853) Canada: 1-800-36-FLUKE (1-800-363-5853) Europe: +31 402 675 200 Japan: +81-3-3434-0181 Singapore: +65-738-5655 Anywhere in the world: +1-425-446-5500

