



# LAN CABLE HiTESTER 3665-20

Optical/Telecom Measurement



## *Network Construction with One Single Instrument*



**CAT 6**  
Compatible

**Shield  
Check**

### *Wiremap*

Detect Split Pairs with Wiring Check

### *Cable Length*

Get NVP-Enhanced Measurement Accuracy

### *Direction*

Identify Up to 21 Cable Destinations



ISO 9001  
JMI-0216




ISO 14001  
JQA-E-90091

**Extremely Intuitive**

Just connect a cable, and press the TEST button

**Wide LCD Screen**

Check all parameters such as wiremap, direction and cable length at a glance.

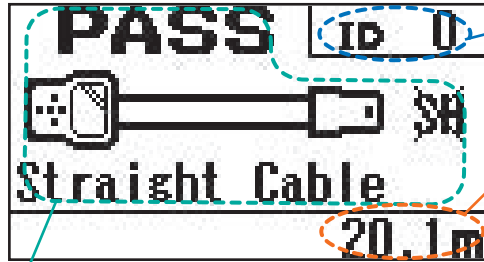

**1 Wiremap (Wiring Status)**

**2 Direction (ID No.)**

Identify the terminator ID here.

**3 Cable Length**

Obtain a record of the entire length of the cable, or up to the point where the cable is damaged.


Large PASS/FAIL display, cable type, reason for cable failure and shield condition.

# 1 Wiremap

For wiring confirmation and locating broken wires after installation. Quick **PASS/FAIL** reading helps you complete your work faster.

## PASS Display Examples


Both straight-through and crossover cables (10/100BASE, 1000BASE-T and 1000BASE-TX) can be checked.

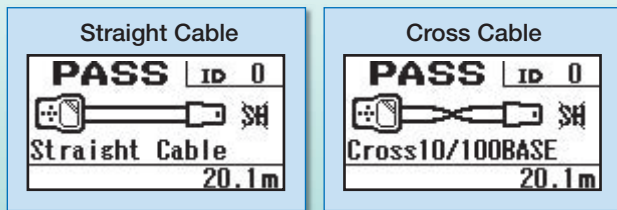

**Fully Compatible to CAT6 LAN Cables**

**Super-sensitive Detection**

**Detect the existence of shields or check for shield integrity.**

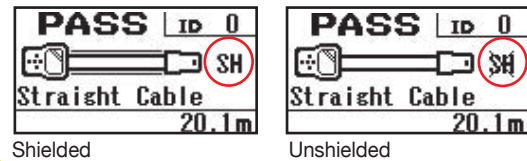


## FAIL Display Examples

<p><b>Reversed</b></p> <p>Pins 1 and 2 are reversed.</p>	<p><b>Transposed</b></p> <p>Pins 3 and 6 have been incorrectly paired with Pins 4 and 5.</p>	<p><b>Open</b></p> <p>Pin 1 is open at a distance 7 meters from the LAN cable tester.</p>	<p><b>Short</b></p> <p>Pins 1 and 2 are shorted at a distance 10 meters from the LAN cable tester.</p>	<p><b>Split Pair</b></p> <p>A very common mistake - twist pairs Pins 3+6, and Pins 4+5, have been incorrectly connected.</p>
--	--	---	--	--

**Caution!**


Can you find **split pairs?**

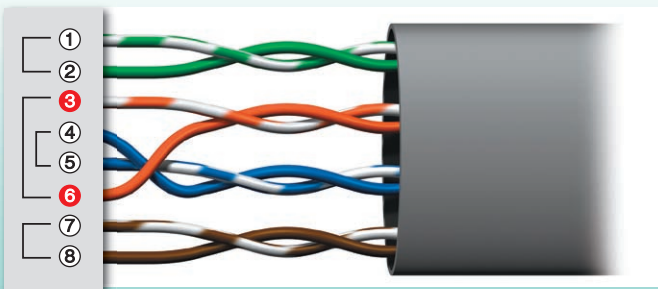

**PASS**

### Proper Wiring

LAN cable wires should be connected as shown in the diagram above, such that Pins 3 and 6 are twisted.

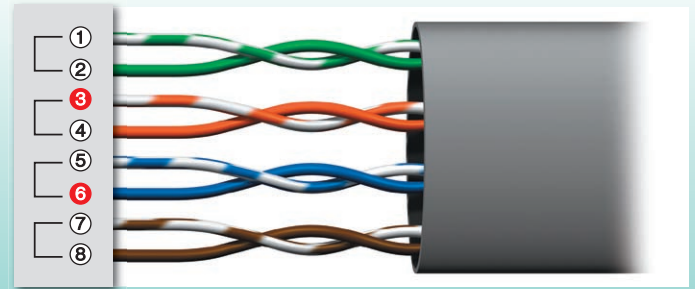

**FAIL**


### Split Pair

A "Split Pair" is detected when Pins 3 and 6 are not twisted and paired together as shown above.

## 2 Direction

Locate up to 21 unique cable destinations.

Have you ever had trouble installing additional cables?

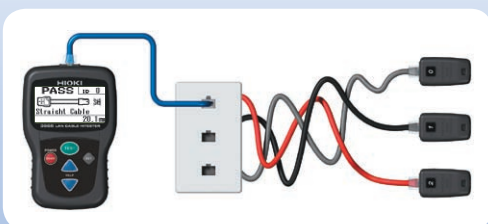

Take advantage of the conveniences offered by the tester's capabilities to check wiring while confirming multiple cable destinations.

**Increased Efficiency!**

You will never need to go back and forth again just to change the terminators.

Up to 21 terminators can be connected (additional terminators sold separately.) Convenient for confirming the connection destinations of multiple cables.

## 3 Cable Length

Measure for cable length and detect the location of broken or short-circuited wires.

The NVP\* setting is a cable-length compensation function that enhances the accuracy of cable length measurements.

Accuracy with NVP activated:

■  $\pm 4\%$  rdg.  $\pm 1\text{m}$

(vs. previous HIOKI model: 15% rdg.  $\pm 1\text{m}$ )

 
**Increased Precision!**



\* NVP (Nominal Velocity of Propagation) is the ratio of the speed of a signal in the cable relative to the speed of light in a vacuum.


NVP differs according to the type of cable and the manner in which the wire pairs are twisted, so measurement accuracy can be enhanced by setting the NVP value for the particular type of cable to be measured.

### ■ Activating the NVP function is as simple as 1-2-3




#### Preparation

Prepare a reference cable using a known length of the same type as that to be measured (at least 100-meter length recommended).

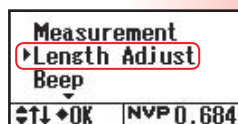


① On the Settings screen, select "Length Adjust".

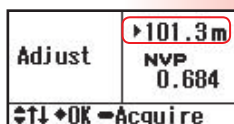

② Press the TEST button to measure the (already known) length of the reference cable.



③ Calibrate the display to the measured reference cable.

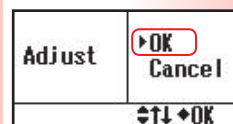

Setting Finished

## How Can Split Pairs Affect the Network?

- ◆ Communication speed can be suppressed - 100BASE signals may reach only 10BASE speeds.
- ◆ Excessive communication errors - data transfer may be intermittent or completely inhibited.
- ◆ Cables miswired in this way are more susceptible to electrical noise.

Split pairs appear to be properly connected to the untrained eye, and cannot be detected with continuity testing.

To properly check LAN cable wiring, a tester capable of detecting split pairs is indispensable.

**OK!**

The HIOKI 3665-20 can do the job for you properly and accurately by also detecting split pairs.

## Specifications (@ 23 ±5 °C, 80% RH or less, non-condensating, with battery indicator unlit)

Measurable cables	Twisted-pair cable 100 Ω characteristic impedance, shielded and unshielded, CAT 3, 4, 5, 5e and 6
Compatible connectors	RJ-45 plugs
Measurement Items	
[Wiremap]	Wiring condition and shielding can be confirmed using the HIOKI TERMINATOR 9690 Detectable errors: open, short, reversed, transposed, split pairs and other miswiring
[Cable Length]	Measurable lengths: 2 to 300 m, 6.6 to 984 ft Measurement accuracy: ±4% rdg. ±1 m, ±4% rdg. ±3.3 ft Display resolution: 0.1 m
[Destination]	Up to 21 cables can be identified using the supplied TERMINATOR 9690 and optional Models 9690-01 to 9690-04 to test multiple cables simultaneously
Display	128 × 64 dot matrix LCD (with backlight)
Functions	Auto Backlight: pressing a button turns the backlight on (it turns off automatically after about 20 seconds) Beeper: sounds when pressing buttons and when measurement results are displayed Energy-Saving Mode: enter into energy-saving mode after measurement (and resume when the TEST button is pressed) Auto Power Save: the 3665-20 turns off automatically about 10 minutes after the last button press Battery Check: Battery indicator blinks when voltage falls below 2.4 V Unit Switch: Select between meters or feet
Compliance Standards	Safety Standard: EN61010-1:2001 Pollution Level 2 EMC Standard: EN61326:1997 + A1:1998 + A2:2001 + A3:2003
Allowable Input	3.3 V peak (between RJ-45 pins)
Operating Temperature & Humidity	0 to 40 °C, 80% RH or less, non-condensating
Storage Temperature & Humidity	-10 to 50 °C, 80% RH or less, non-condensating
Power Source	Two AA-size (LR6) alkaline batteries
Maximum Power Consumption	1.4 VA
Operating Time	Approx. 50 hours (measuring once per minute)
Size & Weight	Approx. 85 W × 130 H × 33 D mm, approx. 160 g



## LAN CABLE HiTESTER 3665-20

(Includes TERMINATOR 9690, CARRYING CASE)

### Supplied Accessories

TERMINATOR 9690  
CARRYING CASE  
(Stores the HiTESTER 3665 and TERMINATORS 9690)



TERMINATOR 9690



CARRYING CASE

### Options

TERMINATOR 9690-01 (IDs 1 to 5)  
TERMINATOR 9690-02 (IDs 6 to 10)  
TERMINATOR 9690-03 (IDs 11 to 15)  
TERMINATOR 9690-04 (IDs 16 to 20)  
CARRYING CASE 9249 (stores the 3665-20, 9690 and 9628 together)  
LAN CABLE 9628 (1 m long, with RJ-45 plugs)



TERMINATOR 9690-01



CARRYING CASE 9249  
(for storing everything together)



LAN CABLE 9628

**HIOKI**  
HIOKI E. E. CORPORATION

**T**equipment  
.NET



205 Westwood Ave  
Long Branch, NJ 07740  
1-877-742-TEST (8378)  
Fax: (732) 222-7088  
salesteam@Tequipment.NET