

Frequency Ordering Chart: U.S.A.

MRM-70 plug & play receiver module

ACT-707HE Handheld Transmitter Mic + ACT-707TE Bodypack Transmitter

FREQUENCY CODE : 6A Frequency Range: (620~644MHz)

Receiver Displays	0 CH	1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH
Actual Frequency	621.525	622.050	623.025	623.450	626.150	626.675	627.725	628.175
Receiver Displays	8 CH	9 CH	A CH	B CH	C CH	D CH	E CH	F CH
Actual Frequency	635.675	636.100	637.275	637.825	640.400	640.925	642.050	642.475

FREQUENCY CODE : 6B Frequency Range: (644 - 668MHz)

Receiver Displays	0 CH	1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH
Actual Frequency	645.525	646.050	647.025	647.450	650.150	650.675	651.725	652.175
Receiver Displays	8 CH	9 CH	A CH	B CH	C CH	D CH	E CH	F CH
Actual Frequency	659.675	660.100	661.275	661.825	664.400	664.925	666.050	666.475

FREQUENCY CODE : 6C Frequency Range: (668~692MHz)

Receiver Displays	0 CH	1 CH	2 CH	3 CH	4 CH	5 CH	6 CH	7 CH
Actual Frequency	669.525	670.050	671.025	671.450	674.150	674.675	675.725	676.175
Receiver Displays	8 CH	9 CH	A CH	B CH	C CH	D CH	E CH	F CH
Actual Frequency	683.675	684.100	685.275	685.825	688.400	688.925	690.050	690.475

**** Remarks:**

All 16 channels in each "frequency code" are non-interference frequencies and can be used simultaneously at a single installed location.



205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com