

Optoma TX665UTi-3D, TW675UTi-3D Discrete IR Codes

Optoma Code: 32CD

Key	Description	Key code	Key Definition	
			OSD off	OSD On
1	Power on/off toggle	81	Power	-
2	NA	-	-	-
3	Remote mouse emulation UP key	C6	Up	-
4	Remote mouse emulation LEFT key	C8	Left	-
5	Remote mouse emulation ENTER key	CA	Enter	-
6	Remote mouse emulation RIGHT key	C9	Right	-
7	Remote mouse emulation DOWN key	C7	Down	-
8	Remote mouse emulation LEFT click	CB	L	-
9	Remote mouse emulation PAGE UP or UP OSD key	C1	Page up	Up
10	Remote mouse emulation RIGHT click	CC	R	-
11	Source or LEFT OSD key	C3	Source	Left
12	ENTER OSD key	C5	-	Enter
13	Re-Sync or RIGHT OSD key	C4	Re-Sync	Right
14	Remote mouse emulation PAGE DOWN or DOWN OSD key	C2	Down arrow	Down
15	Keystone correction increment	85	Keystone +	-
16	Keystone correction decrement	84	Keystone -	-
17	Decrease speaker volume	8F	Volume -	-
18	Increase speaker volume	8C	Volume +	-
19	Brightness on/off or #1	87	Brightness	1
20	OSD menu on/off or #2	88	Menu	2
21	3D on/off or #3	89	3D	3
22	HDMI or #4	86	HDMI	4
23	Freeze video or #5	8B	Freeze	5
24	Audio/Video Mute or #6	8A	AV mute	6
25	S-Video source or #7	83	S-Video	7
26	VGA source or #8	8E	VGA	8
27	Composite Video source or #9	8D	Video	9



205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com