

Optoma TX612 Discrete IR Codes

Optoma Code: 32CD

Key	Description	Key code	Key Definition	
			OSD off	OSD On
1	UP OSD key	C1	Page up	Up
3	Source or LEFT OSD key	C3	Source	Left
4	Help or ENTER OSD key	C5	Help	Enter
5	Re-Sync or RIGHT OSD key	C4	Re-Sync	Right
6	DOWN OSD key	C2	Down arrow	Down
7	Keystone correction increment	85	Keystone +	-
8	Keystone correction decrement	84	Keystone -	-
9	Decrease speaker volume	8F	Volume -	-
10	Increase speaker volume	8C	Volume +	-
11	Brightness on/off or #1	87	Brightness	1
12	OSD menu on/off or #2	88	Menu	2
13	Zoom on/off or #3	89	ZOOM	3
14	Contrast or #4	86	Contrast	4
15	Freeze video or #5	8B	Freeze	5
16	Audio/Video Mute or #6	8A	AV mute	6
17	S-Video source or #7	83	S-Video	7
18	VGA source or #8	8E	VGA	8
19	Composite Video source or #9	8D	Video	9



205 Westwood Ave, Long Branch, NJ 07740
 Phone: 866-94 BOARDS (26273) / (732)-222-1511
 Fax: (732)-222-7088 | E-mail: sales@touchboards.com