



IR Command Code Protocol of Remote Control

A type: Use in non-interactive models

System Code		6AH	Remote Control ID	
Custom Code		0x6A		
Data Code				
Item	Value	Command Description		
1	0x00	POWER		
2	0x01	INPUT		
3	0x27	MENU		
4	0x14	UP		
5	0x16	LEFT		
6	0x18	RIGHT		
7	0x19	DOWN		
8	0x13	MUTE		
9	0x23	BLANK		
10	0x1F	AUTO		
11	----	LASER		

B type: Use in interactive models

System Code		6AH	Remote Control ID	
Custom Code		0x6A		
Data Code				
Item	Value	Command Description		
1	0x00	POWER		
2	0x01	INPUT		
3	0x27	MENU		
4	0x14	UP		
5	0x16	LEFT		
6	0x18	RIGHT		
7	0x19	DOWN		
8	0x13	MUTE		
9	0x22	Keystone+		
10	0x21	Keystone-		
11	0x0B	VOL+		
12	0x0F	VOL-		
13	0x1F	Auto		
14	0x26	ESC		
15	0x23	BLANK		
16	0x24	STILL		
17	----	LASER		