

DLP® PROJECTOR





Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

# MODEL EIP-WX5000/WX5000L Quick Guide


This Quick Guide shows the basic operation (projector connecting with the computer using an RGB cable). Before using the projector, please read the Owner's Manual carefully.

### **Setup and Projection**

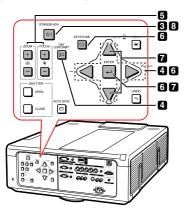

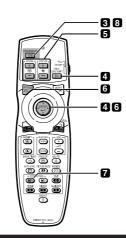

#### 1 Place the projector facing a screen

 

**2.** Connect the projector to the computer and plug the power cord into the AC socket of the projector



3. Remove the lens cap and turn the projector on




Press STANDBY-ON on the projector or on the remote control.

#### **-** Adjust the angle

Adjust the projector angle:

- · Shift the lens horizontally and vertically.
- 1) Press H&V LENS SHIFT on the projector or on the remote control.
- ② Press ▲, ▼, ◀ or ▶ on the projector or the remote control.
- Adjust the projector angle by rotating the adjustment feet.

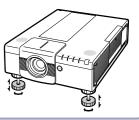

### 5. Adjust the focus and the zoom

- ① Press FOCUS +/- on the projector or on the remote control to adjust the focus.
- 2 Press **ZOOM** +/- on the projector or on the remote control to adjust the zoom.

### **⊙** Correcting the image distortion due to the projection angle

- 1) Press KEYSTONE on the projector or on the remote control.
- 2 Press ENTER on the projector or on the remote control.
- ③ Press ▲, ▼, ◀ or ▶ to move the position for the upper left of the image.
- 4 Press ENTER to set the position.
- (5) Repeat the same procedure with the positions for the upper right, lower right and lower left of the image.
- . When the position of the lower left is set, the correction is made and the display disappears.

### Select the input mode

Press INPUT on the projector or COMPUTER1 on the remote control to select the "COMPUTER1" mode. On the On the remote **INPUT list** 

projector





INPUT □ 1 COMPUTER1 ■2 COMPUTER2 On-screen Display (RGB) **⊟¹** COMPUTER 1 1024 × 768

#### **Switching the Input Mode:**

 
 $\nabla$ 

- When you press INPUT on the projector, the INPUT list appears.
- Press ▲/▼ to switch the INPUT mode and then press ENTER.
- When using the remote control, press COMPUTER1/2, DVI, HDMI, VIDEO or S-VIDEO to switch the input mode.

## 8. Turn the power off

Press STANDBY-ON on the projector or on the remote control. While the confirmation message is displayed, press STANDBY-ON again.

▼ On-screen Display



- You can unplug the power cord even if the projector is operating.
- Even if you unplug the power cord from the AC outlet, the cooling fan continues to run for a while.

