



Lens Installation Instructions

**Installing 0001 Series Lenses on EIKI LC-X4/LA, LC-SX4A, LC-X5/L, LC-X6, LC-SX6
Powerhouse and LC-XT3, LC-UCT3, & LC-HDT10 Theater Projectors**

This document applies to the following lenses:

0001-4260 (368MCZ537-E)

0001-4261 (368MCZ151-E)

TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER

Dissassembly

- 1) Ensure projector power cord is disconnected.
- 2) Remove front cover by taking 2 Phillips screws from top cover then lifting up while applying pressure to front of cover.
- 3) Insert the keyed portion of the adapter ring into the projector and rotate the lens lock lever downward while squeezing together.

Reassembly

- 4) Replace the front cover of the projector removed in step 1, above.
- 5) To focus, gently twist the front of lens. To zoom, loosen thumbscrew and twist knurled ring (zoom lenses only, of course). Re-tighten thumbscrew. CAUTION: Do not twist entire lens out of adapter!



205 Westwood Ave, Long Branch, NJ 07740

Phone: 866-94 BOARDS (26273) / (732)-222-1511

Fax: (732)-222-7088 | E-mail: sales@touchboards.com