



## Lens Installation Instructions

### Installing 0001 Series Lenses on EIKI LC-X50, LC-X60, LC-X50M, & LC-X70 Projectors

This document applies to the following lenses:

**0001-4275 (670MCL1028-E)**

**0001-4276 (670MCL012-E)**

**0001-4277 (670MCZ500-E)**

**0001-4278 (670MCZ087-E)**

**0001-4279 (670MCZ900-E)**

TOOLS REQUIRED: PHILLIPS HEAD SCREWDRIVER

Disassembly:

1. Disconnect unit from power source and place projector with lens facing you. Remove two (2) screws from top cover of lens. Remove cover and set aside for reinstallation.
2. Remove prime lens by lifting the lever on the left side of the prime lens and sliding the lens away from the projector.

Assembly:

1. Ensure that your new lens and its adapter are separate. Position the adapter with the 'up' label in the correct position and slide the adapter into the projector ensuring proper engagement. Rotate the lever counterclockwise until the adapter is securely in place.
2. Replace the front cover of the projector removed in step 2, above.
3. Install the lens by gently rotating clockwise as it is inserted into the adapter.
4. To focus, gently twist the front of lens. To zoom, loosen thumbscrew and twist knurled ring (zoom lenses only, of course). Re-tighten thumbscrew. CAUTION: Do not twist entire lens out of adapter!



**205 Westwood Ave, Long Branch, NJ 07740**  
**Phone: 866-94 BOARDS (26273) / (732)-222-1511**  
**Fax: (732)-222-7088 | E-mail: sales@touchboards.com**