



Lens Installation Instructions

Installing 0001 Series Lenses on EIKI LC-XG100, XG110, XG200 & XG210 Projectors

This document applies to the following lenses:

**0001-4264 (640MCL1028-E)
0001-4269 (640MCZ275-E)
0001-4266 (640MCZ500-E)
0001-4267 (640MCZ087-E)
0001-4268 (640MCZ900-E)**

- 1) Disconnect unit from power source and place projector with lens facing you. Remove lens bezel by gently pressing bezel top down while rotating away from projector front.
- 2) Remove two (2) screws from top cover of lens. Remove cover and set aside for reinstallation.
- 3) Remove prime lens by pressing button at the center-rear of the lens-cover opening and rotating the lens counter-clockwise.
- 4) Ensure that your new lens and its adapter are separate. Locate the slot on the back flange of the adapter and position it at approximately the 10 O'clock position as it is inserted into the projector. Twist the adapter clockwise until the slot is positioned at 12 O'clock and the adapter is locked in place.
- 5) Replace the front cover of the projector removed in step 2, above.
- 6) Replace the bezel removed in step 1, above.
- 7) Install the lens by gently rotating clockwise as it is inserted into the adapter.
- 8) To focus, gently twist front of lens. To zoom, loosen thumbscrew and twist knurled ring. Re-tighten thumbscrew. CAUTION: Do not twist entire lens out of mounting bracket!

