

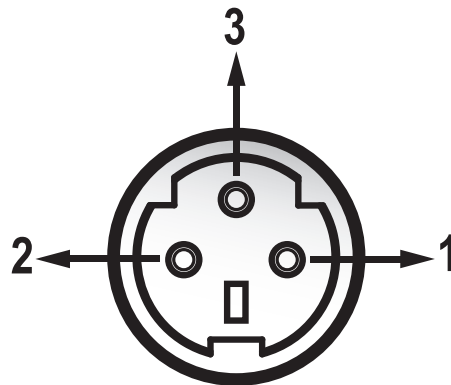


RS232 Commands and Protocol Function List

RS232 Pin Assignments

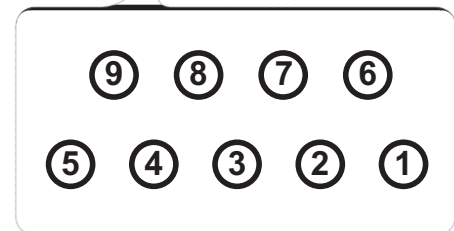

Pin no.	Name	I/O (From Projector Side)
1	TXD	OUT
2	RXD	IN
3	GND	GND

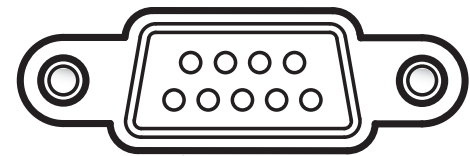

Pin no.	Spec. (from projector side)
1	N/A
2	RXD
3	TXD
4	N/A
5	GND
6	N/A
7	N/A
8	N/A
9	N/A

Appendices

RS232 Protocol Function List

Baud Rate : 9600
 Data Bits : 8
 Parity : None
 Stop Bits : 1
 Flow Control : None
 UART16550 FIFO : Disable
 Projector Return (Pass) : P
 Projector Return (Fail) : F

Note : There is a <CR> after all ASCII commands
 0D is the HEX code for <CR> in ASCII code

XX=01-99, projector's ID, XX=00 is for all projectors

SEND to projector

232 ASCII Code	HEX Code	Function	Description
~XX00 1	7E 30 30 30 30 20 31 0D	Power ON	
~XX00 0	7E 30 30 30 30 20 30 0D	Power OFF	(0/2 for backward compatible)
~XX00 1 ~nnnn	7E 30 30 30 30 20 31 20 a 0D	Power ON with Password	~nnnn = ~0000 (a=7E 30 30 30 30) - ~9999(a=7E 39 39 39 39)
~XX01 1	7E 30 30 30 31 20 31 0D	Resync	
~XX02 1	7E 30 30 30 32 20 31 0D	AV Mute	On
~XX02 0	7E 30 30 30 32 20 30 0D		Off (0/2 for backward compatible)
~XX03 1	7E 30 30 30 33 20 31 0D	Mute	On
~XX03 0	7E 30 30 30 33 20 30 0D		Off (0/2 for backward compatible)
~XX04 1	7E 30 30 30 34 20 31 0D	Freeze	
~XX04 0	7E 30 30 30 34 20 30 0D	Unfreeze	(0/2 for backward compatible)
~XX05 1	7E 30 30 30 35 20 31 0D	Zoom Plus	
~XX06 1	7E 30 30 30 36 20 31 0D	Zoom Minus	
~XX07 1	7E 30 30 30 37 20 31 0D	Up (Pan under zoom)	
~XX08 1	7E 30 30 30 38 20 31 0D	Down (Pan under zoom)	
~XX09 1	7E 30 30 30 39 20 31 0D	Left (Pan under zoom)	
~XX10 1	7E 30 30 31 30 20 31 0D	Right (Pan under zoom)	
~XX12 1	7E 30 30 31 32 20 31 0D	Direct Source Commands	HDMI
~XX12 5	7E 30 30 31 32 20 35 0D		VGA 1
~XX12 7	7E 30 30 31 32 20 35 0D		VGA 1 SCART
~XX12 8	7E 30 30 31 32 20 38 0D		VGA 1 Component
~XX12 9	7E 30 30 31 32 20 39 0D		S-Video
~XX12 10	7E 30 30 31 32 20 31 30 0D		Video
~XX20 1	7E 30 30 32 30 20 31 0D	Display Mode	Presentation
~XX20 2	7E 30 30 32 30 20 32 0D		Bright
~XX20 3	7E 30 30 32 30 20 33 0D		Movie
~XX20 4	7E 30 30 32 30 20 34 0D		sRGB
~XX20 5	7E 30 30 32 30 20 35 0D		User1
~XX20 6	7E 30 30 32 30 20 36 0D		User2
~XX20 7	7E 30 30 32 30 20 37 0D		Blackboard
~XX20 8	7E 30 30 32 30 20 38 0D		Classroom
~XX21 n	7E 30 30 32 31 20 a 0D	Brightness	n = 0 (a=30) ~ 100 (a=31 30 30)
~XX22 n	7E 30 30 32 32 20 a 0D	Contrast	n = 0 (a=30) ~ 100 (a=31 30 30)
~XX23 n	7E 30 30 32 33 20 a 0D	Sharpness	n = 0 (a=30) ~ 31 (a=33 31)
~XX24 n	7E 30 30 32 34 20 a 0D	Color Settings	Red Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX25 n	7E 30 30 32 35 20 a 0D		Green Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX26 n	7E 30 30 32 36 20 a 0D		Blue Gain n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX27 n	7E 30 30 32 37 20 a 0D		Red Bias n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX28 n	7E 30 30 32 38 20 a 0D		Green Bias n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX29 n	7E 30 30 32 39 20 a 0D		Blue Bias n = -50 (a=2D 35 30) ~ 50 (a=35 30)
~XX33 1	7E 30 30 33 33 20 31 0D		Reset
~XX196 n	7E 30 30 31 39 36 20 a 0D	Noise Reduction	n = 0 (a=30) ~ 10 (a=31 30)
~XX35 1	7E 30 30 33 35 20 31 0D	Gamma	Film
~XX35 2	7E 30 30 33 35 20 32 0D		Video
~XX35 3	7E 30 30 33 35 20 33 0D		Graphics
~XX35 4	7E 30 30 33 35 20 34 0D		PC
~XX36 1	7E 30 30 33 36 20 31 0D	Color Temp.	Warm
~XX36 2	7E 30 30 33 36 20 32 0D		Medium
~XX36 3	7E 30 30 33 36 20 33 0D		Cold
~XX37 1	7E 30 30 33 37 20 31 0D	Color Space	Auto
~XX37 2	7E 30 30 33 37 20 32 0D		RGB
~XX37 3	7E 30 30 33 37 20 33 0D		YUV
~XX44 n	7E 30 30 34 34 20 a 0D	Color (Saturation)	n = 0 (a=30) ~ 100 (a=31 30 30)
~XX45 n	7E 30 30 34 35 20 a 0D	Tint	n = 0 (a=30) ~ 100 (a=31 30 30)

Appendices

~XX60 1	7E 30 30 36 30 20 31 0D	Format	4:3		
~XX60 2	7E 30 30 36 30 20 32 0D		16:9		
~XX60 5	7E 30 30 36 30 20 33 0D		LBX		
~XX60 6	7E 30 30 36 30 20 36 0D		Native		
~XX60 7	7E 30 30 36 30 20 37 0D		Auto		
~XX61 n	7E 30 30 36 31 20 a 0D	Overscan		n = 0 (a=30) ~ 10 (a=31 30)	
~XX62 n	7E 30 30 36 32 20 a 0D		Zoom		n = 0 (a=30) ~ 25 (a=32 35)
~XX63 n	7E 30 30 36 33 20 a 0D		H Image Shift		n = -50 (a=2D 35 30) ~ +50 (a=35 30)
~XX64 n	7E 30 30 36 34 20 a 0D		V Image Shift		n = -50 (a=2D 35 30) ~ +50 (a=35 30)
~XX66 n	7E 30 30 36 36 20 a 0D		V Keystone		n = -40 (a=2D 34 30) ~ 40 (a=34 30)
~XX70 1	7E 30 30 37 30 20 31 0D	Language	English		
~XX70 2	7E 30 30 37 30 20 32 0D		German		
~XX70 3	7E 30 30 37 30 20 33 0D		French		
~XX70 4	7E 30 30 37 30 20 34 0D		Italian		
~XX70 5	7E 30 30 37 30 20 35 0D		Spanish		
~XX70 6	7E 30 30 37 30 20 36 0D		Portuguese		
~XX70 7	7E 30 30 37 30 20 37 0D		Polish		
~XX70 8	7E 30 30 37 30 20 38 0D		Dutch		
~XX70 9	7E 30 30 37 30 20 39 0D		Swedish		
~XX70 10	7E 30 30 37 30 20 31 30 0D		Norwegian/Danish		
~XX70 11	7E 30 30 37 30 20 31 31 0D		Finnish		
~XX70 12	7E 30 30 37 30 20 31 32 0D		Greek		
~XX70 13	7E 30 30 37 30 20 31 33 0D		Traditional Chinese		
~XX70 14	7E 30 30 37 30 20 31 34 0D		Simplified Chinese		
~XX70 15	7E 30 30 37 30 20 31 35 0D		Japanese		
~XX70 16	7E 30 30 37 30 20 31 36 0D		Korean		
~XX70 17	7E 30 30 37 30 20 31 37 0D		Russian		
~XX70 18	7E 30 30 37 30 20 31 38 0D		Hungarian		
~XX70 19	7E 30 30 37 30 20 31 39 0D		Czechoslovak		
~XX70 20	7E 30 30 37 30 20 32 30 0D		Arabic		
~XX70 21	7E 30 30 37 30 20 32 31 0D		Thai		
~XX70 22	7E 30 30 37 30 20 32 32 0D		Turkish		
~XX70 23	7E 30 30 37 30 20 32 33 0D		Farsi		
~XX71 1	7E 30 30 37 31 20 31 0D	Projection	Front-Desktop		
~XX71 2	7E 30 30 37 31 20 32 0D		Rear-Desktop		
~XX71 3	7E 30 30 37 31 20 33 0D		Front-Ceiling		
~XX71 4	7E 30 30 37 31 20 34 0D		Rear-Ceiling		
~XX72 1	7E 30 30 37 32 20 31 0D	Menu Location	Top Left		
~XX72 2	7E 30 30 37 32 20 32 0D		Top Right		
~XX72 3	7E 30 30 37 32 20 33 0D		Centre		
~XX72 4	7E 30 30 37 32 20 34 0D		Bottom Left		
~XX72 5	7E 30 30 37 32 20 35 0D		Bottom Right		
~XX73 n	7E 30 30 37 33 20 a 0D	Signal	Frequency	n = -5 (a=2D 35) ~ 5 (a=35) By signal	
~XX74 n	7E 30 30 37 34 20 a 0D		Phase		n = 0 (a=30) ~ 100 (a=31 30 30) By signal
~XX75 n	7E 30 30 37 35 20 a 0D		H. Position		n = 0 (a=30) ~ 100 (a=31 30 30) By timing
~XX76 n	7E 30 30 37 36 20 a 0D		V. Position		n = 0 (a=30) ~ 100 (a=31 30 30) By timing
~XX77 n	7E 30 30 37 37 20 aabbcc 0D	Security	Security Timer	Month/Day/Hour n = mm/dd/hh mm = 00 (aa=30 30) ~ 12 (aa=31 32) dd = 00 (bb=30 30) ~ 30 (bb=33 30) hh = 00 (cc=30 30) ~ 24 (cc=32 34)	
~XX78 1	7E 30 30 37 38 20 31 0D		Security Settings	Enable	
~XX78 2	7E 30 30 37 38 20 32 0D		Disable		
~XX79 n	7E 30 30 37 39 20 a 0D	Projector ID		n = 00 (a=30 30) ~ 99 (a=39 39)	
~XX80 1	7E 30 30 38 30 20 31 0D	Mute	On		
~XX80 0	7E 30 30 38 30 20 30 0D		Off (0/2 for backward compatible)		
~XX81 n	7E 30 30 38 31 20 a 0D	Volume		n = 0 (a=30) ~ 10 (a=31 30)	
~XX82 1	7E 30 30 38 32 20 31 0D	Logo	Optoma		
~XX82 2	7E 30 30 38 32 20 32 0D		User		
~XX83 1	7E 30 30 38 33 20 31 0D	Logo Capture			
~XX100 1	7E 30 30 31 30 30 20 31 0D	Source Lock	On		
~XX100 0	7E 30 30 31 30 30 20 30 0D		Off (0/2 for backward compatible)		
~XX100 3	7E 30 30 31 30 30 20 33 0D	Next Source			
~XX101 1	7E 30 30 31 30 31 20 31 0D	High Altitude	On		
~XX101 0	7E 30 30 31 30 31 20 30 0D		Off (0/2 for backward compatible)		
~XX102 1	7E 30 30 31 30 32 20 31 0D	Information Hide	On		
~XX102 0	7E 30 30 31 30 32 20 30 0D		Off (0/2 for backward compatible)		
~XX103 1	7E 30 30 31 30 33 20 31 0D	Keypad Lock	On		
~XX103 0	7E 30 30 31 30 33 20 30 0D		Off (0/2 for backward compatible)		
~XX104 1	7E 30 30 31 30 34 20 31 0D	Background Color	Blue		
~XX104 2	7E 30 30 31 30 34 20 32 0D		Black		
~XX104 3	7E 30 30 31 30 34 20 33 0D		Red		
~XX104 4	7E 30 30 31 30 34 20 34 0D		Green		
~XX104 5	7E 30 30 31 30 34 20 35 0D		White		

Appendices

~XX192 1	7E 30 30 31 39 32 20 31 0D		12V Trigger	On
~XX192 0	7E 30 30 31 39 32 20 30 0D			Off (0/2 for backward compatible)
~XX105 1	7E 30 30 31 30 35 20 31 0D	Advanced	Direct Power On	On
~XX105 0	7E 30 30 31 30 35 20 30 0D			Off (0/2 for backward compatible)
~XX106 n	7E 30 30 31 30 36 20 a 0D		Auto Power Off (min)	n = 0 (a=30) ~ 180 (a=31 38 30) step:5
~XX107 n	7E 30 30 31 30 37 20 a 0D		Sleep Timer (min)	n = 0 (a=30) ~ 995 (a=39 39 39) step:5
~XX114 1	7E 30 30 31 31 34 20 31 0D		Power Mode(Standby)	Eco.(≤1W)
~XX114 0	7E 30 30 31 31 34 20 30 0D			Active (0/2 for backward compatible)
~XX109 1	7E 30 30 31 30 39 20 31 0D		Lamp Reminder	On
~XX109 0	7E 30 30 31 30 39 20 30 0D			Off (0/2 for backward compatible)
~XX110 1	7E 30 30 31 31 30 20 31 0D		Brightness Mode	Bright
~XX110 0	7E 30 30 31 31 30 20 30 0D			STD (0/2 for backward compatible)
~XX111 1	7E 30 30 31 31 31 20 31 0D		Lamp Reset	Yes
~XX111 0	7E 30 30 31 31 31 20 30 0D			No (0/2 for backward compatible)
~XX112 1	7E 30 30 31 31 32 20 31 0D	Reset		Yes
~XX99 1	7E 30 30 39 39 20 31 0D	RS232 Alert Reset	Reset System Alert	
~XX210 n	7E 30 30 32 30 30 20 n 0D	Display message on the OSD		n: 1-30 characters

SEND to emulate Remote

~XX140 1	7E 30 30 31 34 30 20 31 0D		Power	
~XX140 3	7E 30 30 31 34 30 20 33 0D		Remote Mouse Up	
~XX140 4	7E 30 30 31 34 30 20 34 0D		Remote Mouse Left	
~XX140 5	7E 30 30 31 34 30 20 35 0D		Remote Mouse Enter	
~XX140 6	7E 30 30 31 34 30 20 36 0D		Remote Mouse Right	
~XX140 7	7E 30 30 31 34 30 20 37 0D		Remote Mouse Down	
~XX140 8	7E 30 30 31 34 30 20 38 0D		Mouse Left Click	
~XX140 9	7E 30 30 31 34 30 20 39 0D			Mouse Right Click
~XX140 10	7E 30 30 31 34 30 20 31 30 0D		Up/Page +	
~XX140 11	7E 30 30 31 34 30 20 31 31 0D		Left/Source	
~XX140 12	7E 30 30 31 34 30 20 31 32 0D		Enter (for projection MENU)	
~XX140 13	7E 30 30 31 34 30 20 31 33 0D		Right/Re-SYNC	
~XX140 14	7E 30 30 31 34 30 20 31 34 0D		Down/Page -	
~XX140 15	7E 30 30 31 34 30 20 31 35 0D		Keystone +	
~XX140 16	7E 30 30 31 34 30 20 31 36 0D		Keystone -	
~XX140 17	7E 30 30 31 34 30 20 31 37 0D		Volume -	
~XX140 18	7E 30 30 31 34 30 20 31 38 0D		Volume +	
~XX140 19	7E 30 30 31 34 30 20 31 39 0D		Brightness (1)	
~XX140 20	7E 30 30 31 34 30 20 32 30 0D		Menu (2)	
~XX140 21	7E 30 30 31 34 30 20 32 31 0D		Zoom (3)	
~XX140 22	7E 30 30 31 34 30 20 32 32 0D		HDMI (4)	
~XX140 23	7E 30 30 31 34 30 20 32 33 0D		Freeze (5)	
~XX140 24	7E 30 30 31 34 30 20 32 34 0D		AV Mute (6)	
~XX140 25	7E 30 30 31 34 30 20 32 35 0D		S-Video (7)	
~XX140 26	7E 30 30 31 34 30 20 32 36 0D		VGA (8)	
~XX140 27	7E 30 30 31 34 30 20 32 37 0D		Video (9)	

SEND from projector automatically

232 ASCII Code	HEX Code	Function	Projector Return	Description
when Standby/Warming/Cooling/Out of Range/Lamp fail/ Fan Lock/Over Temperature/Lamp Hours Running Out/Cover Open			INFOn	n : 0/1/2/3/4/6/7/8/9 = Standby/Warming/Cooling/Out of Range/Lamp fail/ Fan Lock/Over Temperature/Lamp Hours Running Out/Cover Open

READ from projector

232 ASCII Code	HEX Code	Function	Projector Return	Description
~XX121 1	7E 30 30 31 32 31 20 31 0D	Input Source Commands	OKn	n : 0/1/2/3/4 = None/VGA1/S-Video/Video/HDMI
~XX122 1	7E 30 30 31 32 32 20 31 0D	Software Version	OKdddd	dddd: FW version
~XX123 1	7E 30 30 31 32 33 20 31 0D	Display Mode	OKn	n : 0/1/2/3/4/5/6/7/8 = None/Presentation/Bright/Movie/sRGB/User1/User2/ Blackboard/Classroom
~XX124 1	7E 30 30 31 32 34 20 31 0D	Power State	OKn	n : 0/1 = Off/On
~XX125 1	7E 30 30 31 32 35 20 31 0D	Brightness	OKn	
~XX126 1	7E 30 30 31 32 36 20 31 0D	Contrast	OKn	
~XX127 1	7E 30 30 31 32 37 20 31 0D	Aspect Ratio	OKn	n : 0/1/2/3/4 = 4:3/16:9/LBX/Native/AUTO
~XX128 1	7E 30 30 31 32 38 20 31 0D	Color Temperature	OKn	n : 0/1/2 = Warm/Medium/Cold
~XX129 1	7E 30 30 31 32 39 20 31 0D	Projection Mode	OKn	n : 0/1/2/3 = Front-Desktop/ Rear-Desktop/ Front-Ceiling/ Rear-Ceiling
~XX150 1	7E 30 30 31 35 30 20 31 0D	Information	OKabbbbccddddd	a : 0/1 = Off/On bbbb: LampHour cc: source 00/01/02/03/04 = None/VGA1 /S-Video/Video/HDMI dddd: FW version e : Display mode 0/1/2/3/4/5/6/7/8 None/Presentation/Bright/Movie/sRGB/User1/User2/ Blackboard/Classroom
~XX151 1	7E 30 30 31 35 31 20 31 0D	Model name	OKn	n:1=EH1020
~XX108 1	7E 30 30 31 30 38 20 31 0D	Lamp Hours	OKbbbb	bbbb: LampHour
~XX108 2	7E 30 30 31 30 38 20 31 0D	Cumulative Lamp Hours	OKbbbbbb	bbbbbb: (5 digits) Total Lamp Hours