 


## Vaddio™ CeilingVIEW™ Visualizer Power/Video and Control Pinouts

### Power/Video Connection - RJ-45 on CeilingVIEW Back Box

 
- | #  | Pins            |
|----|-----------------|
| 1) | Power (+)       |
| 2) | Power GND       |
| 3) | Video GND       |
| 4) | Y (luminance)   |
| 5) | Video GND       |
| 6) | C (chrominance) |
| 7) | Video GND       |
| 8) | Composite Video |

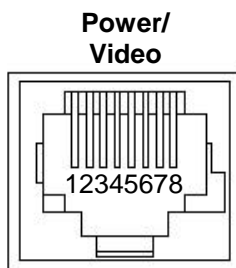

Vaddio CeilingVIEW Visualizer

### RS-232 IN Connection - RJ-45 on CeilingVIEW Back Box



- | #  | Pins                              |
|----|-----------------------------------|
| 1) | DTR (Sony® Daisy chain to DSR)    |
| 2) | DSR (Sony Daisy chain from DTR) * |
| 3) | Unused                            |
| 4) | Unused                            |
| 5) | Unused                            |
| 6) | Digital GND                       |
| 7) | RXD (from TXD of control source)  |
| 9) | TXD (to RXD of control source)    |

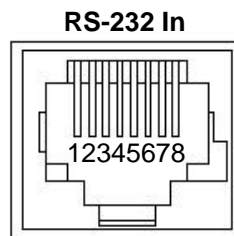




\*Note: CeilingVIEW Visualizer can only be in the last position in a Sony control daisy chain.

### Power/Video Connection - RJ-45 on Quick-Connect™ Box

  - | #  | Pins            |
|----|-----------------|
| 1) | Power (+)       |
| 2) | Power GND       |
| 3) | Video GND       |
| 4) | Y (luminance)   |
| 5) | Video GND       |
| 6) | C (Chrominance) |
| 7) | Video GND       |
| 8) | Composite Video |

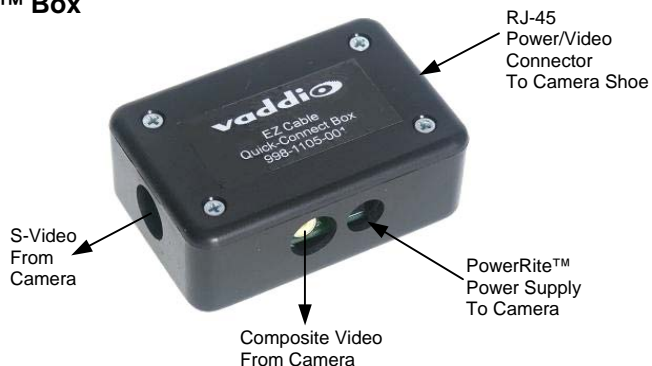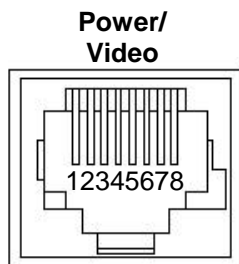

### EZCamera™ Control Adapter – DB-9F to RJ-45F - Front view and side view

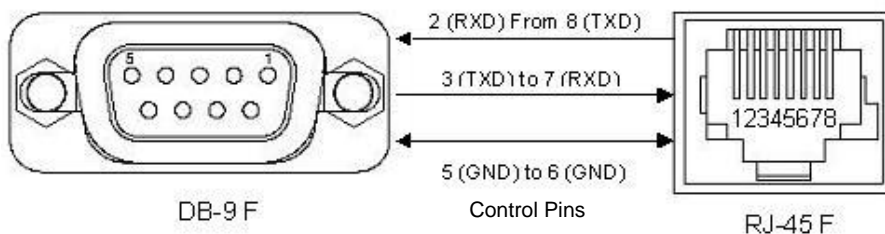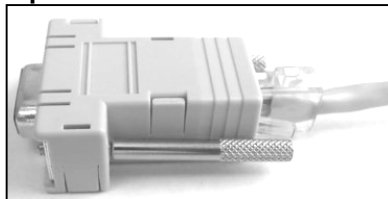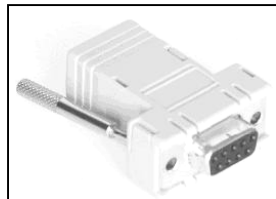   

#### Other Pins Required for Daisy Chain Control Standard

Sony Control Daisy Chain	
DB-9F	RJ-45F
Pin 4	Pin 1 – DTR
Pin 6	Pin 2 – DSR

#### Canon Control Daisy Chain

DB-9F	RJ-45F
Pin 8	Pin 3 – CTS
Pin 7	Pin 4 – RTS

The EZCamera Control Adapter is provided completely wired. Pin 1 on the DB-9 and Pin 5 on the RJ-45F are not used. All others are wired as specified above.