

 
**2 Shelf 18 x 32
Cart w/ Cabinet
Instructions**

02/04/15


Parts List

Tools Required


- Rubber Mallet

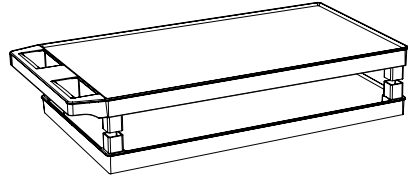

A x1
B x1

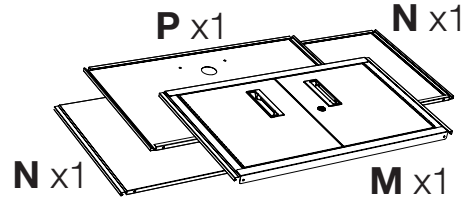 


K x2

 


E x4

 F x2

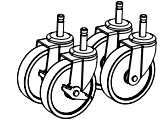


G x2

 
1

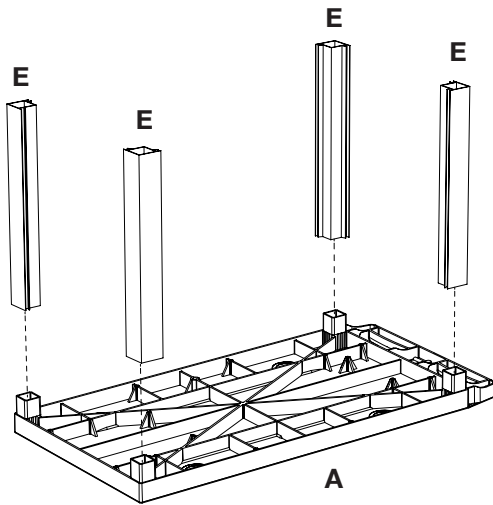


2

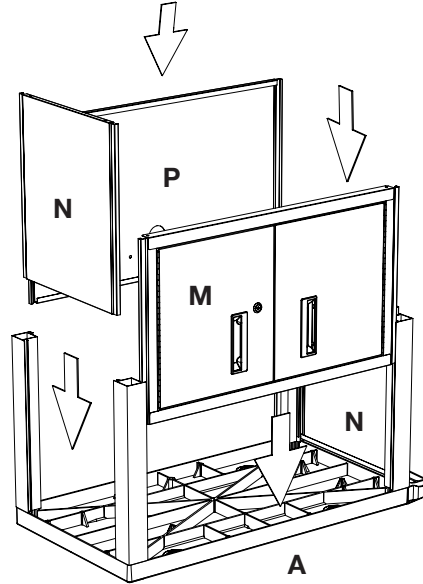 


3

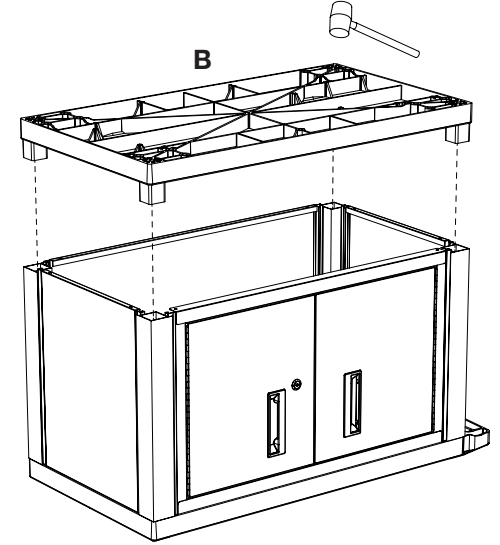 

4

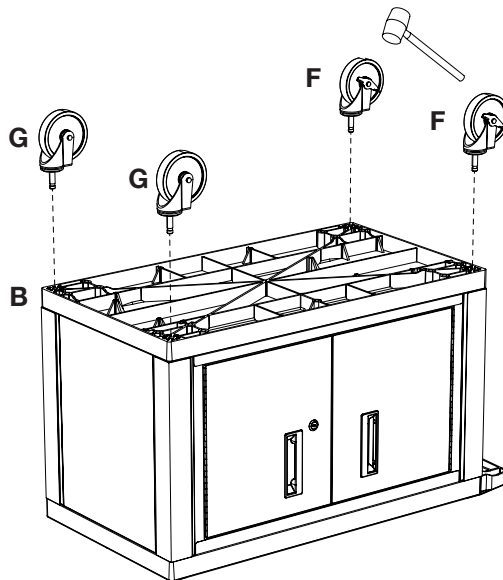 


5

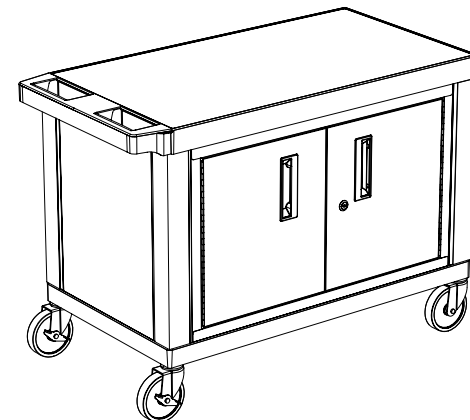 


Metal / Plastic Cart LCD Instructions

Tools Required


 
Phillips Screwdriver
8mm Wrench

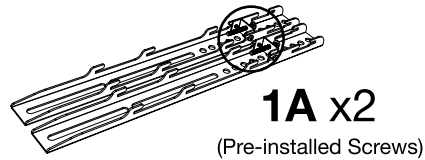

1 x2

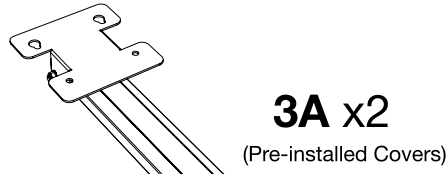 


3 x1

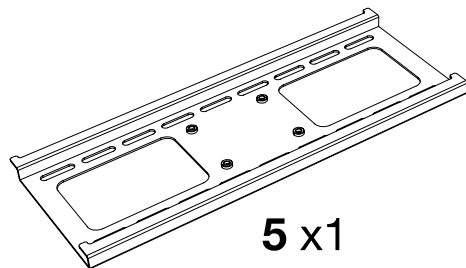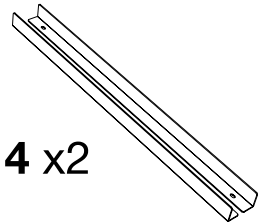  

Requires Completed
Cart Before Assembly

 Lock Casters
Before Assembly

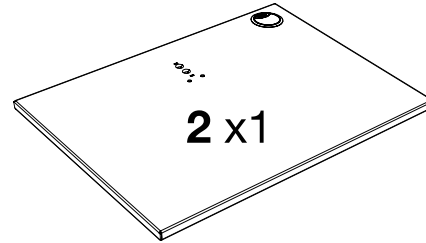

Parts List

 
 
 
LCD Component List

- 1** - TV brackets x2
- 2** - Base plate x1
- 3** - Aluminium tube x1
- 4** - L support bar x2
- 5** - TV Mount x1


- G** - M6x20 tube screw x2
- H1** - M6 metal washer x2
- H2** - Tube spacer x1
- I** - M8 metal washer x2
- J** - M8x15 allen screw x2
- K** - M8x25 allen screw x2
- L** - M8 locking nut x2
- M1** - M5x15 allen screw x4
- M2** - M5x50 allen screw x4
- N** - M5 metal washer x4
- O** - Allen wrench x1
- P** - TV screw spacer x4
- Q** - Angle bracket x1




Hardware Bag

- A** - M5x16 TV screw x4
- B** - M6x16 TV screw x4
- C** - M8x35 TV screw x4
- D** - M6 metal washer x4
- E** - M6x35 allen screw x4
- F** - M6 metal washer x4

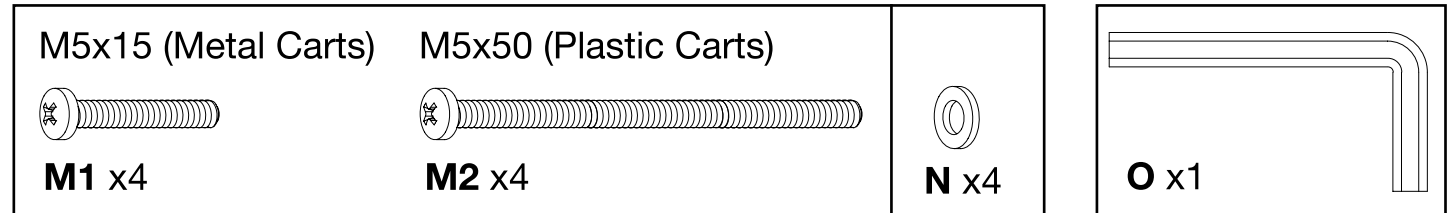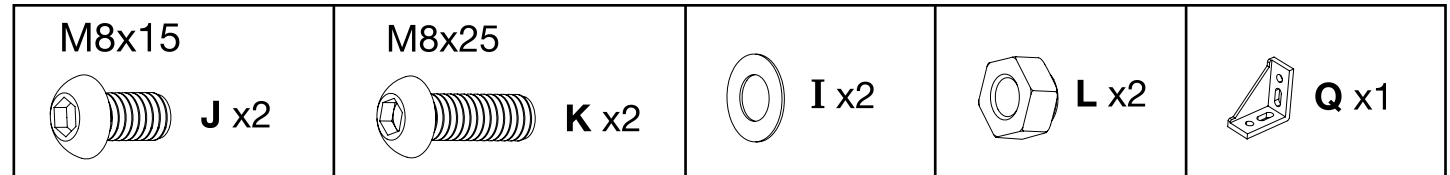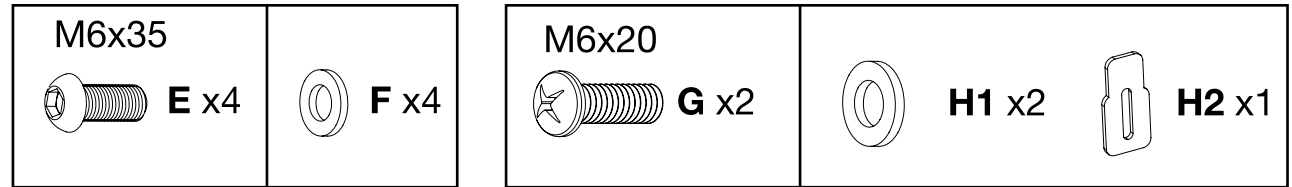

TV Mounting Hardware

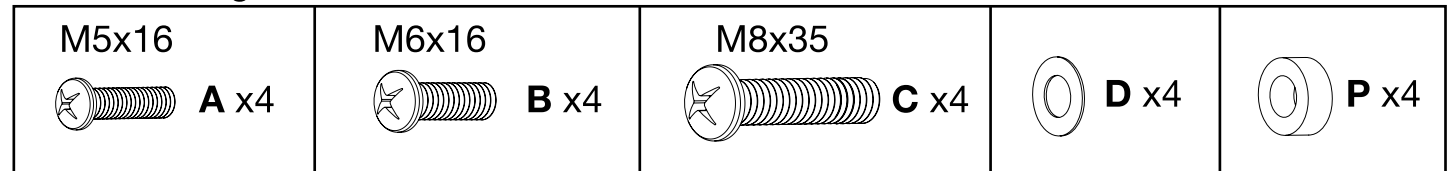 

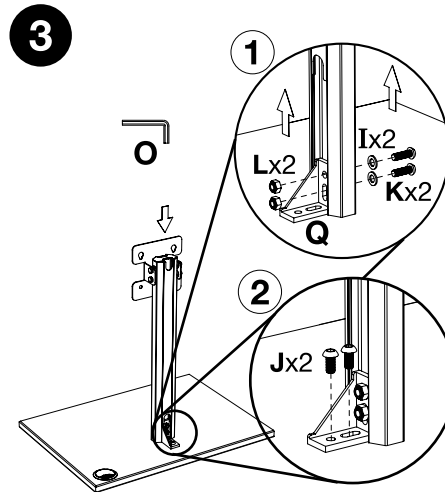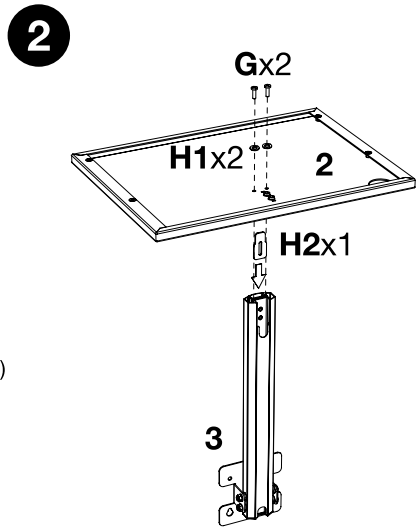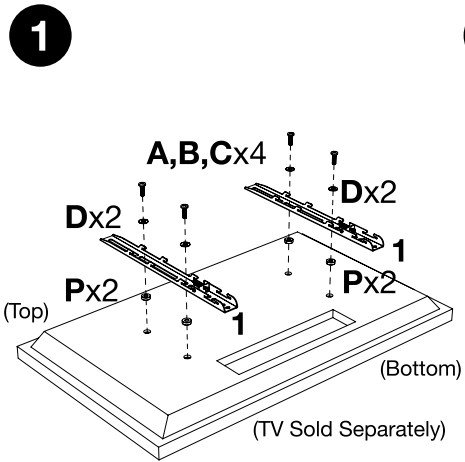   

Do not fully tighten until all screws are into place.

