

To Order Call Toll Free:
1-877-805-3377



BTM-Series Battery Temperature Monitor Models

Common BTM-Series part numbers listed below. Custom part numbers available upon request, see below.

| 12 Volt Common Configurations | | | |
|-------------------------------|---------------------|---------------|----------------|
| Jar / Cell Voltage | Jar / Cell Quantity | Total Voltage | Part # |
| 12V | 1 | 12VDC | BTM-1C |
| 8V | N/A | N/A | N/A |
| 6V | 2 | 12VDC | BTM-2C |
| 4V | 3 | 12VDC | BTM-3C |
| 2V | 6 | 12VDC | BTM-6C |
| 1.2V | 10 | 12VDC | BTM-10C |

| 24 Volt Common Configurations | | | |
|-------------------------------|---------------------|---------------|----------------|
| Jar / Cell Voltage | Jar / Cell Quantity | Total Voltage | Part # |
| 12V | 2 | 24VDC | BTM-2C |
| 8V | 3 | 24VDC | BTM-3C |
| 6V | 4 | 24VDC | BTM-4C |
| 4V | 6 | 24VDC | BTM-6C |
| 2V | 12 | 24VDC | BTM-12C |
| 1.2V | 20 | 24VDC | BTM-20C |

| 48 Volt Common Configurations | | | |
|-------------------------------|---------------------|---------------|----------------|
| Jar / Cell Voltage | Jar / Cell Quantity | Total Voltage | Part # |
| 12V | 4 | 48VDC | BTM-4C |
| 8V | 6 | 48VDC | BTM-6C |
| 6V | 8 | 48VDC | BTM-8C |
| 4V | 12 | 48VDC | BTM-12C |
| 2V | 24 | 48VDC | BTM-24C |
| 1.2V | 40 | 48VDC | BTM-40C |

| 120 Volt Common Configurations | | | |
|--------------------------------|---------------------|---------------|-----------------|
| Jar / Cell Voltage | Jar / Cell Quantity | Total Voltage | Part # |
| 12V | 10 | 120VDC | BTM-10C |
| 8V | 15 | 120VDC | BTM-15C |
| 6V | 20 | 120VDC | BTM-20C |
| 4V | 30 | 120VDC | BTM-30C |
| 2V | 60 | 120VDC | BTM-60C |
| 1.2V | 100 | 120VDC | BTM-100C |

| 240 Volt Common Configurations | | | |
|--------------------------------|---------------------|---------------|-----------------|
| Jar / Cell Voltage | Jar / Cell Quantity | Total Voltage | Part # |
| 12V | 20 | 240VDC | BTM-20C |
| 8V | 30 | 240VDC | BTM-30C |
| 6V | 40 | 240VDC | BTM-40C |
| 4V | 60 | 240VDC | BTM-60C |
| 2V | 120 | 240VDC | BTM-120C |
| 1.2V | 200 | 240VDC | BTM-200C |

| 480 Volt Common Configurations | | | |
|--------------------------------|---------------------|---------------|-----------------|
| Jar / Cell Voltage | Jar / Cell Quantity | Total Voltage | Part # |
| 12V | 40 | 480VDC | BTM-40C |
| 8V | 60 | 480VDC | BTM-60C |
| 6V | 80 | 480VDC | BTM-80C |
| 4V | 120 | 480VDC | BTM-120C |
| 2V | 240 | 480VDC | BTM-240C |
| 1.2V | N/A | N/A | N/A |

CREATE YOUR OWN PART NUMBER by simply adding your number of jars or cells in the part number BTM-XXC. Maximum of 250 jars / cells per monitor.

For example, if you require 99 temperature sensors then your part number would be BTM-99C.