


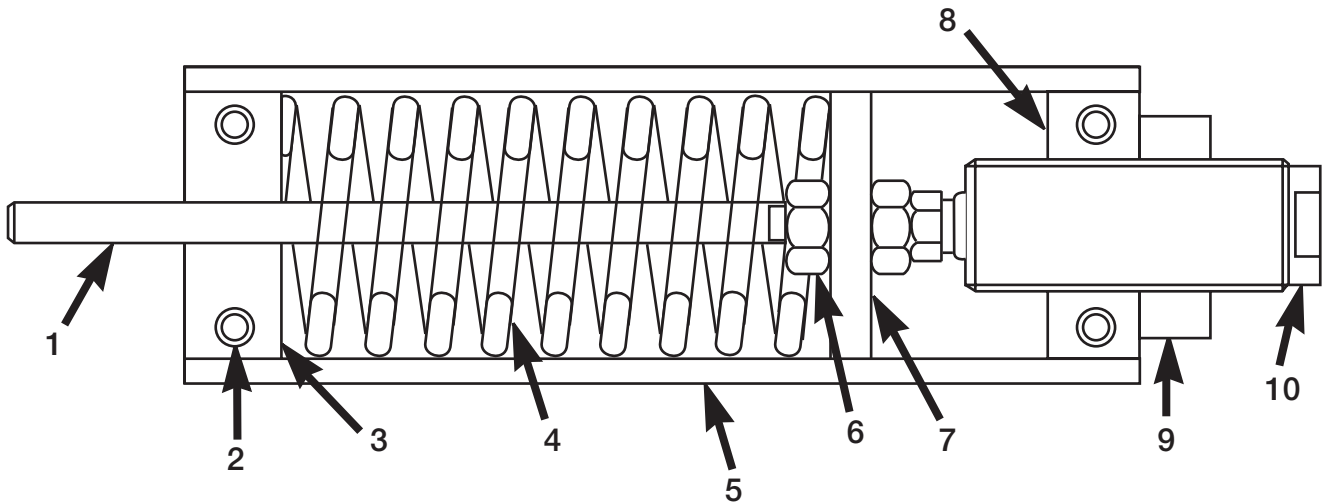

⚠ WARNING

The ACM-1 is assembled under spring pressure.
Improper disassembly may result in serious personal
injury and/or equipment damage.

Repair Parts List

Item	Part Number	Qty.	Description
1	40-24-06	1	Indicating Rod
2	40-24-03	1	Spring Pin
3	40-24-07	1	End Plate Rod
4	40-24-02	1	Die Spring
5	40-24-09	1	Housing
6	B1001120	1	1/4-20 Hex Nutg
7	402404	1	Special Washer
8	40-24-08	1	Cylinder End Plate
9	★ B1001503	1	3/4-16 Hex Nut
10	CY56750	1	Threaded Cylinder

